



V1C-V ClimaRad Ventura with Sensor Instruction Manual

[Home](#) » [climaRAD](#) » V1C-V ClimaRad Ventura with Sensor Instruction Manual 

Contents

- [1 V1C-V ClimaRad Ventura with Sensor](#)
- [2 Operating principle ClimaRad Ventura V1C-V](#)
- [3 Operating the ClimaRad Ventura V1C-V](#)
- [4 Operating the ClimaRad Round](#)
- [5 Function Keys](#)
- [6 Messages](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



V1C-V ClimaRad Ventura with Sensor



Operating principle ClimaRad Ventura V1C-V

The ClimaRad Ventura V1C-V is fitted with sensors for CO , humidity, indoor and outdoor temperature. These measure the air quality and determine the ventilation needed per room automatically. The device is fitted with convectors which enable the unit to ventilate, heat and cool (if needed).

Operating the ClimaRad Ventura V1C-V




The control panel is situated on the front of the device. You can find the function buttons and notifications of the panel in question on page 2 of this instruction manual.

The ClimaRad Ventura V1C-V in your room is optimally configured by the installer and functions fully automatically. That is why we only explain the function buttons that are relevant for you during daily use.




Operating the ClimaRad Round

You can set the desired temperature yourself by turning the ring. Turn left for lower temperatures, turn right for higher temperatures.




Function Keys

-  Automatic control: The ventilation, heating and cooling system in the room are automatically controlled by your ClimaRad Ventura, which functions based on CO measurements and temperature.
-  Temperature: You can set the desired temperature yourself using the + and – on your control panel in order to heat up or optionally cool down the room.
-  Pause: Use this function if you want to stop ventilating temporarily. After a period of 4 hours, your


ventilation unit will reset to automatic control.

-  Ventilation (manual): This function allows you to activate the ventilation function of your device. You can then use the + and – on your control panel to configure the ventilation speed. After a period of 8 hours, your device will reset to automatic control.
-  No function.
-  Child lock: This key combination locks your control panel. Press the indicated buttons simultaneously for 4 seconds. If you want to unlock the device, repeat this action.

Messages

-  Child lock: The child lock is activated.
-  Error: A fault has occurred. Please contact your installer or housing corporation.
-  Dirty filter: Replace the air filters or contact your installer or housing corporation After replacing the filters, press the + and – buttons for 6 seconds.

Documents / Resources

	<p>ClimaraRad V1C-V ClimaraRad Ventura with Sensor [pdf] Instruction Manual V1C-V ClimaraRad Ventura with Sensor, V1C-V, ClimaraRad Ventura with Sensor, Sensor, ClimaraRad Ventura, Ventura</p>
---	--