



ClimaRad Ventilation Unit Instruction Manual


[Home](#) » [climaRAD](#) » ClimaRad Ventilation Unit Instruction Manual 

ClimaRad Ventilation Unit Instruction Manual



What is the purpose of a ClimaRad ventilation unit?

A ClimaRad ventilation unit is a device that ensures an optimum air quality through ventilation and air filtration. The unit also recovers heat, so as to minimise heat loss. The ClimaRad 1.1 consists of a ventilation unit with a tilting radiator.

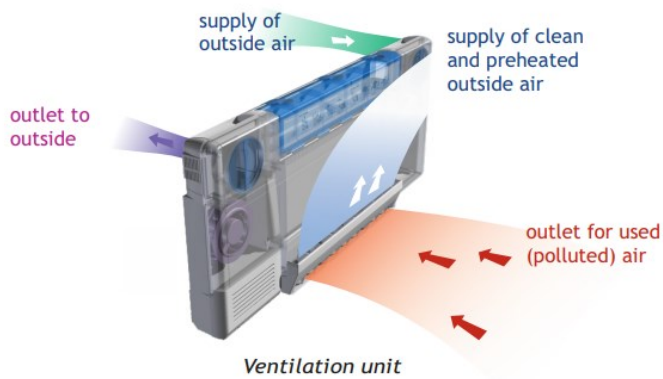

Contents

- 1 Use of the ClimaraRad ventilation unit
- 2 Functions already set up for you
- 3 Other function keys
- 4 Messages
- 5 Switch off
- 6 Documents / Resources
- 7 Related Posts

Use of the ClimaraRad ventilation unit

You can operate your radiator, as usual, with the radiator button on the side of the radiator. The ClimaraRad ventilation unit is operated with the control panel on top of the radiator.



Control Panel Type I



Control Panel Type II

The installer will have adjusted the settings of the ClimaraRad to the room in which it is installed. That is why we only explain the function keys you will need for daily use.

Functions already set up for you



The air quality is standard set at 1000 ppm. This means that the ventilation unit starts to ventilate (air quality indicator light flashes) the moment this limit is exceeded. If you want to customise the settings you can adjust the air quality with the + and – buttons.

 
Other function keys



Basic ventilation. Ventilates the air for 15 minutes every hour, regardless of the air quality. Starts when the button is pressed for 4 seconds. Repeat this when you want the basic ventilation to end. You can use this function, for instance, if the room hasn't been used for a few weeks and you want to increase the ventilation, such as after a holiday.



Pause. Will pause the ventilation for 1 hour. The valves will close. This ends as soon as you start a different function. Use this function, for instance, to temporarily block out any outside odours.



Maximum ventilation. Maximum ventilation for 30 minutes. This ends as soon as you start a different function. Use this function to remove unpleasant odours, such as smoke or cooking smells.



Ventilation with cooler outside air. Ventilates for 8 hours with outside air if this outside air is at least 2 degrees colder than the inside air. Ends automatically after 8 hours. Use this function, for instance, at night to reduce the temperature a few degrees in a warmed-up room.



Child lock. Locks the control panel. Press the indicated buttons simultaneously for 4 seconds. Ends as soon as you repeat this action.

Messages



Child lock. The child lock is activated.



Error. A fault has occurred. Please contact your installer



Dirty filter. Replace the air filters or contact your installer. After replacing the filters, press the + and – buttons for 4 seconds.



Basic ventilation. The basic ventilation is activated.



Manual control. Manual control is activated. The ventilation is not controlled automatically.



Outside temperature higher than within. The ClimaRad will temporarily not ventilate because the outside temperature is higher than the inside temperature (warning light flashes).

Switch off

Press 4 seconds simultaneously



Press 6 seconds simultaneously






Press simultaneously



Lübeckstraat 25 – 7575 EE – Oldenzaal – NL – info@climarad.com www.climarad.co.uk – tel. +31 541 358130

Documents / Resources

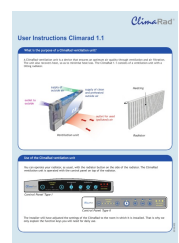	<p>ClimaRad Ventilation Unit [pdf] Instruction Manual Ventilation Unit, Ventilation, Unit</p>
---	---