

Clint H6 Multi Streaming Adapter DAB+



Clint H6 Multi Streaming Adapter DAB+ User Manual

[Home](#) » [Clint](#) » Clint H6 Multi Streaming Adapter DAB+ User Manual 

Contents

- [1 Clint H6 Multi Streaming Adapter DAB+](#)
- [2 Product Information](#)
- [3 Important Safety Instructions](#)
- [4 Package contents](#)
- [5 Connecting H6 to your existing Hi-Fi](#)
- [6 Specifications](#)
- [7 Panels Overview](#)
- [8 Remote control](#)
- [9 Main Menu](#)
- [10 Internet radio](#)
- [11 Modes](#)
- [12 Spoify Connect](#)
- [13 My mediaU](#)
- [14 Information-Center](#)
- [15 AirMusic Control App](#)
- [16 Configuration](#)
- [17 Service and support](#)
- [18 Documents / Resources](#)
 - [18.1 References](#)

Clint®

Clint H6 Multi Streaming Adapter DAB+



Product Information

Specifications

- **Model:** H6 (CLINT-H6WiFi)
- **Main unit:** H6
- Power supply included
- RCA connection cable included
- Remote control included
- DC IN = 5 Volt DC

Frequently Asked Questions

- **Q:** Can I use this product with an extension cord?
 - **A:** No, to prevent fire or shock hazard, do not use this plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.
- **Q:** Can I expose this appliance to rain or moisture?
 - **A:** No, to prevent fire or shock hazard, do not expose this appliance to rain or moisture.
- **Q:** How many favorite preset stations can I save?
 - **A:** You can save up to 250 favorite preset stations.
- **Q:** How many history stations can be saved?
 - **A:** You can save up to 10 history stations.

Important Safety Instructions

CAUTION

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user of the presence of insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts are inside. Refer servicing to qualified personnel.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1. Read the instruction manual.
2. Keep the instruction manual.
3. Read all warnings.
4. Follow the instruction manual.
5. Do not use this device near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices
9. (including amplifiers) that produce heat.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.
11. Only use attachments / accessories specified by the manufacturer.
12. Unplug this device during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
15. Do not overload wall outlet. Use only power source as indicated.
16. Use replacement parts as specified by the manufacturer.

Package contents

Please make sure that the following contents are included in the package:

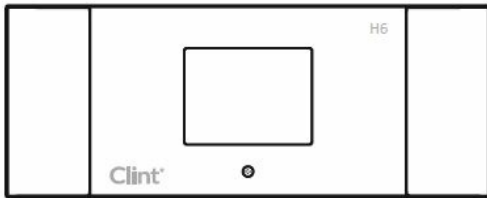

1. H6 - Main unit



2. Power supply



3. RCA connection Cable




5. H6 User Manual



4. Remote control

Connecting H6 to your existing Hi-Fi

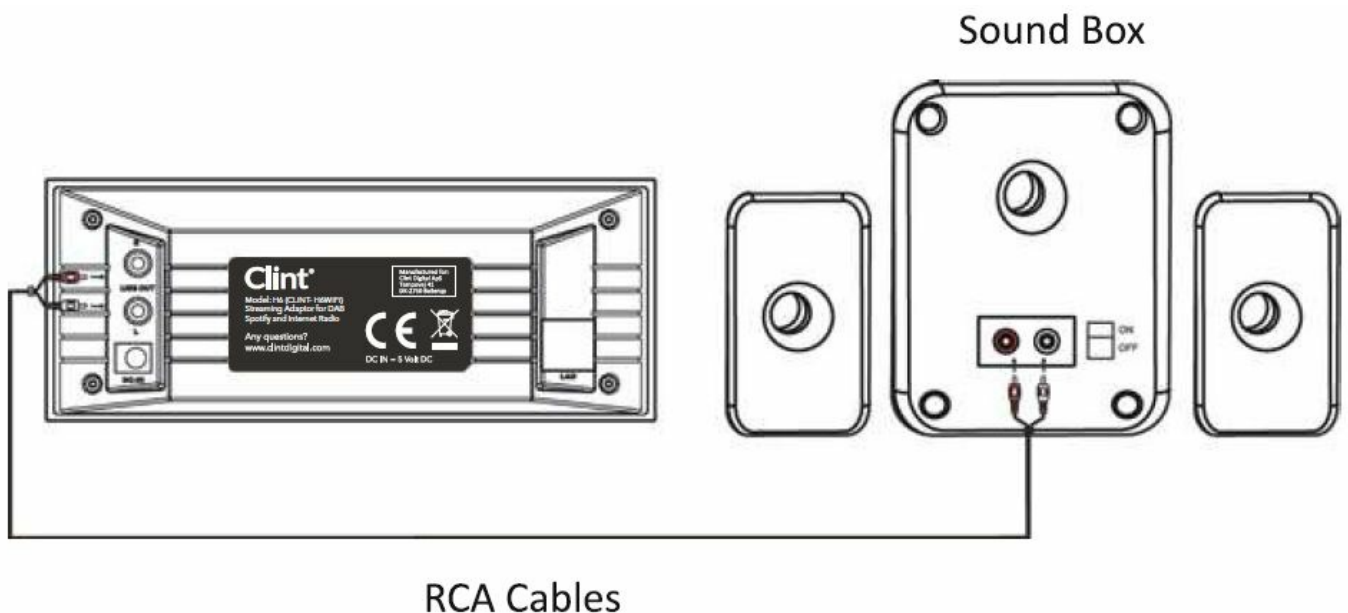


Specifications

Connectivity	Wireless Access Point
Data transfer rates	54 Mbit / s (WLAN)
WLAN security	WPA and WPA2-AES 64/128-Bit WEP
Audio Format Decoder	Real/Mp3/WMA/Flac/Ogg. 32 Kbit/s~320 Kbit/s
Signal to Noise Ratio	>90 dB
Display	240X320 Color display
Inputs/Outputs	Line Out (RCA socket) DC input
Languages	English / Deutsch / Español / Français / Português / Nederlands / Italiano / Русский / Svenska / Norsk bokmål / Dansk / Magyar / Český / Slovenský / Polski / Türkçe / Suomi
Power Supply	Input: AC 110-240 V (50-60 Hz) Output: DC 5 V/500 mA
Remote control	25 keys
Dimensions	190 (L) x 73 (B) x 45 (H) mm

Specifications is subject to change without any notice.

Panels Overview

 Front panel

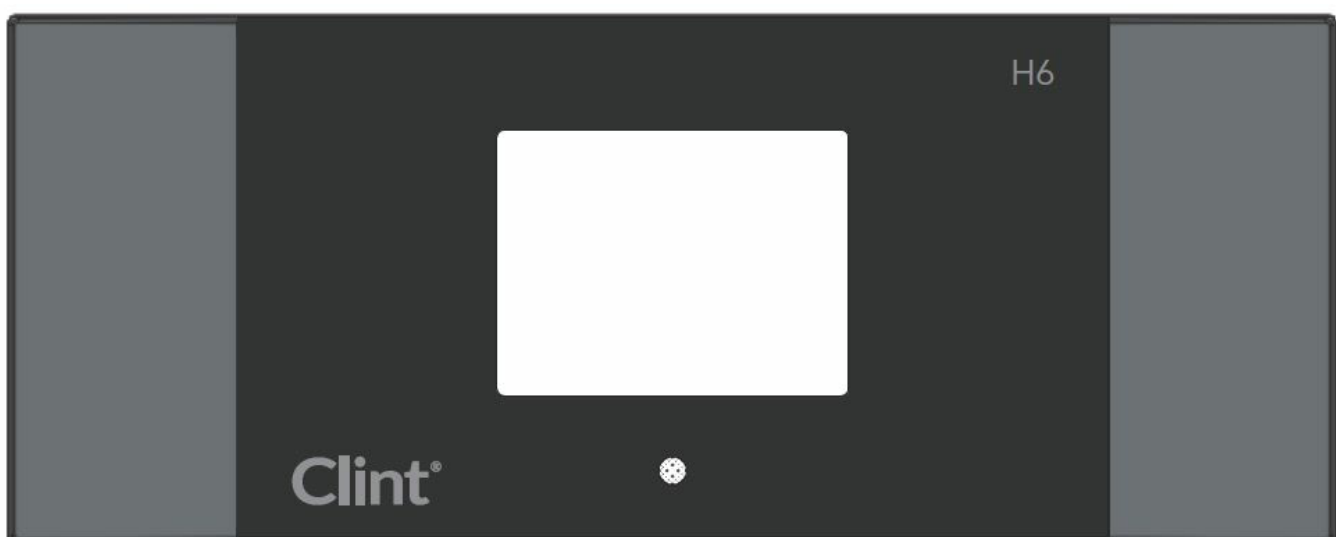

- There is no keypad or buttons on your H6. All is working entirely from the enclosed remote control.

 
- The design is made simple and user – friendly so the navigation is handled completely by the Remote control.







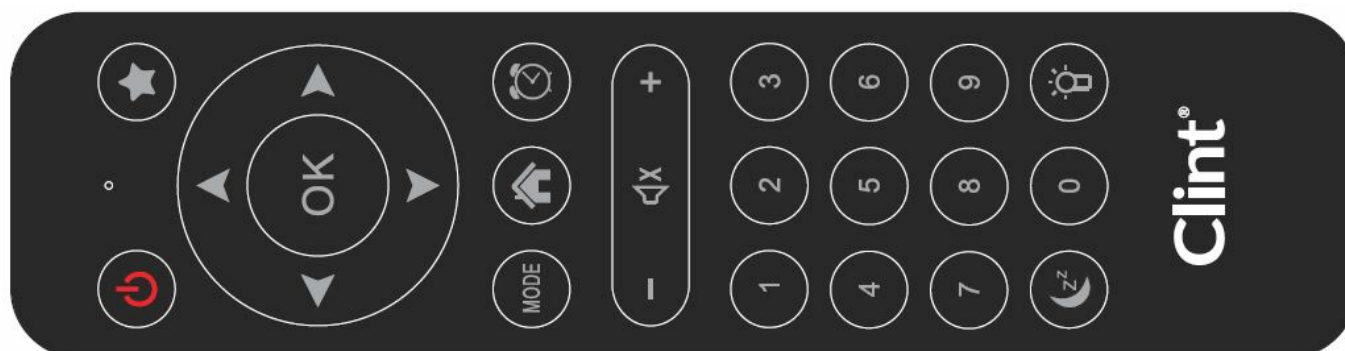

Back panel









- Connectors on this current model are: 2 x Stereo RCA & power connector Connect the RCA (phono) cable to your existing audio system.


Remote control



	Power button	Press to switch the device between standby and on mode.
	Menu button	Press to return to the main menu.
	Volume- button	Press to decrease the output volume.
	Mute button	Press to mute the audio output.
	Volume+ button	Press to increase the output volume.
	Sleep button	Press to select a preset amount of time after which the device shuts off.
	Alarm button	Press to turn the alarm clock on/off.
	Light button	Press to select a light mode.
MODE	Mode button	Press to enter the menu that the key define (Enter into Configuration>Key to define)
OK	Enter button	Press to confirm your selection of a menu option.

	Up navigation button	Press to scroll up through menu items. Press to enter text.
	Down navigation button	Press to scroll down through menu items. Press to enter text.
	Left navigation button	Press to go back to the previous menu
	Right navigation button	Press to confirm your selection of an option and go to the submenu.
	Preset button 0~9	Press to recall a preset radio station.
	Favorite button	Press to display your favorites list.

 Main Menu

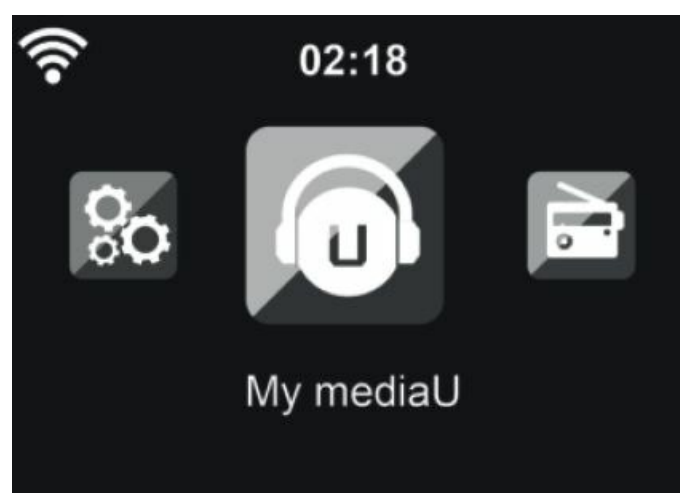

- In the main menu you can select the following modes: Internet Radio, Media Center, FM, DAB/DAB+, Spoify connect, Informaion Center and Configuraion ,My media U, Local Radio.

Internet radio

My Favorite

- Create a list of your favorite preset staions. It supports 250 favorite entries including staion and folder.
- During the staion playing screen, press and hold on ★ buton to save the staion as my favorite. You may replace the previous saved staion to the new one.
- You can also save the staion to your favorites while scrolling through the staion list.




- When the staion is highlighted you can press ➤ button to enter this menu where you can add the station to your favorites.
- If the selected station has been saved, you cannot save it again.
- Under the presentation list, move to your station, press OK to listen. You may also press ➤ to enter. its submenu to Delete, Shit Up/Down along the list, Rename or Play.

Radio Station / Music



- Stations are categorized into Global Top 20, Genre Country/Location and Highlight.

- Enter to continue the subcategories and choose the station to listen.
- For each station, press OK to play directly. You may press  to enter its submenu – you can add to Favorite, Auto Scan or Play.
- When you choose Auto Scan, the radio introduces every station in the list by playing it for 30 seconds. This is stopped when every station is played or you press the OK button

History

- Shows you a list of last listened stations. It can save up to 10 history stations.

Service



- **Search radio station-** Enter your keyword to search radio station from the list.



- **Add new radio station-** Enter into Add New Radio Station. the radio station name is required to input. Press OK button to confirm after input done. the added stations will be stored in My favorite. Note that the maximum character of the station name is 250






Modes

FM Radio Mode

 
- FM radio mode receives analogue radio from the FM band and displays RDS(Radio Data System)information about the station and show(where broadcasted).
- To enter FM mode, Press MENU<FM<OK

Selecting stations




- The first time you select FM radio.H6 is set to the bottom of the FM band.
- Press  to search for FM stations. The frequency display starts to run up/down as H6 scans the FM band. It stops when it has received a station.
- You may press  on the remote control to tune station manually. Each step moves 0.05MHz.
- Press and hold the  on the remote control or the device to save the station.
- You can save up to 20 stations. Press , then press  on the remote control or the device to choose the saved station. Or choose from the number pad on the remote control a preset station directly.
- Alternatively, you can let the system scan ALL stations for you by pressing OK, the searched stations will automatically be stored in preset station list.

DAB/DAB+ Radio mode

- DAB radio mode receives DAB/DAB+ digital radio and displays information about the station. To enter DAB mode, select [Menu] > DAB/ DAB+.
- To receive additional information about the currently played song, press  on the remote.

Scanning for stations

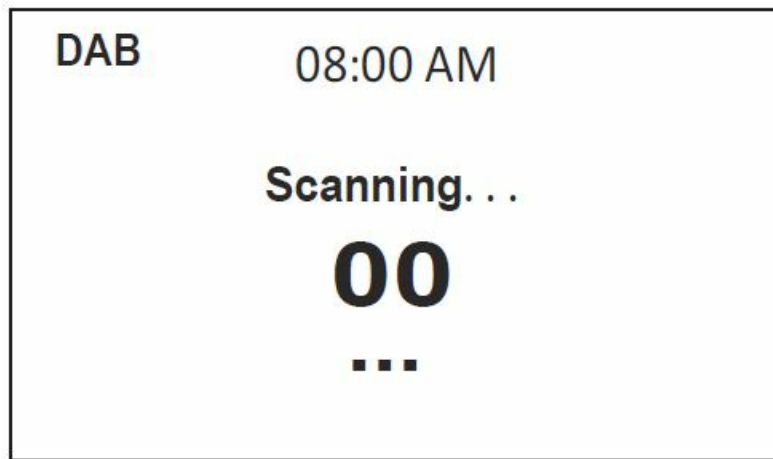

- The first time you select DAB radio mode, the H6 automatically performs a full scan to see what stations are available.
- Once the scan is complete, the radio shows a list of available stations.

Saving Favorite stations

- Press and hold the ★ on the remote control to save the station.
- You can save up to 20 stations. Press ★, then press ▲/▼ on the remote control to choose the saved station.

Spoify Connect


- You can stream from Spoify music App directly to Clint H6 (require a Spoify Premium subscription), because your Clint H6 has implemented the Spoify Connect streaming protocol.
- Read more about Spoify Connect here: <https://www.spoify.com/connect>

Licenses:

- The Spoify Software is subject to third party licenses found here: www.spoify.com/connect/third-party-licenses

My mediaU

Display and playback your own mediaU station list on the mediaU server. Set your account first.

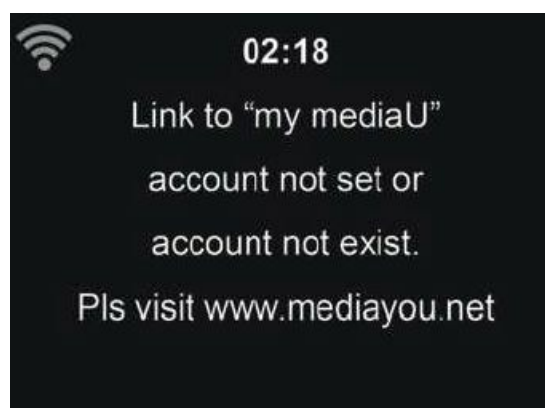

To activate your own station list, follow the steps below:

1. Access <http://www.mediayou.net/>
2. Join my mediaU membership
3. Login to the website
4. Enter the wireless MAC addresses of H6 to the mediaU website. This information can be obtained the information Center>system information>wireless info
5. After successfully configuring, you are able to save and view your own mediaU station playlist(s), Username and password are not required to enter to H6.
6. If there are different accounts stored in H6, you can choose the one you currently use under the Configuration menu.
7. Each time you have made any updates on the playlist from the website, go to Configuration

Media-Center



UPnP

- If you have set up shared media, you should see the shared media from UPnP.
- If you have more than one computer sharing media, the alternatives are listed. Select the shared media you want to play.

Tips

- The radio can only read the track of file names with less than 40 characters.
- And the characters should be in European language. If you encounter failure of reading the track under UPnP mode, you may try to rename the file.
- However, if the track is still unable to play, you can try converting the file to a different format.

 
My Playlist

- You can create a playlist of favorite music from UPnP. When you play the music, press and hold OK to save it into My playlist.

Clear My Playlist

- You can delete all tracks from the playlist

Information-Center

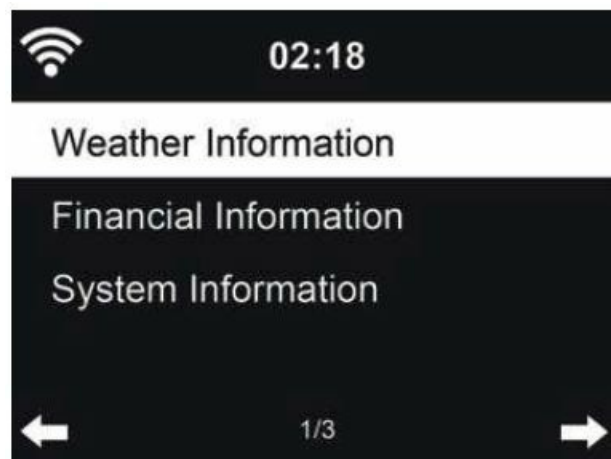

Weather information



- There are weather information and forecasts for 5000 cities. Select the country and then the city for the weather details.
- Press ◀/▶ to see the weather forecasts.
- It is able to display the weather information on the standby mode. On the weather information page, press OK to set the city to displaying on the standby mode. Then turn on the weather display.

Financial Service



- View the stock index from around the world.

System Information

- Check out the version of the system, and the details of connected network.
- The information includes MAC address which you are required to fill in when registration of my mediaU membership.

AirMusic Control App


The H6 can be controlled with your smartphone via WiFi. It is recommended to use the AirMusic Control App. Additionally to controlling the radio, the app is able to play the smartphone's local music files on the H6.

The app itself is available for Android and iOS, it can be downloaded from here:

Android:



Apple iOS:

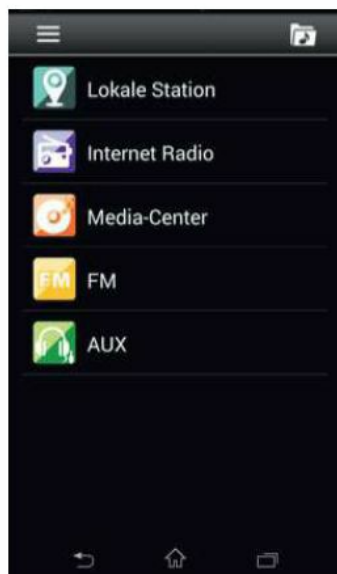


Configuration

Time Display




- Choose the style of clock during standby mode: Analog or Digital.

 Manage my mediaU

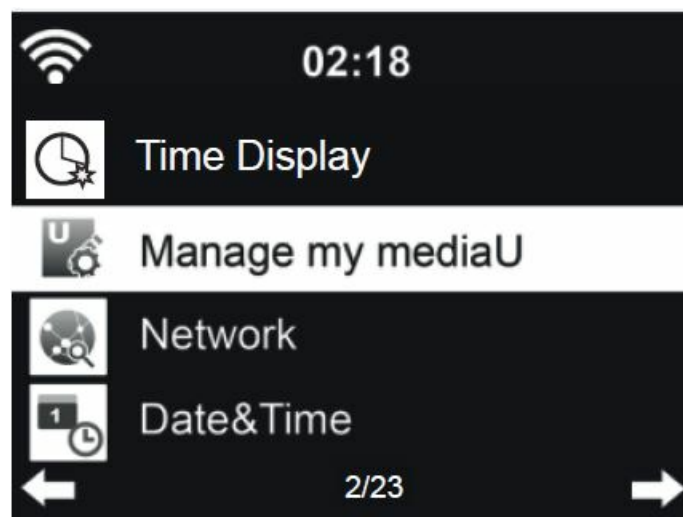


- When it is enabled, My mediaU will be shown on the main menu. If various mediaU accounts exist in the H6, Select the default login account in here. Refer to chapter 15 for more information of mediaU account setup.

 
Network

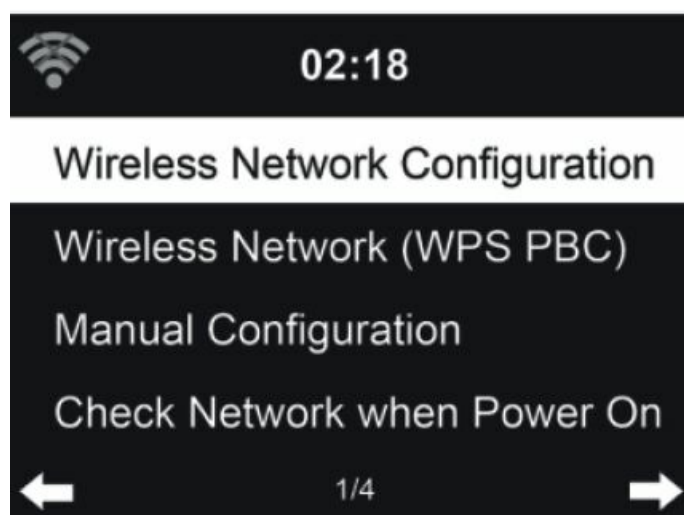


Wireless Network Configuration

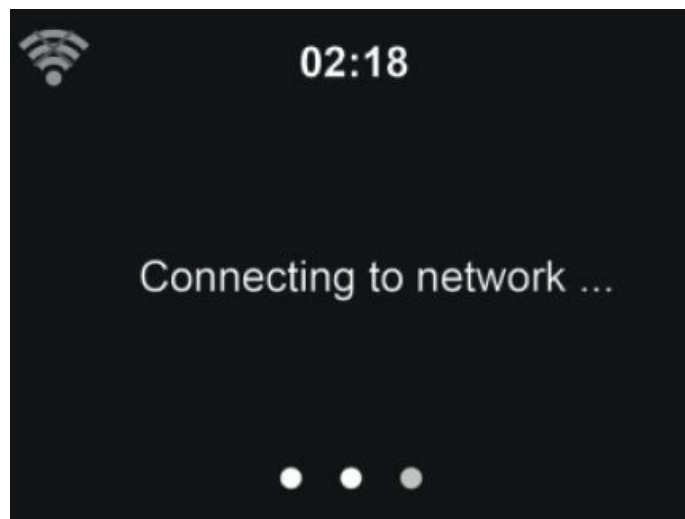

- Enable / disable WiFi network. When you enable the WiFi network, the system will automatically connect to the network.

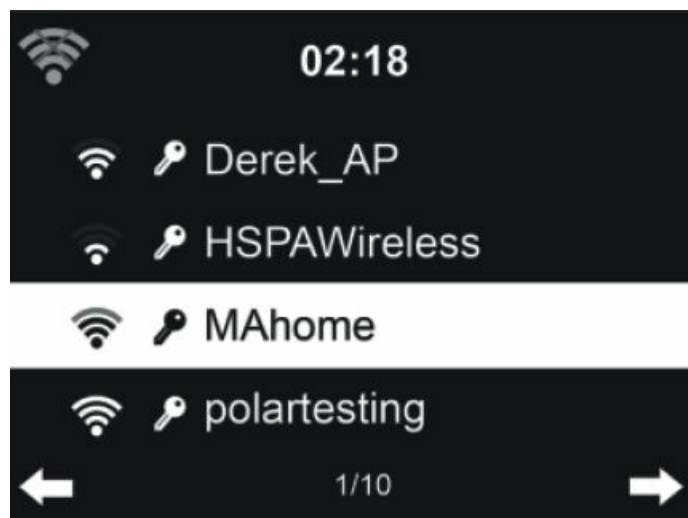


- Select your required AP.

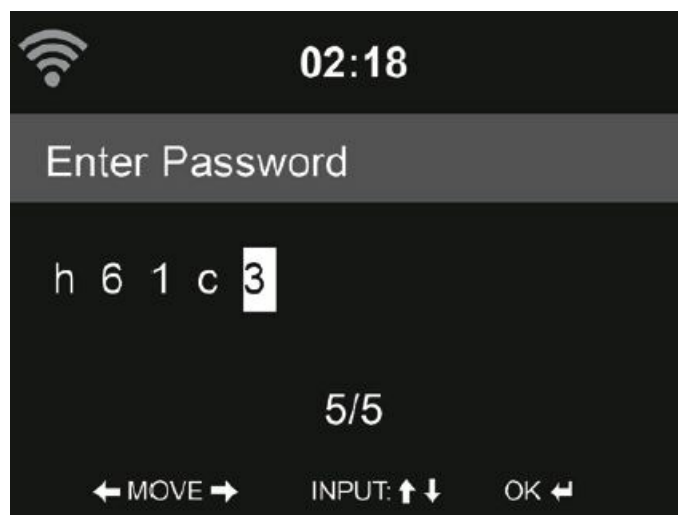

- Enter WEP or WPA code to connect the WiFi. If it is accidentally pressed ► to move a redundant entry, press ◀ to correct.

Wireless Network (WPS)

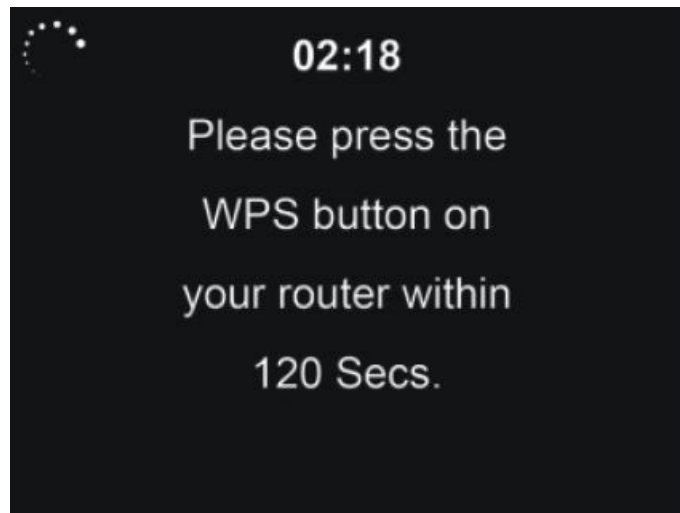

If you are using a router with WPS/QSS button, you may set up the network connection simple via WPS function. Enter it and go to press the WPS/QSS button on your router within 120 seconds. The connection between the router and the H6 will then be configured automatically.

Manual Configuration

You can choose DHCP (which IP is assigned automatically) or manually input IP address for a wireless network connection.

When you select manual setting for wired connection, the following have to be entered:


1. SSID (the name of Access Point);
2. IP Address;
3. Subnet Mask;
4. Default Gateway;
5. Preferred DNS Server;
6. Alternate DNS Server.

You may choose (Manage) a specific network if you have setup more than one network connection within an area.

Check Network when Power On

- “Enable / disable WiFi network”:
 - When you enable the WiFi network, the system will automatically search the available AP. Select your required AP. Enter WEP or WPA code to connect the WiFi.
 - If the wireless network connection is not existed or failed, the icon at the top left corner will be gray color.

Date & Time

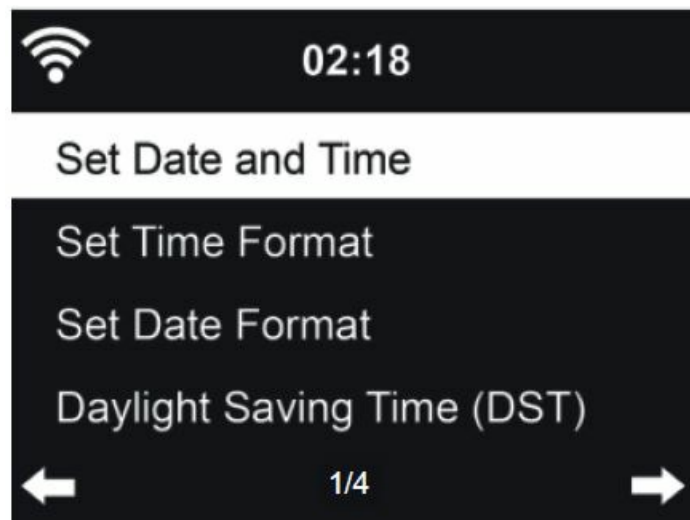

Press Set Date and Time between Manual Setup and Auto Detect. When Auto Detect is chosen, the time is determined automatically, therefore deleted point 4 (DST)

- Setup the date and time
- Set time format display as 12 Hour or 24 Hour(default). Only for manual setup is required.
- Set the date format in the position of YY(Year), MM(month) and DD(day)-YY/MM/DD (default) or MM/DD/YY.
- Turn on/off(default) the Daylight Saving Time(DST). Available only on manual setup

With a wireless network connected, GMT (+00:00) time is a time reference of time being. Add or deduce the hour according to your time zone when you set the time.

Alarm




There are three independent alarms – 2 alarms of absolute time being (Alarm 1 and Alarm2) and 1 alarm for relative time being (NAP Alarm). Press Alarm on the remote control to enter this menu directly. The first two alarms are similar to the normal alarm, turn on then set the time and set it alarms every day, once or every specific day of week. Choose Sound to set the sound to Beep, Melody or Radio

Note that the alarm source is from the last listened or preset Internet radio if Alarm Sound is set to Radio. It can only set one station for both alarms. When it reaches the alarm time, the unit connects to the Internet if the set network is available. Therefore there may be some delay from the alarm to the radio play. If no network is connected in one minute, the alarm will change to Melody automatically.

After Alarm NAP is set, it alarms once in 5/10/20/30/60/90/120 minutes depending on which one you have set. You may choose Alarm Volume to configure the volume of the alarms.


When the alarm(s) is/are set, there will be a clock icon at the top of the display. The clock icon with alarm time will also clearly display on the standby mode screen. During alarm, press any key to enter snooze mode. It will alarm again in 5 minutes. Press the STANDBY key to stop the alarm.

Timer

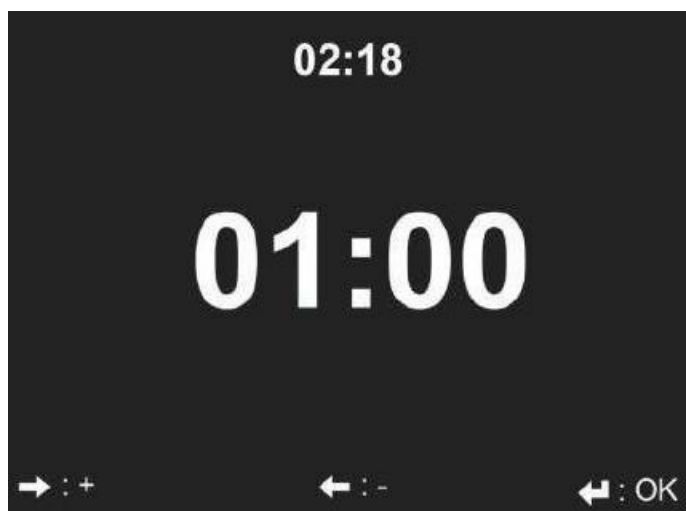

- Press ◀/▶ to set the timer, press OK to start. The timer will count down and beep sound when it reaches 00:00. To cancel the timer, enter the timer screen and press OK again

 Language

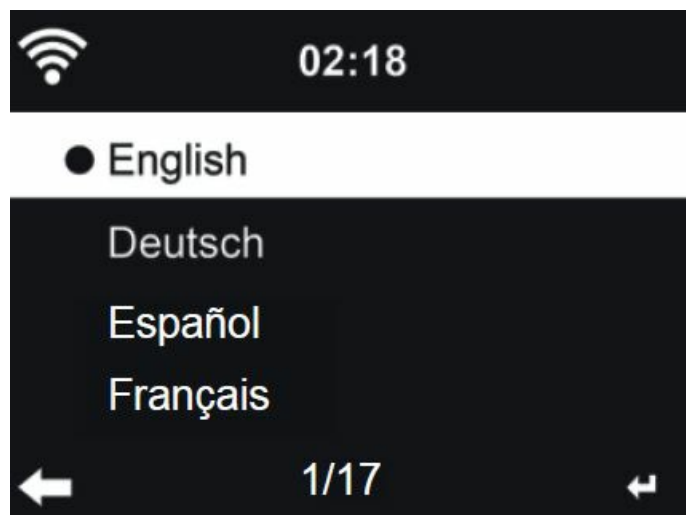

- **Select the OSD language:** English / Deutsch / Español / Français / Português / Nederlands / Italiano / Русский / Svenska / Norsk bokmål / Dansk / Magyar / Český / Slovenský / Polski / Türkçe / Suomi

Dimmer




- Configure the brightness of the backlight on the display. If you select Power Saving you can select the level to which the display is dimmed down when the radio enters the Standby mode or when the radio gets no key input for 15 seconds.
- The Turn On option keeps the display illumination always on. If you select it you can choose how bright the display shall be.

See below table for how the Dimmer settings will affect the screen illumination:

Choice	Brightness level	On Playing	On Standby
Power Saving	As you set	After 15s, the screen brightness switches to Power saving brightness level you set	After 15s, the screen brightness switches to Power power-saving brightness level you set
Turn On	As you set	The screen stays always on the set brightness level	After 15s, the screen brightness switches to Power saving brightness level you set

Display

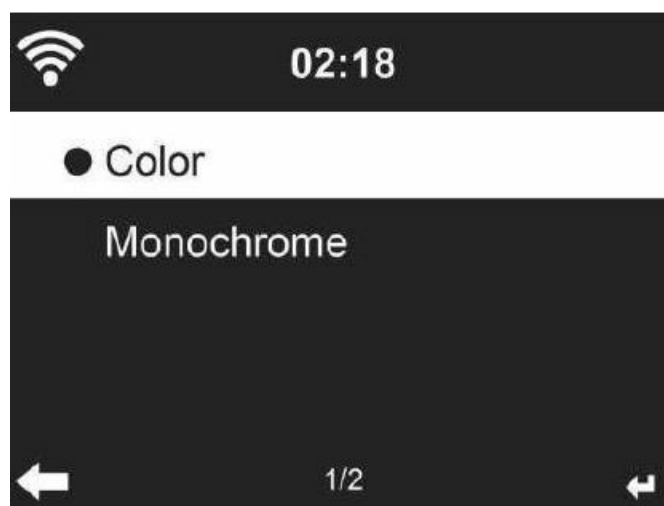


- Choose the style of display: Color or Monochrome

Power Management

- Choose the power management timer (5/15/30mins) to set the duration of the radio to switch to the standby mode automatically when no network connection is available.
- Choose “Turn off” to ignore the power management function.

Sleepimer

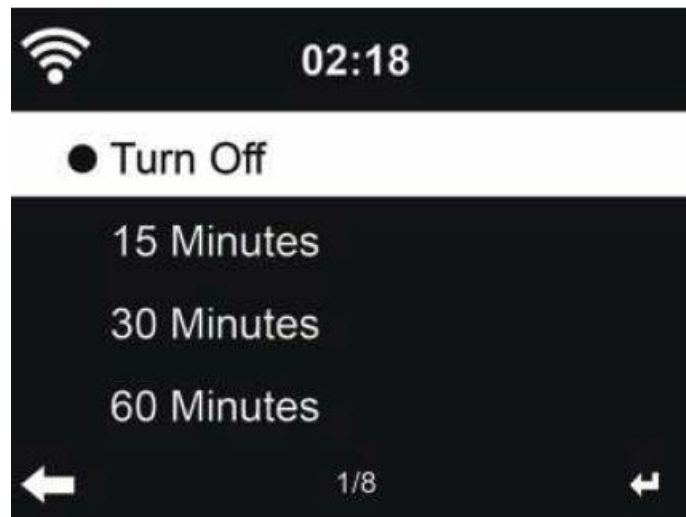


- Turn off or set the sleep ime to 15/30/60/90/120/150/180 minutes. Once the ime is set, there will be a bed icon with the remaining minutes at the top right corner.
- The H6 will shut down once the ime runs out. Press Sleep on the remote control for the shortcut of this function.

Buffer



- Configure the buffer time of the music playback,2/4/8 seconds.

 Weather

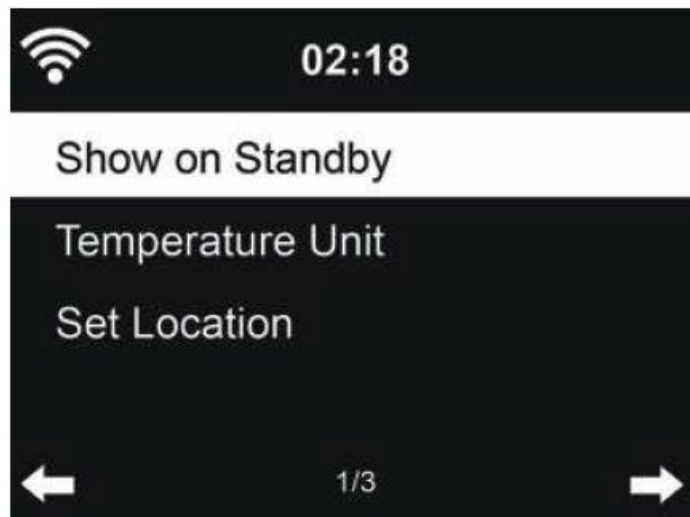


- H6 is able to display current weather information (refer to 17.1) under standby mode.
- Turn on Standby Display and set Temperature Unit (°C or °F) to get the weather displayed at the standby mode.
- When it is turned on, the display will switch between time and weather while being in standby mode.

FM Setup


- Choose Mono/Stereo and seek/stereo threshold.

Local Radio Setup

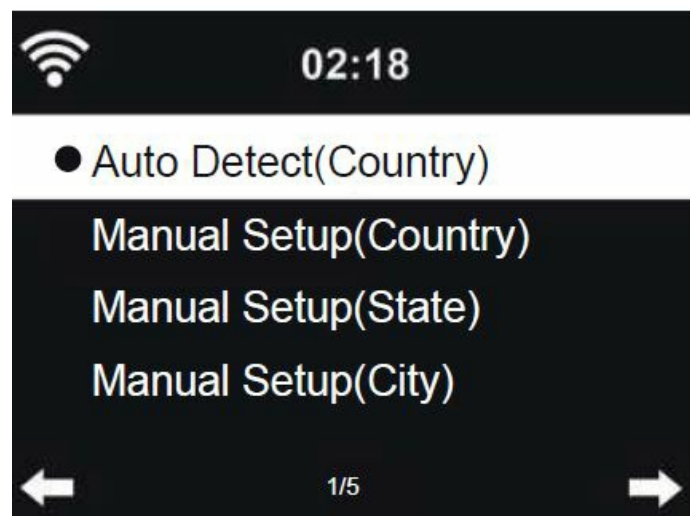


- There is a shortcut Local Radio under Internet Radio so that you can easily go to the station list of your location.
- You may manually Setup your location, or let the system auto-detect your current location. The system detects the location according to the IP address of your connected network.

Playback Setup

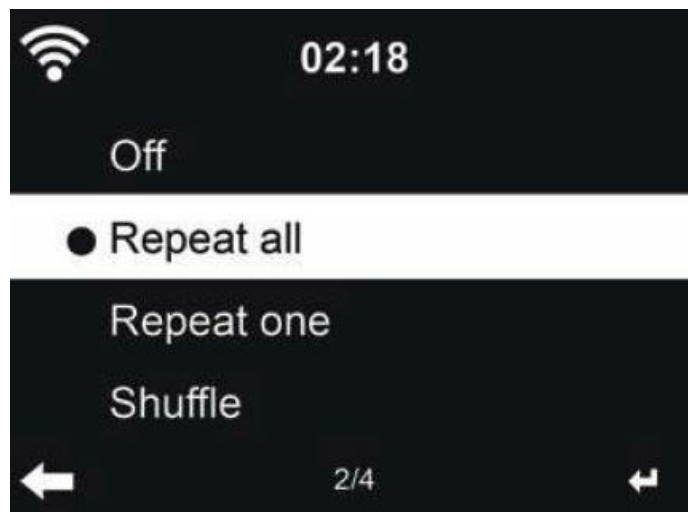


- Select the playback mode of media center-off (no repeat or shuffle),Repeat all, Repeat one ,or shuffle.

SMS Setup

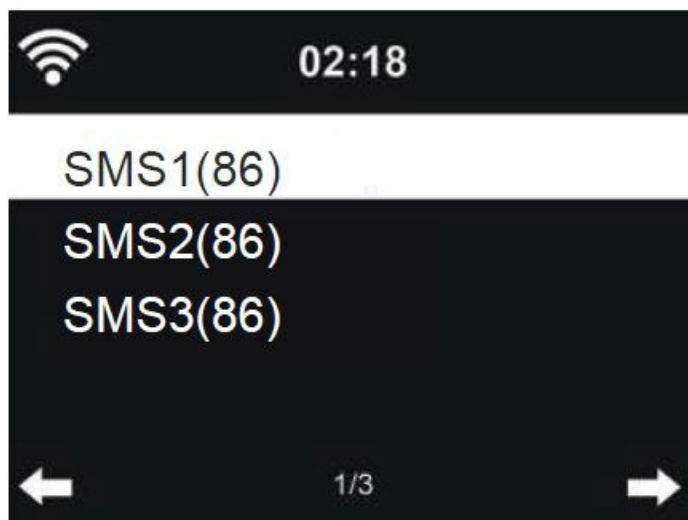

- Firstly enter into Configuraion>Key to choose SMS (The default is Preset), Then Enter into Configuraion>SMS Setup again to input the mobile number,Three number can be input.

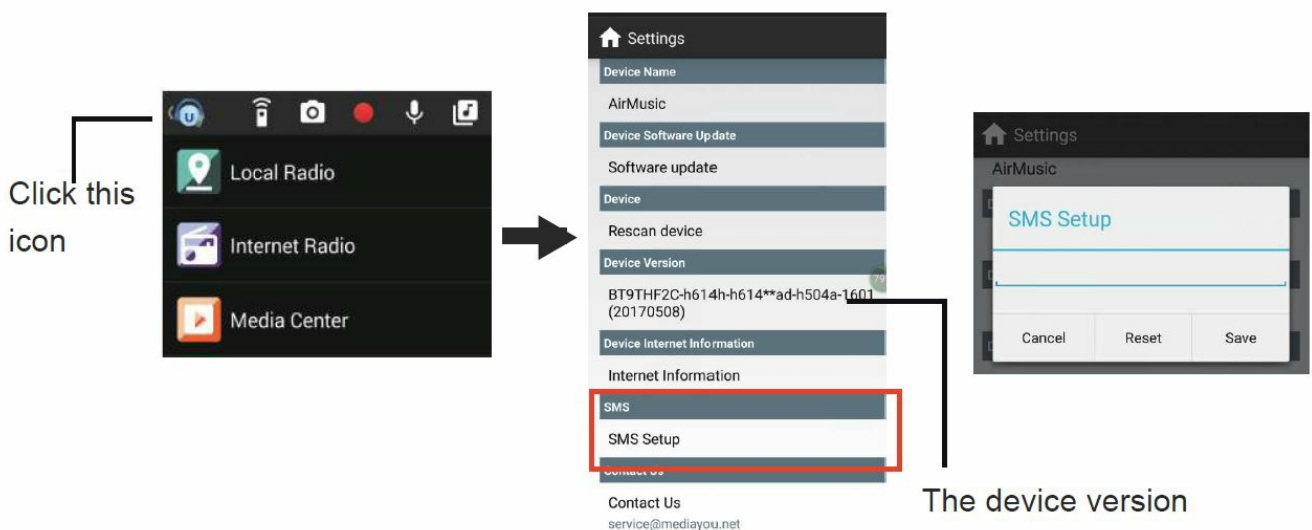


- After above is finished . install the Airmusic control App to a mobile phone and open, The appdisplay as following will be shown .Click the icon of Airmusic on the top let corner and choose seing menu .Then edit the message in SMS seings and Save.

This icon
blinking



- Press the Mode button on the device, and hold on until the icon in the top left corner is blinking, then release. The mobile phone you input the phone number previously will receive the message. If the icon is a "X" in Red, means message sending failed.
- If the mobile phone has not installed the AirMusic control APP. The device will send a default message to the phone which was input the mobile number.
 1. **Note:** As if it is a fresh SMS, the phone will receive the message from a different mobile number as your input.
 2. Please make sure the device is connected to the network.

Device

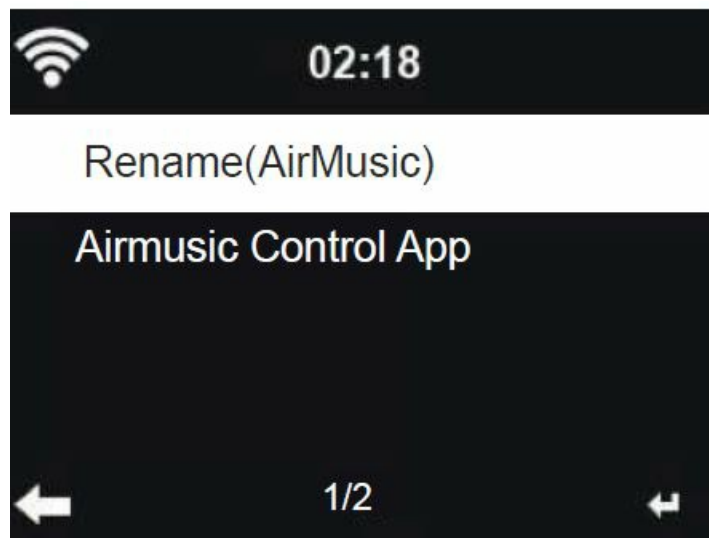


- Here you can name (Rename) its Clint H6.

Resume When Power On

- The system is default to resume internet radio playback if you were listening to internet radio or media center before switch off the unit.
- If turn this setting off, the system will remain in the main menu when switching on the unit.

Equalizer

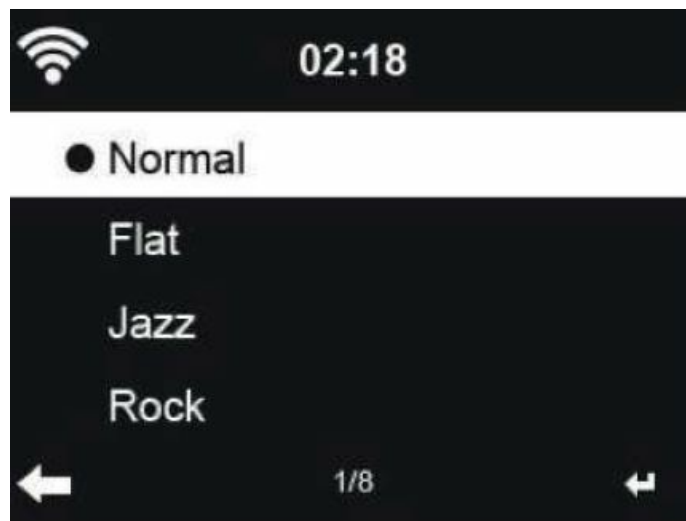


- Default equalizer is Normal, you may change to Flat, Jazz, Rock, Soundtracks, Classical, Pop, News or my EQ.

Software Update

- Update software. If there is an updated software version on the server, the system will notify you when you return to the main menu.

Reset to Default

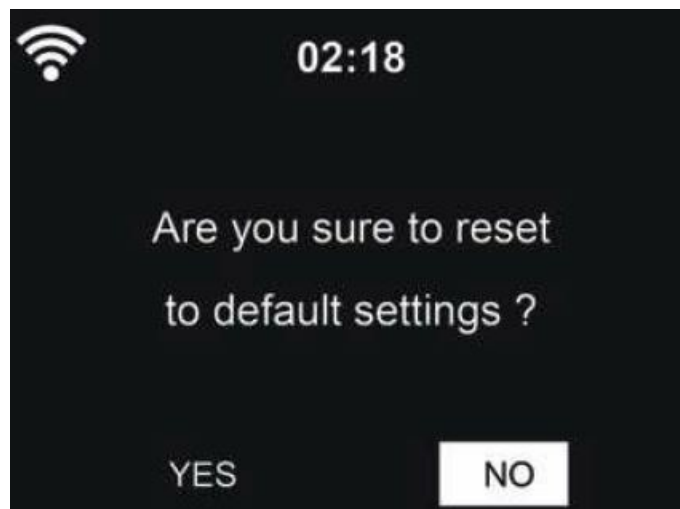


- Restore the default settings.
- After H6 is reset, the system will move to Language setting menu. And it will automatically turn to network setting menu once the OSD language is selected.

Service and support






Should you need any technical support or have questions in general, please always firstly consult your local dealer. Alternatively, contact our technical support at help@clintdigital.com. We can help in English or Danish language only.

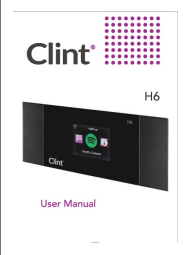www.clintdigital.com

Documents / Resources

	<p>Clint H6 Multi Streaming Adapter DAB+ [pdf] User Manual H6 Multi Streaming Adapter DAB, H6, Multi Streaming Adapter DAB, Streaming Adapter DAB, Adapter DAB</p>
---	--

References

-  [Demo Slot PG: Akun Slot Demo Mahjong 1 2 3 Mudah Menang Paling Mantap](#)
-  [mediaU – Your Best Choice of Internet Radio Portal !](#)
-  [spoify.com/connect](#)
-  [Loading...](#)
-  [Manual-Hub.com – Free PDF manuals!](#)
- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.