

Clocks Projection Alarm Clock User Manual

Home » Clocks » Clocks Projection Alarm Clock User Manual

Contents

- 1 Clocks Projection Alarm **Clock**
- 2 Before use
- 3 Diagram
- 4 Time setting
- 5 Alarm setting
- 6 Snooze setting
- 7 Turning off the alarm
- 8 FM setting
- 9 Projection setting
- 10 Brightness setting
- 11 USB Charging function
- 12 Specifications
- 13 Package contents
- 14 FCC statement
- 15 DOWNLOAD RESOURCES
- 16 FAQ'S
- 17 Documents / Resources
- **18 Related Posts**

Clocks

Clocks Projection Alarm Clock



Clocks Projection Alarm Clock

We offer a 6-month return policy and a quality guarantee for 24 months. If you have any doubt please don't hesitate to contact us at **clockservice@outlook.com**

Before use

Thanks a lot for choosing our product. Please read the following information carefully:


- 1. This product is designed to be used with the original adaptor provided in the package.
- 2. The built-in button battery inside the product is only for time backup in case of a power outage.
- 3. Please follow the instructions to set up the product.

We hope you have a nice experience using our product.

Precautions

- 1. Do not expose the unit to extreme temperatures, direct sunlight, dust, or humidity.
- 2. A cloth or other protective material should be placed between the clock and the furniture.
- 3. Cut off the power before cleaning the clock with a soft cloth moistened only with mild soap and water.
- 4. You must use the original adapter.
- 5. Do not disassemble the clock or touch any components.

Diagram

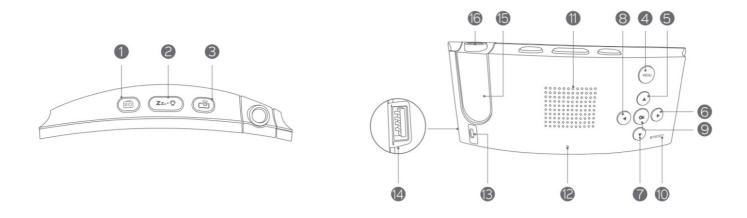

- 1. FM Radio Button
- 2. Snooze or Dimmer Button
- 3. Projection Button
- 4. Menu or Turn on/off two Alarms
- 5. Up
- 6. Right or Turn on/off Alarm 2
- 7. Down
- 8. Left or Turn on/off Alarm 1

- 9. OK or Switch 12/24 hour format
- 10. Reset
- 11. Speaker
- 12. Antenna
- 13. Micro Charging Port
- 14. USB Charging Port
- 15. Projecting Cylinder
- 16. Projecting Lens

Time setting

After clicking, press or to set the time, the hour changes with the minute increase or decrease.

Press Or Oto switch between 12/24 hours, and press again to save the setup.

NOTE: Exit the setting, you can switch between 12/24 hours by pressing the OK button.



Alarm setting

- Press to enter Alarm 1 setting, and press or for time setting.
- Press to choose the ringtone (Chords, waves, birds, FM Radio and Turn off the alarm)
- Press to adjust the volume of the alarm(L01, L02, L03)
- Press Press save or to continue setting up the Alarm 2 (same steps as Alarm 1 setting).

NOTE

1. When the ringtone is selected, the screen will display:01, 02, 03, rd(awaken up by radio) and OFF. When you

choose FM Radio as the ringtone, the channel and volume remain the same as the last time you used FM Radio.

2. Exit setting, press to quickly turn on/off the alarm 1, press to quickly turn on/off the alarm 2.



Snooze setting

 
When the alarm goes off, press zzz· to turn it off temporarily. It goes off again in 9 minutes.

Turning off the alarm

When the alarm goes off, press any button other than to turn it off. **NOTE:** The alarm is only turned off for the day. It goes off again the next day.

FM setting

FM and volume setting





NOTE

- 1. Enable the antenna when using the FM function for better signals.
- 2. The FM in the clock is different from traditional FM radio and the signals will be different.
- 3. The FM signal is not very strong. It is recommended to be used by the window, away from mobile phones, computers, metal, and other devices with radiation.

FM channel saving

Choose the channel to be saved, long press. When the digits on the screen start to flicker, press aga

to save. long press ok to recall the stored radio channel.



FM sleep function

When the FM is active, press to enter the sleep mode, or to choose the time of sleeping. The radio sleep timer can be set to 5, 15, 30, 45, 60, 75, 90 minutes, double press to see the remaining sleeping time.



NOTE: When the sleeping time is over, the FM Radio turns off automatically.


Turn off the FM

Press Zzz or or to turn off the FM Radio.

Projection setting

1. Brightness adjustment

Press to turn on the projection, short press again to adjust the brightness, and long press to reverse 180°.

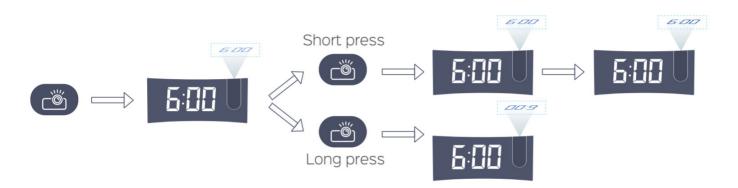

Note

- 1. The most recommended distance for projection is 0.5-3m
- 2. The projection is not visible during the day

Adjust the projection angle

Rotate the cylinder to adjust the projection angle. Range: -30°—90°

Brightness setting

Press Zzzzo to adjust the brightness of the screen: Dim-Low-Medium-High-Highest-OFF.

USB Charging function


The USB port in the back can be used for charging mobile phones and other devices.

Note: Please use the original adaptor to charge

Specifications

Input:	5V 1.5A
Radio Frequency:	76-108 MHz
Projection angle:	-30°—90°
Projection brightness:	3level
USB output:	5V 1.2A(Max)
Projection distance:	0.5-3m
Screen brightness:	5level
Ringtones:	3 ringtones+ FM

Package contents

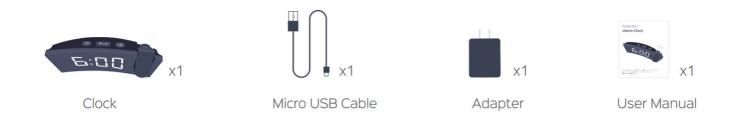

FCC statement

Operation is subject to the following two conditions

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DOWNLOAD RESOURCES

- Clocks Projection Alarm Clock [pdf] User Manual Projection Alarm Clock
- Read more: https://manuals.plus/clocks/projection-alarm-clock-manual-3#ixzz7kS0SpzsW

FAQ'S

How to set the clock?

Please press the "menu" button and then press "OK" button.

What is the point of a projection alarm clock?

The genius behind the projection alarm clock is that you can read the time on the clock face, or you can simply look up at your wall or ceiling to see the time projected in a clearly visible image.

How do you turn off the alarm on a projection clock?

Press the ALARM button once to view alarm time. Press the ALARM button again to activate the alarm. Bell icon appears. Press the ALARM button again to deactivate the alarm.

How do you change the time on a projection alarm clock?

You press the mode. Button. Make sure keep pressing mode it says Al hold. And press the set button for like three seconds. Again first item to be changed starts flashing the hours.

What does a projection alarm clock do?

A projection clock (also called ceiling clock) is an analog or digital clock equipped with a projector that creates an enlarged image of the clock face or display on any surface usable as a projection screen, most often the ceiling.

Can I replace projection alarm battery?

Alarm batteries need to be changed every 3 to 5 years. Your home's security system should alert you when the battery needs to be changed. It's normal for the keypad to state "low battery" or it will chirp daily to alert you.

How to adjust brightness?

Please press "snooze or dimmer" button.

How do I set the date and time on my alarm panel?

System. Now you just press the pound key and that's pound out then give it a second and the time will display. So here is how you set your time. Notice it's showing p.m. if I didn't put in military.

How do I reset the time on my projection clock?

Bring both units inside and have the units 3-5 feet apart with nothing between them. Remove all power from both units.

Press one of the buttons on the display at least 20 times to clear all memory. Let all the units sit with batteries out for 10 minutes.

How do you turn off alarm with volume button?

For that, we have to go to the Clock app that comes with our mobile. Once here, regardless of whether you are in the Time, Stopwatch, or Alarm section, click on the app options on the three-dot button in the lower right corner, and select Settings. At the end you have an option called Volume buttons.

Why are my projection alarm clocks not working?

To clear the cache and data for the Clock app, tap on Settings > Apps > Clock. Alternatively, long-pressing the Clock app on your phone screen and selecting App Info also does the trick. Whichever way you decide, your next move is to select Storage > Clear Cache, and this should ensure your Android alarm works again.

How to turn on/off FM Radio?

Please press the "FM Radio" button, you can see the following menu...



Clocks Projection Alarm Clock

Documents / Resources



<u>Clocks Projection Alarm Clock</u> [pdf] User Manual Projection Alarm Clock

Manuals+, home privacy