




# CLOUD MOBILE T1 Sunshine Elite Tablet Phone User Manual

[Home](#) » [CLOUD MOBILE](#) » CLOUD MOBILE T1 Sunshine Elite Tablet Phone User Manual 

## Contents

- [1 CLOUD MOBILE T1 Sunshine Elite Tablet Phone User Manual](#)
- [2 PRECAUTIONS](#)
- [3 PARTS AND BUTTONS OF THE DEVICE](#)
- [4 INSERTING/REMOVING CARDS](#)
- [5 QUICK NOTIFICATION PANEL](#)
- [6 SETTINGS MENU](#)
- [7 INSERTING/REMOVING SIM CARDS](#)
- [8 HOW TO CONNECT TO A COMPUTER](#)
- [9 CAMERA](#)
- [10 TROUBLESHOOTING](#)
- [11 FCC RF EXPOSURE INFORMATION](#)
- [12 FAQs](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

# Cloud

## CLOUD MOBILE T1 Sunshine Elite Tablet Phone User Manual



## CLOUD MOBILE T1 Sunshine Elite Tablet Phone User Manual

### PRECAUTIONS

#### **On the Road**

Using a device while driving is illegal in many countries. Please refrain from using your mobile while driving.

#### **Near Sensitive Electronics or Medical Equipment**

Don't use your device near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

#### **While Flying**

Your device can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your device, or disable its wireless functions, please do as they say.

#### **At a Gas Station**

Don't use your device at gas stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.

#### **Making Repairs**

Never take your device apart. Please leave that to the professionals. Unauthorized repairs could break the terms

of your warranty. Don't use your device if the antenna is damaged, as it could cause injury.

### Around Children

Keep your mobile out of children's reach. It should never be used as a toy as this is hazardous.

 
### Near Explosives

Turn off your device in or near areas where explosive materials are used. Always obey local laws and turn off your device when requested.

### Working Temperature

The working temperature for the device is between 0 and 40 degree Celsius. Please don't use the device outside the range. Using the device under too high or too low temperature might cause problems. At very high volume, prolonged listening to a mobile device can damage your hearing.


## PARTS AND BUTTONS OF THE DEVICE

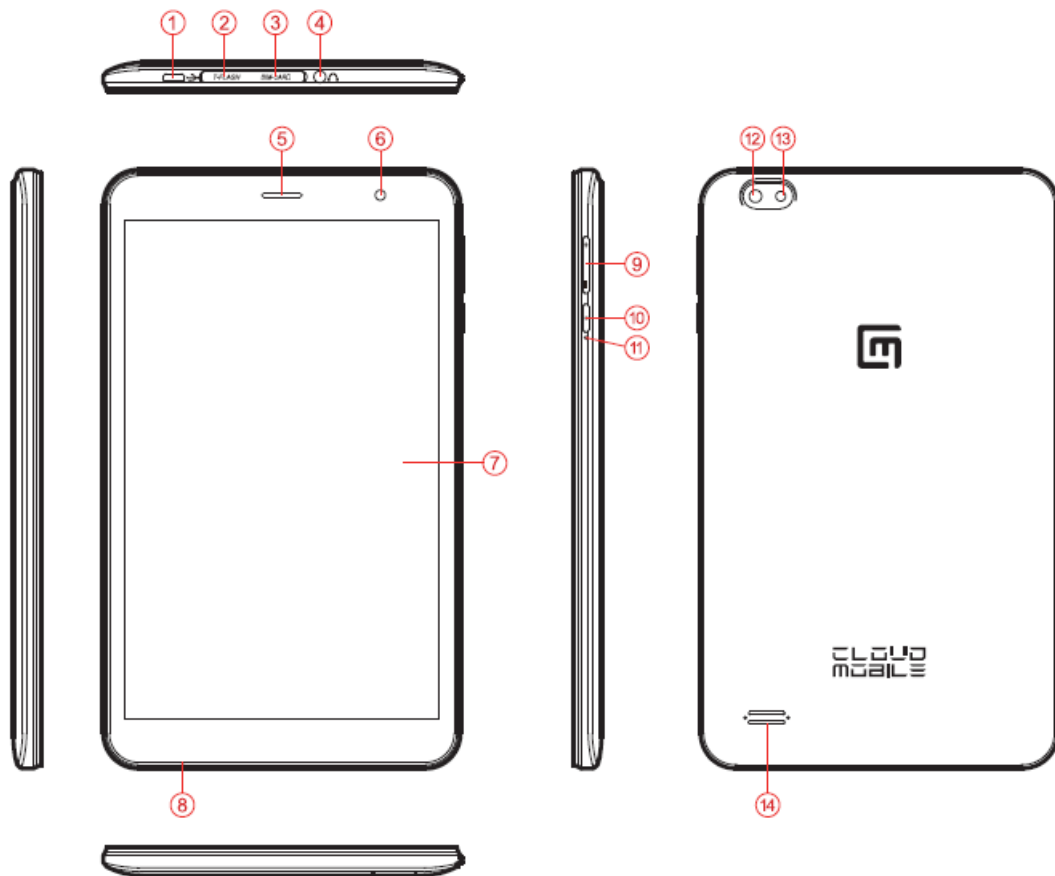

1. Micro-USB Connector
2. Front Camera
3. Touchscreen
4. Reset Hole
5. Rear Camera
6. Flash
7. T-FLASH Card Slot
8. SIM Card Slot
9. smartphone Jack
10. Microphone
11. Volume Button

12. Power Button
13. Speaker
14. Receiver

## TOUCH BUTTONS

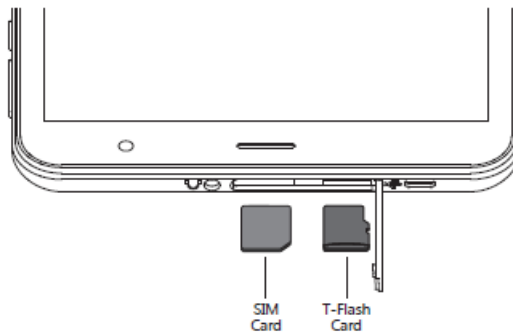 

The button moves back one step to the previous menu/page. The button returns immediately to the main screen. The button displays a menu of recently opened applications. This interface adds a “CLEAR ALL” button) Swipe up on the home screen to open the application list

## INSERTING/REMOVING CARDS

Installing the SiM Card or micro SD ard. Insert your fingernail into the slot next to the top card slot, and then buckle the card slot cover outward.

### **WARNING**

Insert the front of the cerd toward the front of the tablet to avoid damage to the tablet.do.not use any other kind of SI card or any non-standard SIMcard cut from SIMcardkou.can

 
## HOME SCREEN



The home screen will look similar to the picture below. To switch between screens, simply slide your finger left or right across the display.The home screen contains shortcuts to your most-used applications and widgets. The status bar displays system information, such as current time, wireless connectivity and battery charge status.

## QUICK NOTIFICATION PANEL

When you receive a notification you can quickly view it by following the below instructions. Slide your finger from the top of the screen down to the center to access the Notification Panel to see your notifications.

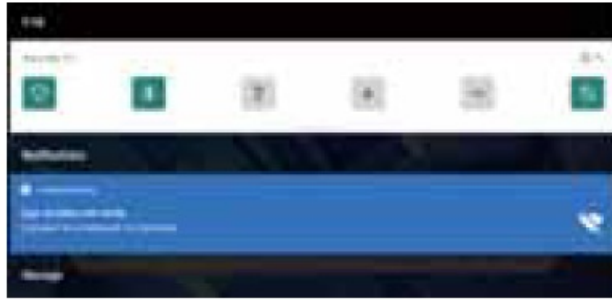

Drag the notification menu down to display the second fast access menu, the menu will look similar to the below

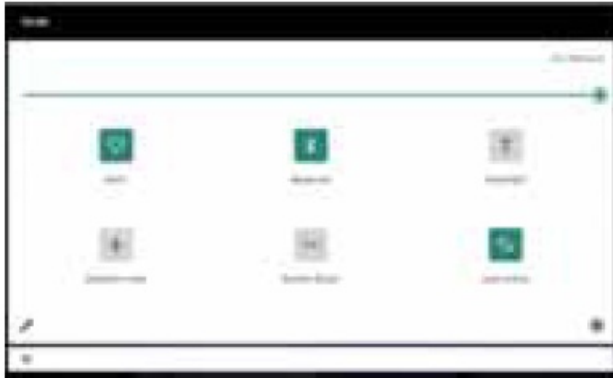 


image.

## SETTINGS MENU

The settings menu allows you to adjust cell phone System Configuration.

### To Change Settings:

Touch the "Settings" menu icon on the Application menu.

### The Settings menu will open.

Touch a category title to view further options.

#### Network & Internet

Wi-Fi-Connect to/disconnect from wireless networks, view connection status. Mobile network – Insert SIM card and switch data. network(26G/36/46) Data usage – Enable/disable mobile data, view current usage, set mobile data limit. (note: this function is available only on devices supplied with 36 card functionality.)Hotspot & tethering- Including USB tethering, Bluetooth tethering and Wi-Fi hotspot.

#### Connected devices

Bluetooth – Connect or disconnect Bluetooth devices USB-Insert the USB line to use this menu.

#### Apps& notifications

Notifications – Adjust different notification settings. App info- A list of all apps downloaded and running. App permissions – View app permissions. Battery- View the status of your battery and make adjustments to power consumption. Display-Adjust display settings. Sound- Adjust the different audio settings such as ringtones Storage – View your phone's internal and external storage settings.

#### Privacy Change privacy settings

location – 'Change approximate location detection, improve search results, GPS satellites.

#### Security Adjust the phone's security settings;

Accounts Add or remove accounts such as your Google Account. DuraSpeed – “ON” / “OFF”

## **System**

Language & input – add to the dictionary, edit on-screen keyboard settings, vocal search, etc. Date&time Set date, time zone, time, clock format etc. Backup- Backup and restore data, perform factory reset, etc. Reset options – reset all preferences.



About Tablet – Displays information about your phone.

## **INSERTING/REMOVING SIM CARDS**

1. Insert your fingernail into the slot next to the top card slot, and then buckle the card slot cover outward. Gently press the SIM card to remove and pull out the SIM card.
2. After inserting a SiM card, turn on the phone and wait a few minutes for your phone to display Network information. Inserting TF Card:

NB: Please ensure when inserting an SD card your phone is powered “OFF”

3. Insert the TF card into the TF card slot located under the card cover as explained in the Inserting/Removing card section. Gently push TF card into slot until it clicks into place.
4. A prompt will be seen on the screen saying “Preparing SD card”.

### **Removing TE Card:**

1. Close all applications and documents which have been opened from the TF card.
2. Select “Settings” and find “Storage” then click “Unmount SD card”
3. A prompt will be seen on the screen saying “SD card safe to remove”
4. Gently press the TF card to remove and pull out the TF card.

## **VIEW THE PHOTOS**

Touch the “Gallery” icon to view the photos, you can view these photos or videos. You can edit these photos. The content taken or recorded by the camera will also be displayed here.

## **SEND E-MAIL**

Touch the Gmail icon to send E-mail, enter E-mail account, or select one from the contacts. Enter the information content and select send.

## **VIEW THE FILES**

Touch the "Files" icon to View files and manage your device files. You can open these files to view, edit or delete at any time.



When the T- Flash card is inserted, you can view the contents stored in the T-Flash card here.

## **SOFTWARE KEYBOARD**

The phone has a software keyboard that automatically displays when you tap the place on screen where you want text or numbers to be entered, then simply start typing.

## **Touchscreen**

The touchscreen responds to finger touch.

### **Note:**

Don't place any object on the touchscreen for it may damage or crush the screen. Single Click: Single click one icon to choose the icon or option you want.

Long Press: Press and hold an icon to delete or move an icon or app, and will display APP info, Widgets, shortcut menu etc. Drag: Press the icon and drag it to a different screen.



## HOW TO CONNECT TO A COMPUTER

### **Note:**

Turn on your phone before connecting the phone to a PC by USB cable

1. Use a USB cable to connect the phone with a computer. The phone will automatically detect a USB connection.
2. The USB connection menu will be displayed in the notification bar, select the desired USB operation.
3. The USB connection has been successful.

## CONNECTION TO THE INTERNET

### **Wireless:**

1. Select "Settings".
2. Select Network & Internet.
3. Select "Wi-Fi" and slide OFF to ON status.
4. All detected wireless networks in the area will be listed. Click to select desired wireless connection.
5. Enter network key if necessary.
6. Once connected to a wireless network, settings will be saved.
7. Wireless icon will appear on the taskbar when connected successfully. The wireless icon will appear on the taskbar when connected Successfully

### **Note:**

When the phone detects the same wireless network in the future, the device will connect the network automatically with the same password record.

## MOBILE DATA AND INTERNET

 
Please Note: Cell Data may be turned "OFF" as a factory setting, to allow data to flow through your network provider please turn Data usage "ON" either from your quick drop down menu or in > Settings >Network & Internet >Data usage, you will not be able to access the Internet when Data usage is "OFF".

NB: Mobile Data charges apply when this setting is "ON" – Data will be passed through your network provider.



## Web Browsing

Connect to the Internet and launch the browser. Type in the desired browsing URL.

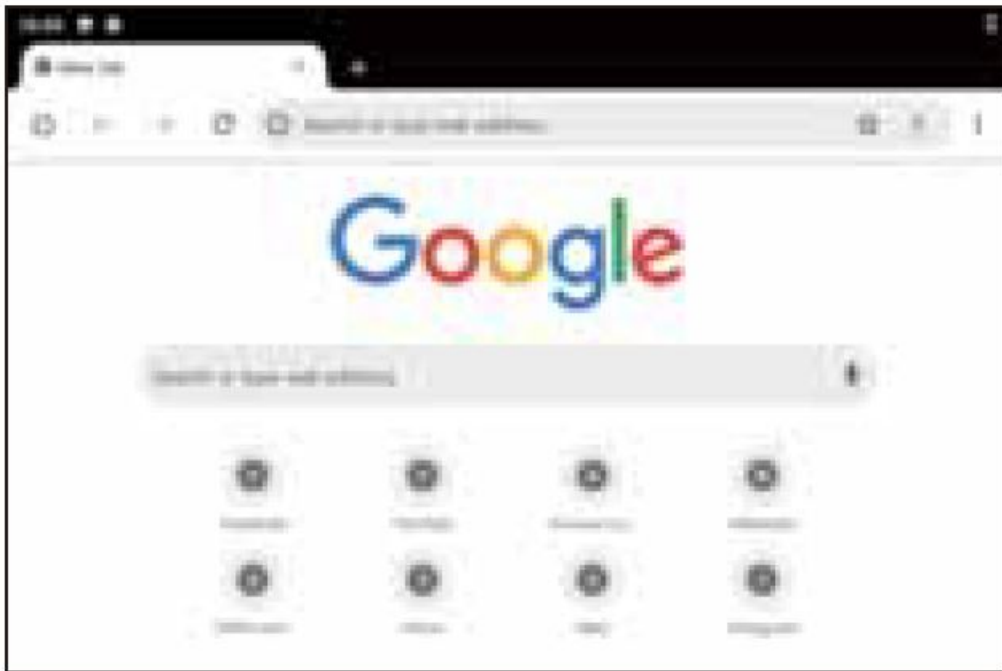

## CAMERA



Touch the icon to enter camera mode and the interface is shown as follows:

1. Touch the icon to take a photo.
2. Touch the icon to start camera recording.
3. Touch the icon on the top right to see the previous picture and to delete, share or set it as a wallpaper. Click

 
the return button to exit camera interface.

4. Touch the icon to switch from front to back camera.

## TROUBLESHOOTING

### How to Close Applications

When an application is not responding you can manually shut the app down in “Running Services” menu. This will ensure the system responds as desired. Please shut down all idle applications to release memory and get the system speed back to normal. To close the application, click the icon on the shortcut bar to enter the system configuration interface. Select the Application Running and the interface is Tap the application you want to close. A pop-up window will be displayed. Tap “Stop” to close that application.

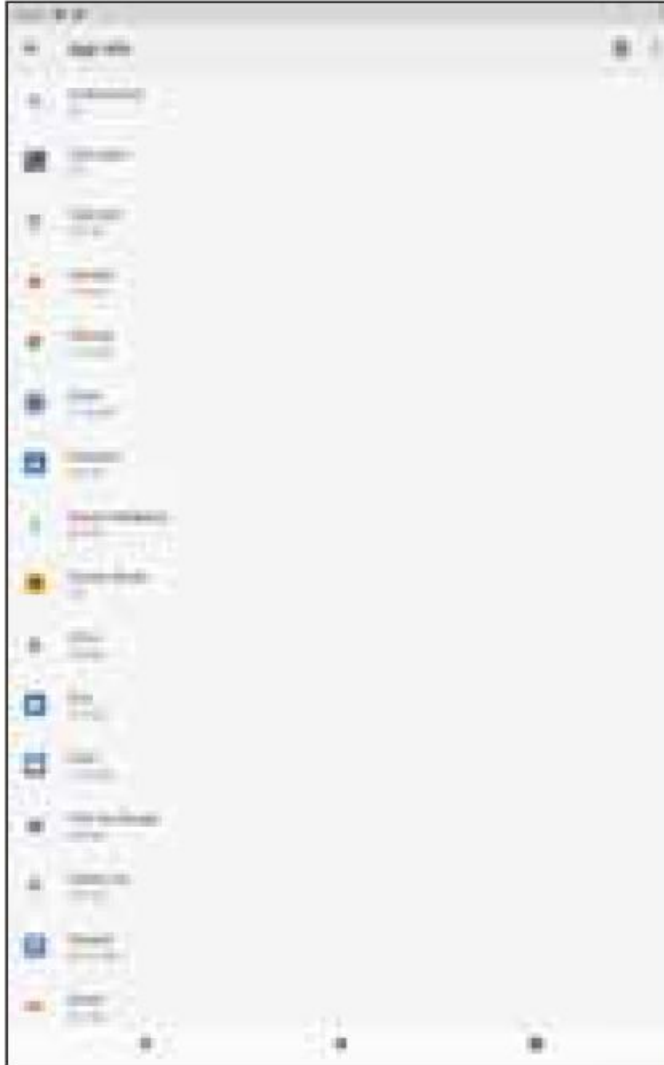

### Power “OFF” / Restart/ Reset the Phone

1. Press and hold the power button for 5 seconds and the device will be powered down.
2. Press the reset button located under the power button with a sharp object and the device will be forced to restart. Restore Default Setting If you want to reset the phone to factory settings and erase all materials, please press Settings Backup and reset Factory data reset.

#### **WARNING:**

actory Data Reset setting will delete ALL your data and system configuration as well as any downloaded apps. Please use this function carefully.

## FCC RF EXPOSURE INFORMATION

warning! Read this information before using your phone. In August 1986, the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure

to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antenna modifications or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for a replacement antenna.

### **BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back/front of the phone kept 1.5 cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5 cm separation distance between

user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided. For more information about RF exposure, please visit the FCC

website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF

exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies: Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1)

Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards). Use only the supplied or approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

### **NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

### **RF Exposure Information:**

This product is in compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/cas/reports/GePicsearch.cfm> search for FCC ID:2AY6A-T1ELITE. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.
- Do not use the device with a environment which below minimum -10°C or over maximum 40°C, the device may not work. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FAQS

### How big is the Sunshine T1 tablet?

Cloud Mobile Sunshine T1 Elite 16GB Wi-Fi 4G Android Unlocked 8" Tablet.

### What's the difference between T1 and T2?

T2 is a newer version of T1. It has a higher resolution screen (1280\*800) and a faster CPU (MTK8317). The only difference between the two is the CPU.

### Can I use my phone as a hotspot for my laptop?

Yes, you can use your phone as a hotspot for your laptop. You can also share your phone's internet connection with other devices via bluetooth or USB cable.

### Can I use my phone as a GPS?

Yes, you can use your phone as a GPS. You can download maps from Google Maps and other providers to your phone and use it as a GPS device.

### Can I play games on this tablet?

Yes, you can play games on this tablet. You can download games from Google Play Store and other sources to play on this tablet.

### How do I update my firmware?

You can update the firmware by connecting your device to PC or Laptop via USB cable and follow the instructions in the firmware update program. Or you can get the firmware update file from Cloud Mobile website ([www.cloudmobile.cc](http://www.cloudmobile.cc)) and upgrade it manually.

### How do I charge my tablet?

You can charge your tablet with the charger that comes with it or any other charger that supports USB charging function. Please note that some chargers will not work with this device because they don't support USB charging function. Please check with your charger manufacturer if you are unsure about its compatibility with this device before purchasing it.

### How do you make a call on Sunshine T1 elite tablet?

To do this from your Cloud Mobile Sunshine T1 click on the chat icon located in the upper right of the screen and open a conversation with the person you want to talk to. Then press the video camera icon in the upper right to start the video call.

### Does my tablet have a phone number?

Tablets, **unless you have a SIM and service through a carrier/service provider, don't have phone numbers** . Actually it is the same with a phone. You can have a phone, but without it having service, it can't have a phone number.

### Can you answer phone calls on a tablet?

**If Google Assistant is on, you can answer or decline a call with your voice** . You can say: "Hey Google, answer the call."

## Can you text from a tablet without a phone?

If you haven't already, install the Google Voice app on your tablet to access your number from there. Sign in with your Google account, and **you can text as long as you have a Wi-Fi or mobile data connection** . Of course, you'll need to let your contacts know that you're texting them from a new number.

## Can you use WhatsApp on a tablet?

**Yes. WhatsApp can be used on an Android tablet** , although it is not as straightforward as using WhatsApp on your smartphone. WhatsApp requires a phone number to activate your account, however, most tablets don't have a SIM card slot, thus WhatsApp is not provided in the app store on the tablets.

## Can you use WhatsApp on a tablet without a phone number?

To use WhatsApp, you normally need a SIM card number to connect on your device for the app to work. Unlike a smartphone, it's trickier to install WhatsApp on a tablet because **there is no phone number** .

## Can you use WhatsApp on a tablet without a SIM card?

**You can use WhatsApp via the Tablet Messenger app, without an extra SIM card** . This way, you get access to all your conversations and contacts via WhatsApp Web. Follow these steps.

## Does WhatsApp work on Wi-Fi only tablet?

Tablet users with only wifi can still register and activate whatsapp on their device in few simple steps, as long as they have a phone and a number and this phone doesn't even need to be a smart phone.


## Can you video call on WhatsApp on a tablet?

WhatsApp is the world's most popular messaging application. Now used by more than two billion people, it offers a video calling service for both iPhones and Android smartphones (**it doesn't work on tablets** , and although you can send text messages at Whatsapp.com you can't make video calls through a browser).

# Cloud

[www.cloudmobileusa.com](http://www.cloudmobileusa.com)

## Documents / Resources

	<p><a href="#">CLOUD MOBILE T1 Sunshine Elite Tablet Phone</a> [pdf] User Manual T1ELITE, 2AY6A-T1ELITE, 2AY6AT1ELITE, T1, Sunshine Elite Tablet Phone</p>
---	--