

Cloud C82T CVS Series In Ceiling Loudspeakers Installation Guide

Home » CLOUD » Cloud C82T CVS Series In Ceiling Loudspeakers Installation Guide 1



Contents

- 1 Cloud C82T CVS Series In Ceiling Loudspeakers Product Information
- **2 Product Usage Instructions**
- **3 INFORMATION**
- **4 Installation Instruction**
- 5 Documents / Resources
- **6 Related Posts**



Cloud C82T CVS Series In Ceiling Loudspeakers Product Information



The CVS Series In-Ceiling Loudspeakers are a range of high-quality speakers designed for installation in ceilings. They come in various models, including CVS-C5, CVS-C5T, CVS-C52T, CVS-C53T, CVS-C62T, CVS-C82T, and CVS-C83T. Each model has different specifications and power ratings.

- Rated Power: The rated power ranges from 10W to 25W, depending on the model.
- Max Power: The maximum power handling capacity ranges from 20W to 50W, depending on the model.
- **Depth Required:** The depth required for installation above the ceiling varies between models, ranging from 169mm to 248mm.
- Line Transformer Power Tappings: All models have multiple power tapping options, ranging from 6W to 24W, and an impedance of 8 ohms.
- Color Options: The models are available in either black (suffix 'B') or white (suffix 'W') finishes.
- Front Grilles: Most models have integral front grilles, except for CVS-62T and CVS-83T, which have removable front grilles.

Product Usage Instructions

Step 1: Cut a Hole in the Ceiling

Using the template provided, cut a hole at the desired mounting location in the ceiling. Refer to the table above to ensure that the diameter of the hole matches the requirements for the specific model. Before cutting, make sure there are no cables or obstructions behind the mounting surface.

Step 2: Prepare the Wires

Strip the ends of the wires coming from the amplifier. Insert the stripped ends into the spring-loaded terminal block connector on the loudspeaker. No screwdriver is required for this connection. Choose the appropriate power tapping by connecting the wires to the corresponding terminals on the connector. The power tap selection is described on the magnet sticker on the rear side of the loudspeaker. If using 100/70/25 V speakers in low impedance mode (8 ohms), disconnect the ground wires by interrupting the cable lugs.

Step 3: Mount the Speaker

Ensure that the mounting clamps are fully bent inwards to allow the speaker to fit through the cut-out. Insert the speaker into the opening.

Step 4 (For Models with Removable Grilles): Secure the Speaker

If your model has a removable grille, fix the speaker in the provided opening by tightening the screws of the mounting clamps using a screwdriver. A quarter turn will cause the mounting clamps to flip-out and lock the speaker in place. Continue tightening the screws until the speaker unit is fully secure.

Step 5: Finalize Installation

Once the speaker is securely mounted, it is now correctly installed and ready for use.

CAUTION – Installation

Speaker must be installed by a qualified speaker technician.

CAUTION – Servicing

The unit contains no user-serviceable parts. Refer servicing to qualified personnel.

Do not perform servicing unless you are qualified to do so.

CAUTION – Tap Settings

Before use, check that the transformer is set to the correct power tapping for the system.

INFORMATION


Model	Rated p	Max Po wer	Cut-out diameter	Depth required a bove ceiling	Line transformer power tappin gs (100 V-line) or impedance
CVS-C5	10 W	20 W	169 mm (6.65")	65 mm (2.56")	16 ohms
CVS-C5T	10 W	20 W	169 mm (6.65")	65 mm (2.56")	6 W / 3 W / 1.5 W / 8 ohms
CVS-C52T	20 W	40 W	169 mm (6.65")	65 mm (2.56")	6 W / 3 W / 1.5 W / 8 ohms
CVS-C53T	20 W	40 W	169 mm (6.65")	65 mm (2.56")	24 W / 12 W / 6 W / 8 ohms
CVS-C62T	25 W	50 W	205 mm (8.07")	105 mm (4.13")	24 W / 12 W / 6 W / 8 ohms
CVS-C82T	25 W	50 W	241 mm (9.49")	92 mm (3.62")	24 W / 12 W / 6 W / 8 ohms
CVS-C83T	25 W	50 W	248 mm (9.76")	110 mm (4.33")	24 W / 12 W / 6 W / 8 ohms

Note: all model numbers are suffixed either 'B' or 'W'. This refers to the colour of the finish: 'B' = black, 'W' = white


All models have integral front grilles, with the exception of Models CVS-62T and CVS-83T, which have removable front grilles.

Installation Instruction

Step 1

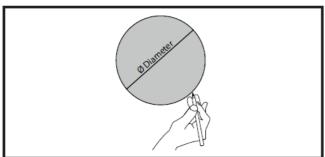


Step 2

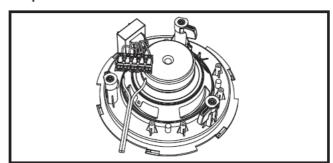


- Cut a hole at the mounting location in the ceiling using the template supplied. You can check that the diameter is correct for the model by referring to the table above.
 - Double check that there are no cables or other obstructions behind the mounting surface before making the cut-out.
- Strip the ends of the wires coming from the amplifier and insert in the spring-loaded terminal block connector on the loudspeaker. No screwdriver is required.
 - The correct power tapping is chosen by connecting to the appropriate terminals of the connector. A description of the power tap selection is shown on the magnet sticker on the rear side of the loudspeaker.
 - When using 100/70/25 V speakers in low impedance mode (8 Ω), disconnect the ground wires by interrupting the cable lugs.

Step 3

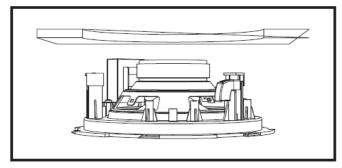


Step 4

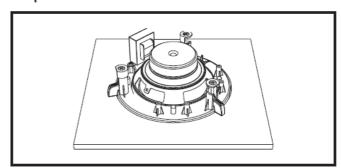


- Make sure the mounting clamps are fully bent inwards, allowing the speaker fit through the cut-out. Insert the speaker to the opening.
- Fix the speaker in the provided opening by tightening the screws of the mounting clamps using a screwdriver. A quarter turn will cause the mounting clamps to flip-out, locking the speaker in place. Tighten the screws further until the speaker unit is fully secure.

Step 5 (only applies to models with removable grilles)

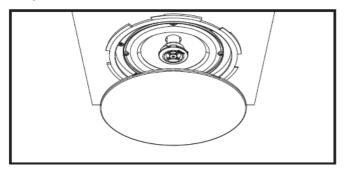

Step 6

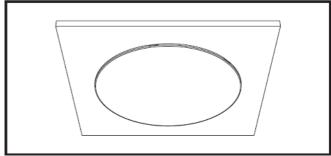

- To attach the grill to the speaker, insert the lips into the provided openings on the speaker baffle and rotate it a partial turn (15°) to lock it into place.
- The speaker is now correctly installed and ready for use.

Documents / Resources



Cloud C82T CVS Series In Ceiling Loudspeakers [pdf] Installation Guide CVS-C5, CVS-C5T, CVS-C52T, CVS-C53T, CVS-C62T, CVS-C82T, CVS-C83T, C82T CVS Series In Ceiling Loudspeakers, C82T CVS Series, In Ceiling Loudspeakers, Ceiling Loudspeakers, Loudspeakers

Manuals+,