



Cloud CS-C4VW In Ceiling Speaker Installation Guide

[Home](#) » [CLOUD](#) » Cloud CS-C4VW In Ceiling Speaker Installation Guide 









CS-C Series In-Ceiling Loudspeakers

Contents

- [1 CS-C4VW In Ceiling Speaker](#)
- [2 EXPLODED VIEW](#)
- [3 TAP SETTINGS](#)
- [4 INSTALLATION](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

CS-C4VW In Ceiling Speaker

CS-C6 6.5" IN-CEILING LOUDSPEAKER	
CS-C5 5" IN-CEILING LOUDSPEAKER	
CS-C4 4" IN-CEILING LOUDSPEAKER	
CS-C3 3" IN-CEILING LOUDSPEAKER	
CS-C8 8" IN-CEILING LOUDSPEAKER	
CS-CSUB8 8" IN-CEILING SUBWOOFER	
Installation Guide .	

CS-C Series Installation Guide v2.4



CAUTION – Installation

Speaker must be installed by qualified speaker technician.



CAUTION – Servicing


, The unit contains no user-serviceable parts. Refer servicing to qualified personnel.
Do not perform servicing unless you are qualified to do so.



CAUTION – Tap Switch

. Before use check and set tap switch under grille to proper setting for your system.

EXPLODED VIEW

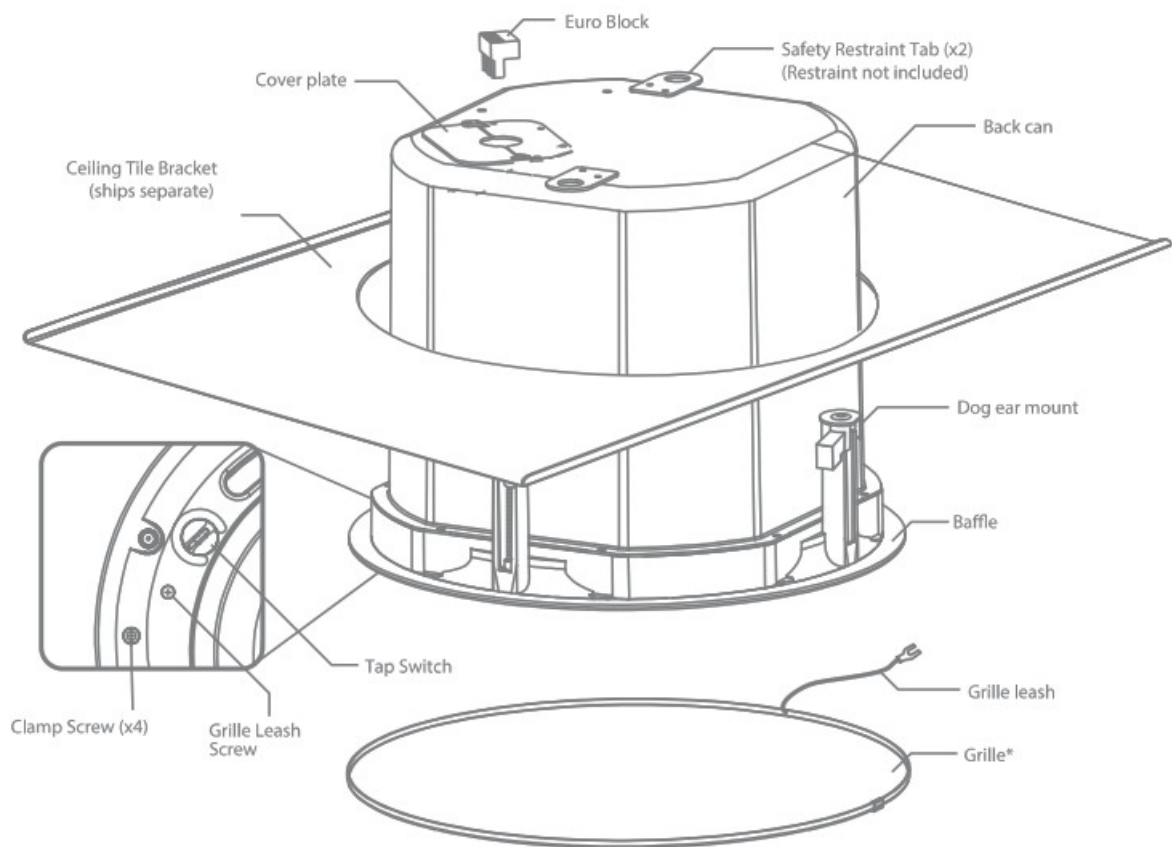

*See note on page 4 regarding alternative grille styles.

TAP SETTINGS


Tap	CS-CSUB8			CS-C8			CS-C6			CS-05			CS-C4*			CS-C3		
	100 V	70 V	25 V	100 V	70 V	25 V	100 V	70 V	25 V	100 y	70 V	25 V	100 y	70 V	25V	100 V	70 V	25V
1	4 ohm			16 ohm			16 ohm			16 ohm			16 ohm			16 ohm		
2	X	100 W	13 W	X	64 W	8W	X	32 W	4W	X	20 W	2.5 W	X	20 W	2.5 W	X	16 W	2W
3	100 W	50 W	7W	64 W	32 W	4W	32 W	16 W	2W	20 W	10 W	1.3 W	20 W	10 W	1.3 W	16 W	8W	1 W
4	50 W	25 W	3W	32 W	16 W	2W	16 W	8W	1 W	10 W	5W	0.6 W	10 W	5 W	0.7 W	8W	4W	0.5 W
5	25 W	13 W	1.5 W	16 W	8W	1 W	8W	4W	0.5 W	5W	2.5 W	0.3 W	5 W	2.5 W	0.4 W	4W	2W	0.3 W
6	13 W	6W	0.8 W	8W	4W	0.5 W	4W	2W	0.3 W	2.5 W	1.3 W	0.2 W	2.5 W	1.3 W	0.2 W	2W	1 W	0.2 W

* CS-C4 tap settings only apply to Model CS-C4V. Note Model CS-C4H is low-impedance only (16 ohms).

INSTALLATION


Step 1

Remove speaker from box

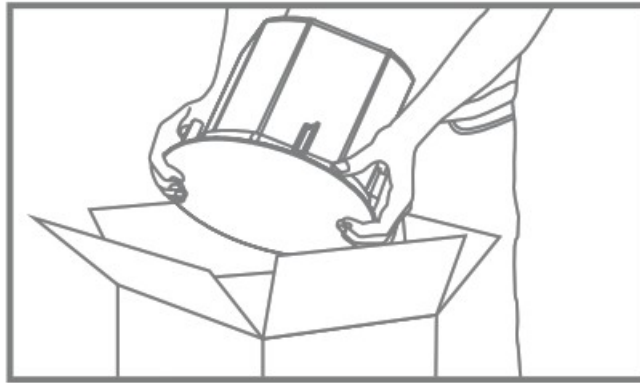


Step 2

Mark and cut hole in ceiling or ceiling tile. Use included hole template.

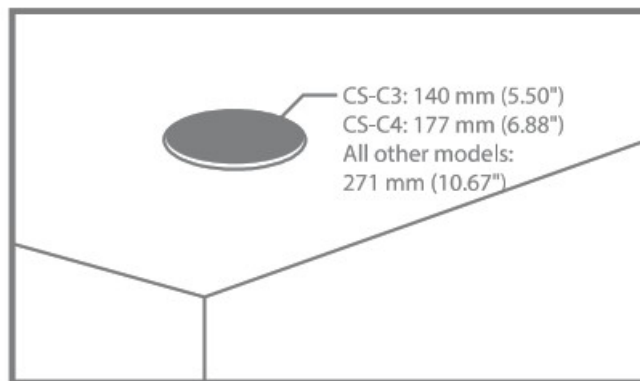


Step 3

Locate euroblock in accessory bag and connect signal wire. For daisy-chaining use "LINK" output to run to next speaker.

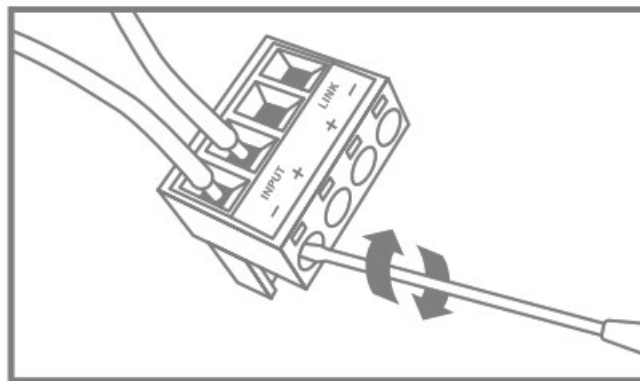


Step 4

Remove grille and set tap switch to proper setting and attach grille leash to baffle by placing the large end of the clip over the snap fit post (1) then sliding the clip until small end snaps into place. Tap switch is preset to highest 100V position.

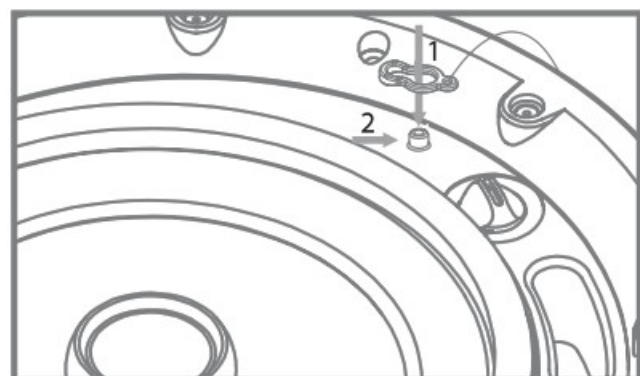


Step 5 (Ceiling rille Only)

Place the bridge on back of ceiling tile. Align holes and insert speaker in hole. Tighten dog ears. Do not overtighten. (Tile bridge not available for C4.)

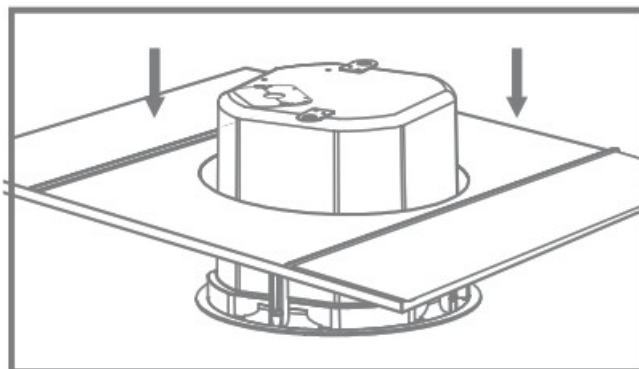


Step 6

Insert euroblock into rear of back can. Attach safety restraint to rear of back can. Close and secure cover plate.

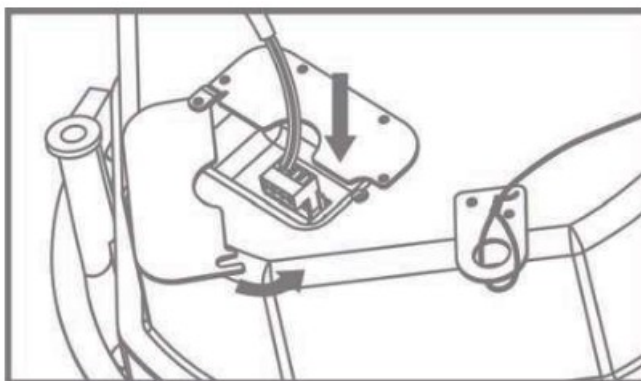


Step 6.1 (CS-C3 and CS-C4 only)

Insert euroblock into rear of back can. Attach safety restraint to side of back can. Close and secure cover plate. Note that on model CS-C4H only, there is an additional rubber seal with a pre-cut "X" to allow cable access.

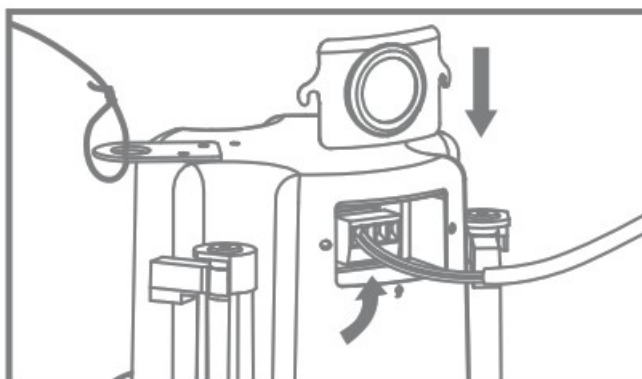


Step 7 (Drywall)

Insert speaker into ceiling opening and tighten dog ear clamps. do not over tighten.

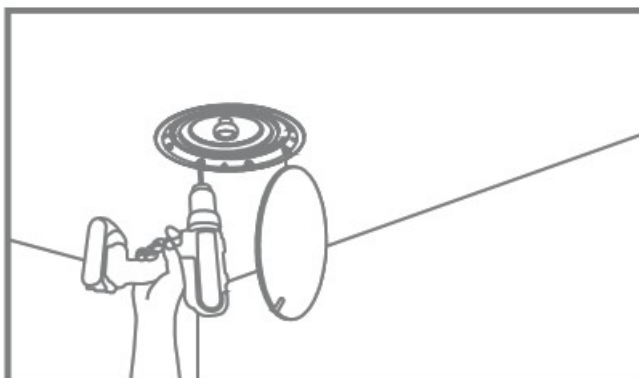


Step 7.1 (CeilingTile Only)

Insert euroblock into rear of back can. Attach safety restraint to rear of back can. Close and secure cover plate. reattach grille to speaker. Insert speaker, tile and tile bridge into ceiling.

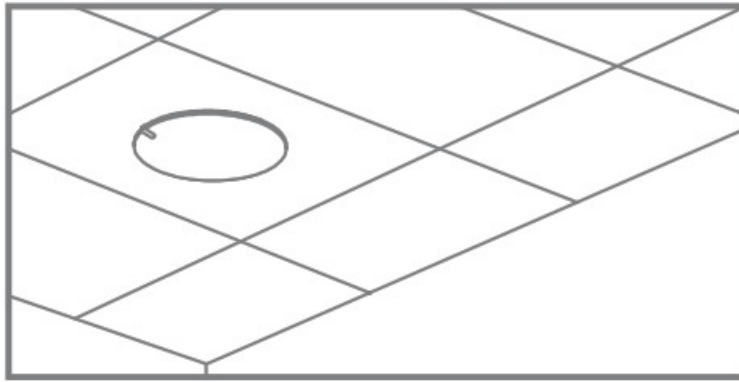


Step 8

Check tap setting and replace grille.

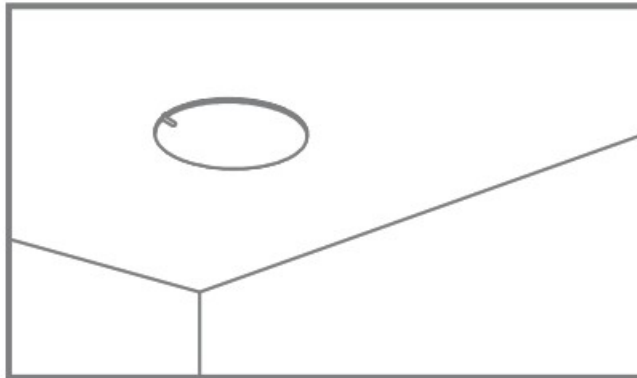

Step 9

Remove logo tab if desired.

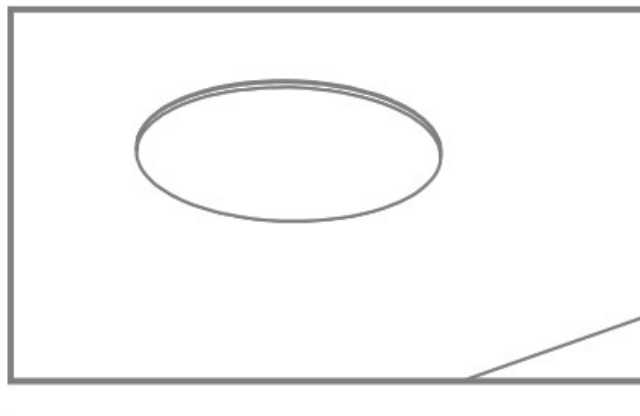








NOTE:ALTERNATIVE GRILLES All CS-C models are supplied with a circular grille as shown in the above diagrams.

Optional square grilles are available for all models except CS-C4: CS-BSQGRILLW (white) and CS-8SQGRILLB (black) are compatible with Models CS-CS, CS-C6, CS-C8 and CS-C8SUB CS-C3SQGRILLW (white) and CS-C3SQGRILLB (black) are compatible with Models CS-3C Optional hexagonal grilles are available for CS-3C only: CS-C3HEXGRILLW (white) and CS-C3HEXGRILLB (black) All alternative grilles feature the same system of magnetic attachment to the speaker as the standard circular grilles. and therefore there is no difference in installation procedure.

www.cloud.co.uk
www.cloudusa.pro

Documents / Resources

<div><div><p>Cloud</p><p>CS-C Series In-Ceiling Loudspeakers</p></div><div><div><p>CS-C1</p></div><div><p>CS-C2</p></div><div><p>CS-C4</p></div><div><p>CS-C3</p></div></div><div><div><p>CS-C2B</p></div><div><p>CS-C2B8</p></div></div><div><p>Installation Guide</p></div></div>	<p>Cloud CS-C4VW In Ceiling Speaker [pdf] Installation Guide</p> <p>CS-C4VW In Ceiling Speaker, CS-C4VW, In Ceiling Speaker, Ceiling Speaker</p>
---	--