



CloudBox 2L Storyteller Instructions

[Home](#) » [CloudBox](#) » CloudBox 2L Storyteller Instructions 

Contents

- 1 [CloudBox 2L Storyteller](#)
- 2 [CLOUDBOX UNIT INSTRUCTIONS](#)
- 3 [Getting Started](#)
- 4 [Left Knob Selections](#)
- 5 [Listening to Stories](#)
- 6 [Playing and Selecting Melodies](#)
- 7 [Playing and Selecting Nature Sounds](#)
- 8 [Repeat](#)
- 9 [Recording a Custom Story](#)
- 10 [Headphone Jack](#)
- 11 [Recharging the CloudBox](#)
- 12 [FCC COMPLIANCE STATEMENT](#)
- 13 [Documents / Resources](#)
 - 13.1 [References](#)
- 14 [Related Posts](#)



CloudBox 2L Storyteller



Specifications

- USB charging cable included
- Internal battery with charging indicator LED
- 9 characters with 4 stories each
- 4 environment selections with corresponding light projections
- Adjustable volume and brightness
- Melodies and Nature Sounds with a timer

Getting Started

1. Connect the USB charging cable to the CloudBox for charging.
2. Slide the switch on the bottom to select the desired language.
3. Press the power button on the front panel to turn on the unit.

Listening to Stories

1. Use the left knob to select a character and the right knob to choose an environment.
2. Press the center of either knob to play the story; press again to pause.
3. To change characters or environments, use the designated buttons or knobs.

Adjusting Settings

1. Use the top dial on the right side to adjust volume; lowest setting mutes sound.
2. Use the lower dial to adjust brightness of projections; lowest setting turns off LEDs.

Playing Melodies and Nature Sounds

1. Select the icon for Melodies or Nature Sounds and choose an environment.
2. Press the Right Knob to start playing and navigate between tracks.
3. Each melody or sound will play for 20 minutes.

Repeat Function

The button can restart stories from the beginning or reset timers for Melodies/Nature Sounds.

FAQ


1. Q: How do I know when the internal battery is fully charged?

A: The LED above the USB-C connector will turn GREEN when fully charged.

2. Q: Can I use the CloudBox while it is charging?

A: No, the unit will not operate while charging or if plugged in.

CLOUDBOX UNIT INSTRUCTIONS

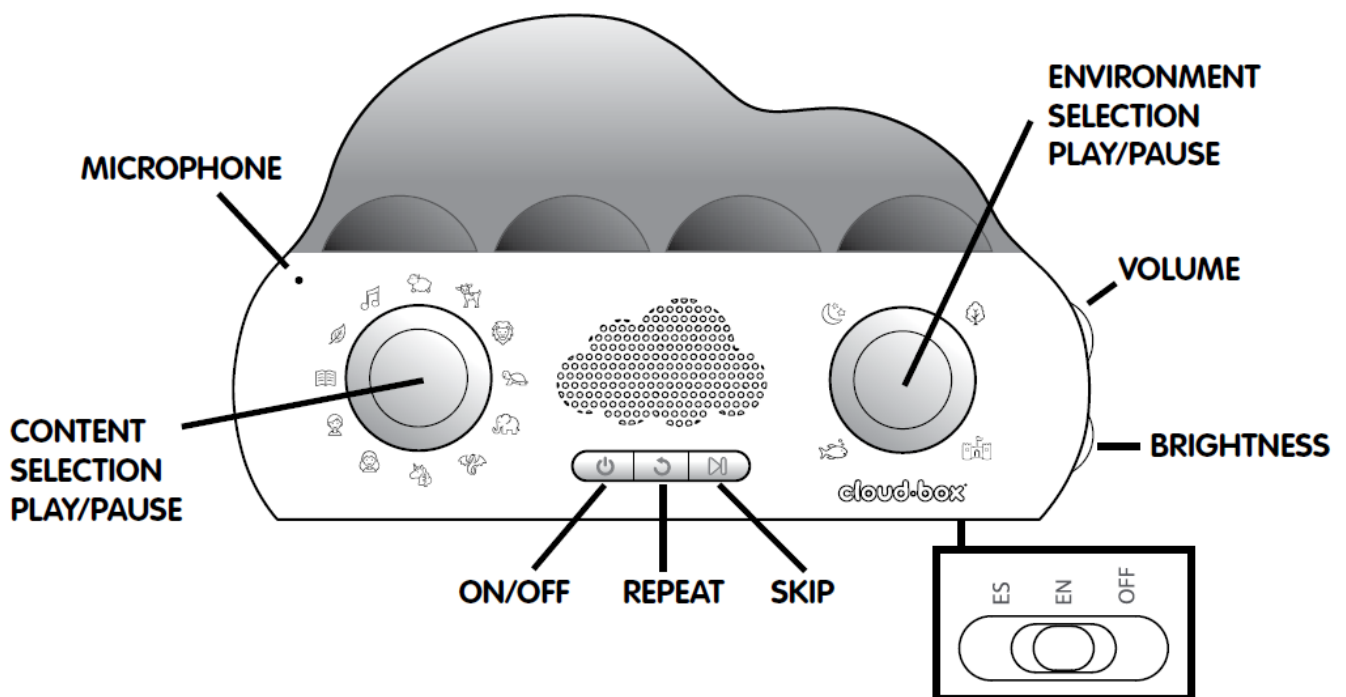


Getting Started





Your CloudBox Storyteller includes a USB charging cable. Plug the smaller connector (USB-C) into the back of the CloudBox. Plug the larger, rectangular USB connector into a USB power source. The LED above the USB-C connector will illuminate in RED to let you know the unit is charging. When the internal battery is fully charged, the LED will turn GREEN. (Note: unit will not operate while charging or if plugged in).

On the bottom of the unit is a 3-position slide switch. Slide the switch from "Off" to the desired language. (Note: if the unit will not be used for a long period of time, slide the bottom switch to the OFF position.)







Press the  button on the front panel to turn on the CloudBox. The 2 large knobs allow you to select sound modes, characters and environments.

Left Knob Selections

-  play 8 melodies
-  play 8 Nature Sounds
-  make custom recordings
-  select a character
- Characters: Sheep, Fawn, Lion, Turtle, Elephant, Dragon, Unicorn, Little Girl, Little Boy.

Right Knob Selections

-  Amber projection, Star pattern
-  Green projection, Forest pattern
-  Blue projection, Ocean pattern
-  Red projection, Village pattern


Note: although you select the primary environment, the light patterns automatically change to match the action in each story.

Due to the unique shape of the CloudBox, you might notice some distortions in the projections.

Listening to Stories

Use the left knob to select one of the 9 characters. Use the right knob to select the Environment. Press the center of either knob to play the story. If you want to pause the story at any point, press either knob again.



Each character has 4 stories. To hear the same character in the next environment, press the  button on the

bottom right or turn the Right Knob. To start the current story over again, press the button  in the center bottom. After your story ends, the projection will illuminate for 2 15 minutes, then shut off.

- There are 2 rotating dials on the right side of the CloudBox. Turn the top dial to adjust volume. Turning the dial to the lowest setting turns the sound OFF.
- Turn the lower dial to adjust the brightness of the projections. Turning the dial to the lowest setting turns the projection LEDs OFF.





Playing and Selecting Melodies

Select the icon  to listen to melodies; then select one of the 4 environments. There are 2 melodies in each environment. Press the Right Knob to begin playing the first melody. Press the button  to go to the second melody, or turn the knob to change environments. Each melody will play for 20 mins.





Playing and Selecting Nature Sounds

Select the icon  to listen to Nature Sounds; then select one of the 4 environments. There are 2 Nature Sounds in each environment. Press the Right Knob to begin playing the first Nature Sound. Press the button  to go to the second sound or turn the knob to change environments. Each sound will play for 20 mins.




Repeat

Pressing the  button will restart any story at the beginning. Pressing  the button while listening to Melodies or Nature Sounds will reset the timer.


Repeat Mode

If you would like to hear all 4 stories for any one character, select the character, select any environment, then

press  the button instead of the Play buttons. The CloudBox will play all 4 character stories in a row, starting with the environment you have selected. If you use Repeat Mode with Melodies or Nature Sounds, the unit will play both sounds in the selected environment.




Recording a Custom Story

Select the  icon on the left knob. Select one of the 4 environments on the Right Knob. PRESS the left knob and the right knob at the same time and then release them. The CloudBox will “beep” to confirm that it has started to record. There is a microphone behind the small opening on the top left of the front panel. Speak clearly with the microphone 12-15 cm from your mouth. When you have finished your story, press either knob to stop recording. The CloudBox will beep twice to confirm that it has stopped recording. You can record a story for each of the 4 environments. Your stories must be shorter than 8 minutes. If you get near the end of the recording time, the projection LEDs will illuminate and then go off one at a time to indicate the recording time is over. To erase a recorded story, press the Left knob and Right knob simultaneously then release. When the CloudBox “beeps” to confirm recording has started, press both buttons again without making any sound and the old recording will be erased.

Playing a Custom Story



Select the icon  then select one of the 4 environments where you saved a story. Press Play to start your story and the matching projection. After your story ends, the CloudBox will keep the projection on to serve as a soothing nightlight for 15 minutes.



Headphone Jack

Your CloudBox includes a 3.5 mm headphone jack on the left panel. Headphones not included.



Recharging the CloudBox

If the sound volume or LED brightness diminish, re-charge the unit. The charge indicator LED turns green when the batteries are fully recharged. Note: If the Cloudbox shuts down due to a low battery, it must be restarted to restore its initial functions. To restart the device, move the slide switch on the bottom to "OFF" and then to the desired 4 language.

LEGAL

Adult Note: Read the instructions and warnings before use. A storybook is provided with the product. Product is not intended for use in crib. Do not leave infant unattended with product. Please retain packaging and instruction sheet for future reference and contact information. Remove any stickers or plastic attachments and discard all small pieces safely. Discard all broken toys. In an effort to continually improve our products, contents may vary slightly from that shown on packaging. Visit www.cloudb.com for warranty information and more safety tips.

WARNING

Battery is not replaceable. To avoid risk of fire, the CloudBox product must only be charged by an external USB power source with an output of 5.0V, 0.5A. Batteries should only be recharged under adult supervision. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting a battery can result in an explosion. Leaving the battery in an extremely high-temperature environment can result in an explosion or the leakage of flammable liquid or gas. Do not place flammable materials on top of the Li-ion batteries when charging or it may result in overheating, explosion or fire. Do not throw or drop the CloudBox electrical device from a high place. Do not drive a nail into the Li-ion battery, or hit it with a hammer, or step on it with your feet. Do not spill any liquids on the CloudBox electrical device. Do not disassemble Li-ion batteries. Regularly examine the supply cord, plug, enclosure and all other parts for damage. In the event of damage, do not use product until any damage is repaired.

WARNING: The charging cable provided with this product is not a toy and is only to be used by an adult. Keep away from children.

WARNING

When recharging battery, only use the specified detachable supply unit (5.0v,0.5A). Battery acid leakage can cause personal injury and cause damage to your Cloud b product and surrounding property. If battery leakage occurs, thoroughly wash any affected skin, making sure to keep battery acid away from eyes, ears, nose and mouth. Immediately wash any clothing or other surface that comes into contact with leaked battery acid. Leaking batteries may make "popping" sounds.

Complies with U.S. and International safety standards EN71, ASTM F-963, Canadian Hazardous Products (Toys) Regulations, CRC c931. Complies with EMC directive.

Copyright covers 3D and 2D artwork, text and photographs. Made In China.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MODIFICATION: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

Caring for the CloudBox

To clean your CloudBox, disconnect it from any power source and slide the switch on the bottom to the OFF position. Avoid getting any liquids or moisture on the controls or in the ports. Wipe exterior surfaces gently with a soft, lint-free dry (or slightly damp) cloth. Do not use cleaning agents that contain solvents, chlorides, chemicals or abrasives. Be sure the CloudBox is completely dry before using or connecting to any power source.



CloudBox Unit Instructions

The diagram shows a top-down view of the CloudBox unit with various components labeled: Motherboard, RAM, Hard Drive, Power Supply, and others. A small inset shows the unit's side profile.

CloudBox 2L Storyteller [pdf] Instructions

2L Storyteller, 2L, Storyteller

- [!\[\]\(42d21e58927ef419cc45be9cb0912795_img.jpg\) Cloud.b - Enjoy Your Dreams - Nightlights, White noise, Plush toys – cloud.b](#)
- [!\[\]\(0e8ca49ae1b731335da03d9e00d62582_img.jpg\) Cloud.b - Enjoy Your Dreams - Nightlights, White noise, Plush toys – cloud.b](#)
- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.