

CLOUDRAY EzCad2 Software Instruction Manual

[Home](#) » [CLOUDRAY](#) » CLOUDRAY EzCad2 Software Instruction Manual 



Contents

- 1 EzCad2 Software
- 2 Documents / Resources

EzCad2 Software

The EzCad2 software runs on a PC with 900 MHz CPU and 256 MB RAM at least. In general, we recommend the fastest PC available. EzCad2 was developed in Microsoft Windows XP and will run in Windows XP, WIN7, WIN10 and VISTA.

The installation of EzCad2 is very easy. Users simply need to copy the EzCad2 folder that is in the Install FOLDER to hard disk, and then double click the Ezcad2.exe under the EzCad2's directory to run the software.

If user runs the software without connecting the fiber laser, a caution will appear and the software will work at demo state. In demo state, we can evaluate the software but we cannot save files and cannot control laser device.




The Software, Driver and Correction file are in the U-disk that came with the fiber machine. Turn on the fiber laser. Connect your fiber laser and PC via USB cable.




Before going to the next step, please save the Driver file in the U-disk to your computer, and remember where it is.


Device manager >> Other devices >> USB LMCV4 >> Right click, Update driver >> Browse my computer for driver software >> Browse, and find the Cloud ray folder you saved from the U-disk that came with the fiber laser >> Select the LMCV4 driver >> Next >> Install, then the driver is installed successfully >> Send EzCad2 to the desktop shortcut. As below pictures:

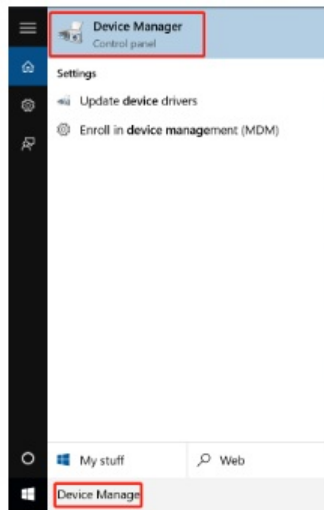


Pic 1

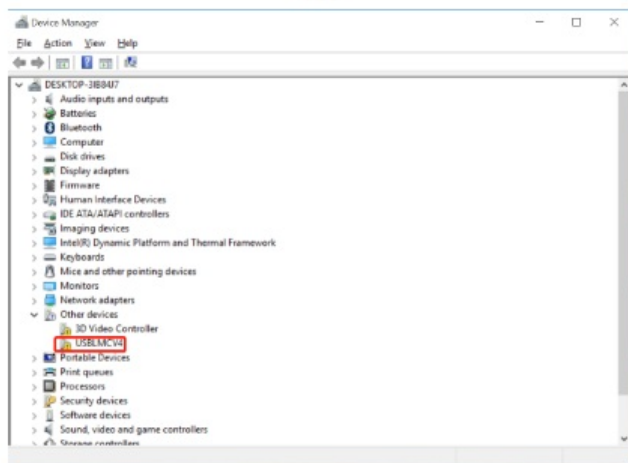


Pic 2

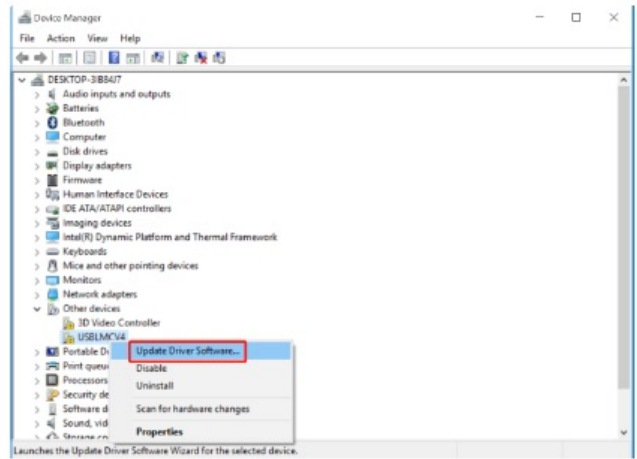


Pic 3

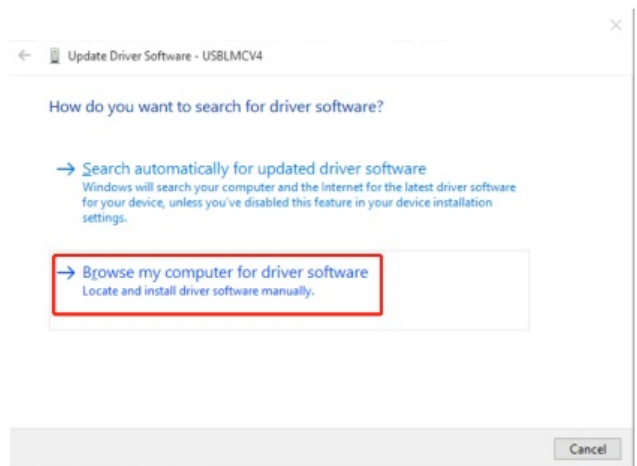


Pic 4

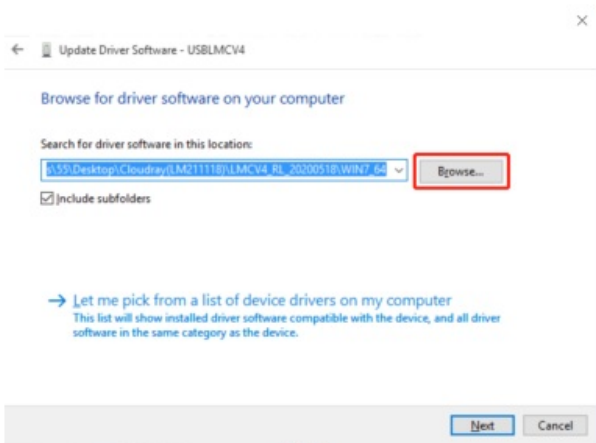


Pic 5

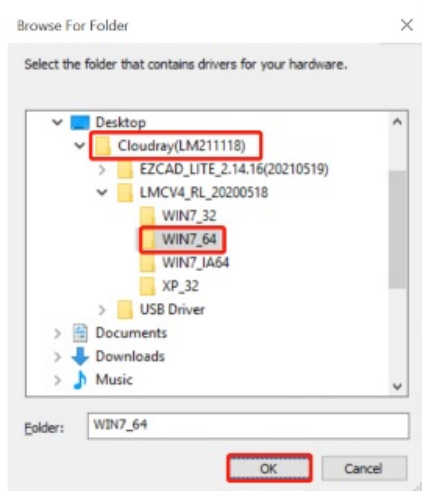



Pic 6

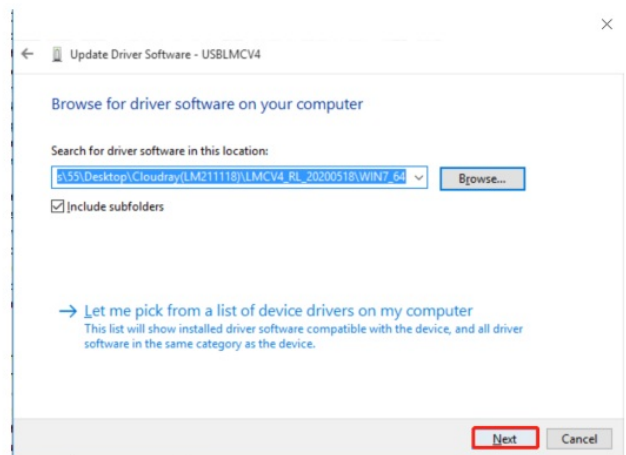


Pic 7

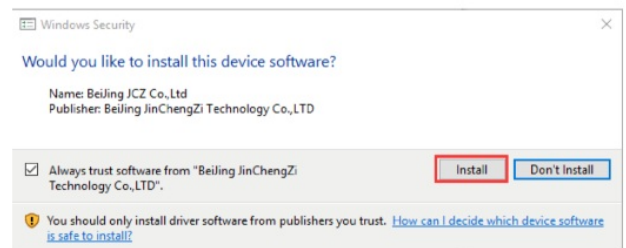

Pic 8

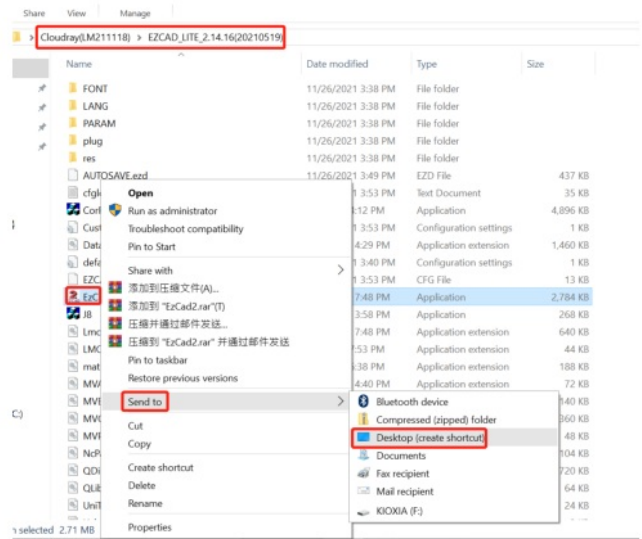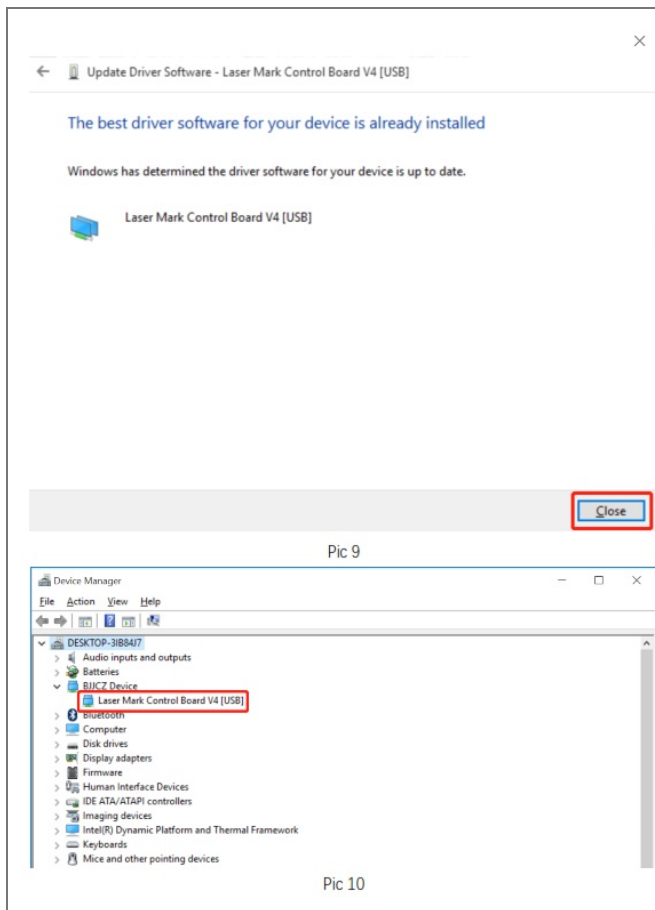

Documents / Resources

	<p>CLOUDRAY EzCad2 Software [pdf] Instruction Manual EzCad2 Software, EzCad2, Software</p>
---	--