

CMOS Vlogging Camera Rechargeable Digital Cameras



CMOS Vlogging Camera Rechargeable Digital Cameras User Guide

[Home](#) » [CMOS](#) » CMOS Vlogging Camera Rechargeable Digital Cameras User Guide 

Contents

- 1 CMOS Vlogging Camera Rechargeable Digital Cameras
- 2 How to Find the Camera Seller
- 3 Summary of product usage steps
- 4 How to insert and remove SD card
- 5 How to Format Micro SD Card
- 6 How to Charge the Camera
- 7 How to take photos and videos
- 8 How to view and delete photos and videos
- 9 How to download still image / video files to computer
- 10 How to use camera as webcam
- 11 Documents / Resources
 - 11.1 References

CMOS

CMOS Vlogging Camera Rechargeable Digital Cameras



Any questions please contact us

How to Find the Camera Seller

Dear customer:

Hello ! Thank you very much for purchasing our digital camera ! We are committed to improving the quality of life and recording a better life. Your purchase is just the beginning of our service!

During use,if you have any questions,please feel free to contact us for a quick solution:

Find a seller

Find a seller: **Sign in to Amazon** → **Your Account**

Your Order → **Ask a Product Question**

Your satisfaction is our ultimate goal!

Summary of product usage steps

How to insert and remove the battery

1. Open the battery cover
2. Insert the battery and keep pressing until the battery is locked by the battery lock.
3. Close the battery cover
4. If you want to remove the battery please push the battery lock lever and remove the battery.



1.Open the battery cover



2.Insert the battery and keep pressing until the battery is locked by the battery lock.



 
 
3.Close the battery cover



4.If you want to remove the battery please push the battery lock lever and remove the battery.

How to insert and remove SD card

1. As shown by the illustration,Please insert the card,keep pressing until the SD card is locked,you will hear a "click" sound.Metal contacts side

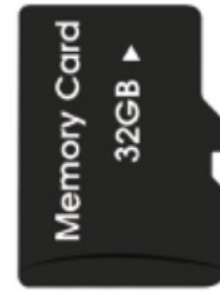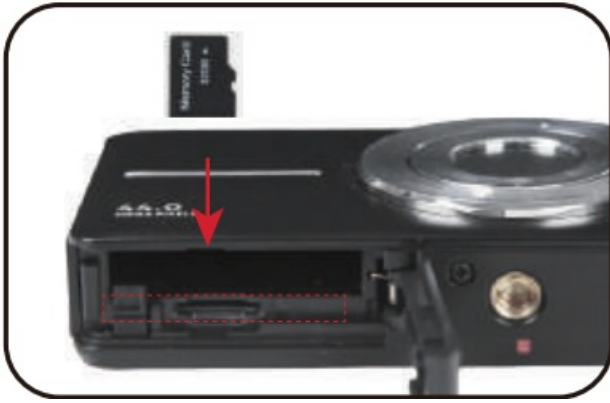

Metal contacts side

2. Please caution: The camera supports 4-32 GB SD card, Class 10 is recommended, we do not recommend using U3 level card.
3. When the SD card is used for the first time, please format it in the camera.
4. Please insert the SD card when the camera turned off then turn it on.

How to Format Micro SD Card


1. Press the button on the bottom of the camera
2. Search for "Format" in the settings
3. Click Format.



1. Press the button on the bottom of the camera



2. Search for "Format" in the settings

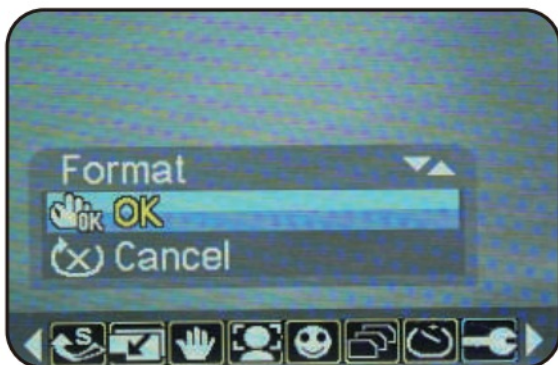

3. Click Format.

How to Charge the Camera

1. Please use the USB cable to charge the camera.



 
2. The red indicator light will light up when charging.
3. The red light turns off when fully charged.
4. A blinking red light means the camera is not properly inserted into the battery.

How to take photos and videos

1. After booting, the default setting is camera mode, and you can take pictures by pressing the shutter button after booting.



2. Press the "M" key to select different camera modes, including video. After selecting a mode, press the shutter button.

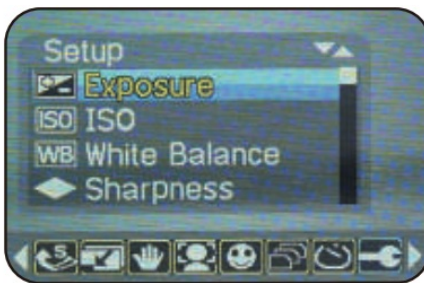


How to view and delete photos and videos

1. Press the "M" key to view photos, press 1-2 times.




2. Just press the delete button to delete.

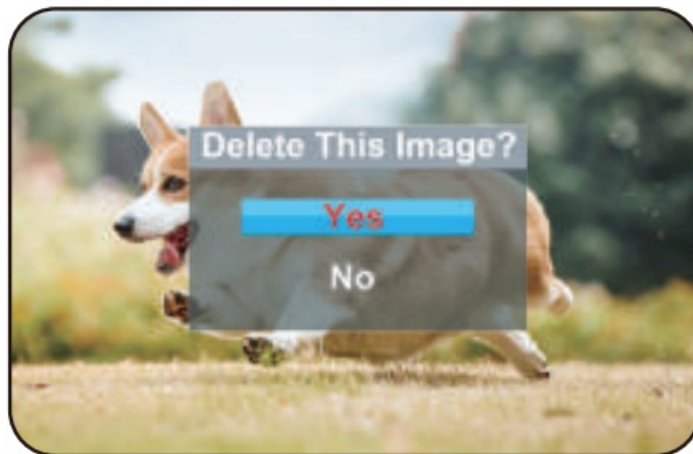

How to download still image / video files to computer


 
1. Please use the Mini USB cable (in the package) to connect the computer,when camera is on.
2. After the connection is completed,a dialog box will pop up randomly on the camera screen.
3. Please select MSDC,then you can download the files from the camera to your computer.
4. After downloading,please remove the cable and the camera will exit MSDC mode.

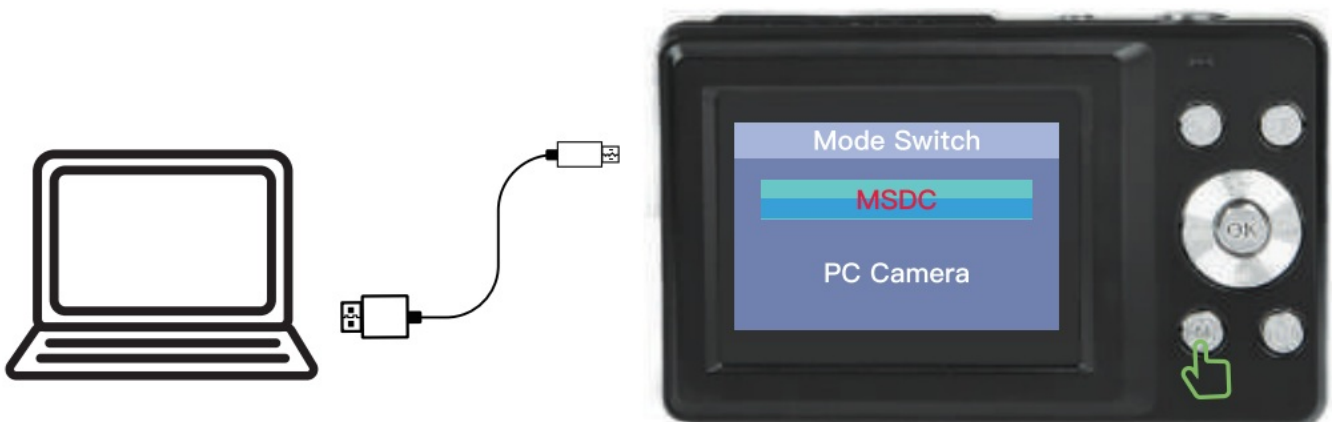


How to use camera as webcam

1. Please use the Mini USB cable (in the package) to connect the computer.
2. After the connection is completed, a dialog box will pop up randomly on the camera screen.
3. Please select "PC camera" then you can use the camera as webcam on the computer.

  4. After using, please remove the cable and the camera will exit webcam mode.

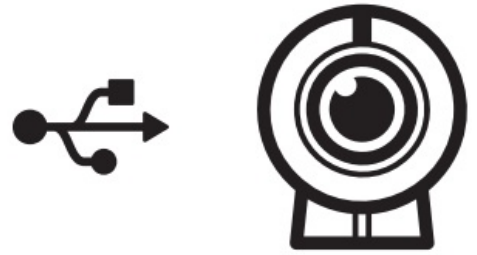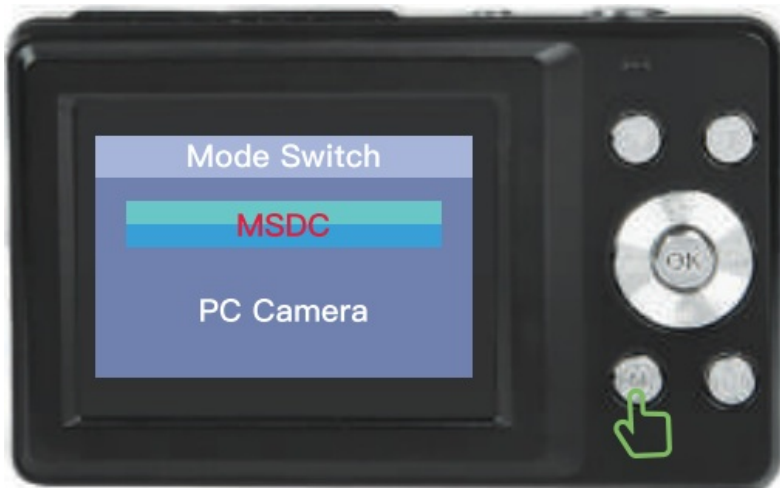

Documents / Resources

 <p>Quick Start Guide</p> <p>Any questions please contact us</p>	<p>CMOS Vlogging Camera Rechargeable Digital Cameras [pdf] User Guide Vlogging Camera Rechargeable Digital Cameras, Vlogging, Camera Rechargeable Digital Cameras, Rechargeable Digital Cameras, Digital Cameras, Cameras</p>
--	---

References

- [User Manual](#)

[Manuals+ Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.