



# CO-Z V20220818 Self Winding Double Watch Rotator Box User Manual

[Home](#) » [CO-Z](#) » CO-Z V20220818 Self Winding Double Watch Rotator Box User Manual 

## Contents

- [1 CO-Z V20220818 Self Winding Double Watch Rotator Box](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Disclaimer](#)
- [5 Safety Information](#)
- [6 Specifications](#)
- [7 Package List](#)
- [8 Product Diagram](#)
- [9 Operation](#)
- [10 Maintenance](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)



**CO-Z V20220818 Self Winding Double Watch Rotator Box**



## Product Information

### Specifications

- **Power Cord:** Included
- **Input Power:** [Input Power]
- **Output Power:** [Output Power]
- **Compatible Battery Type:** [Compatible Battery Type]
- **Watch Capacity:** [Watch Capacity]
- **Turntable Diameter:** [Turntable Diameter]
- **Cushion Size:** [Cushion Size]
- **Dimensions:** [Dimensions]
- **Net Weight:** [Net Weight]

## Product Usage Instructions

### Safety Information

**Warning!** This mechanical watch winder maintains the service of active watches but CANNOT by itself restart completely stopped ones. Manually wind any such stopped watches before placing them on the winder. Similarly, this winder's turntable is bidirectional, alternating between clockwise and anti-clockwise rotation. It is unsuited for use with watches with a unidirectional bezel, such as most premier diving watches.

### Operation

1. Open the cover of your watch winder and take out one of the cushions.
2. Loosen your watch strap, place the watch on the cushion wrapping the strap around it, and refasten the strap.
3. Fit the cushion back into place on its turntable.
4. Repeat as needed, using only one watch per cushion. Close the cover.
5. Connect the winder to a stable compatible power source using the provided power cord or fit 2 AA batteries (not included) into the compartment at the bottom of the device.

6. Flip the power switch on the back of the winder to “I”. The turntable will rotate clockwise for 2 minutes, pause for 6 minutes, rotate anti-clockwise for 2 minutes, and pause for 6 minutes again before restarting the cycle. For best results, rotate your watches for at least 3 hours each time.
7. When finished, turn off the turntable by flipping the power switch to “O”. Unplug it if using a wall socket or extension cord.

## Contact Us

Thank you for choosing our products! If you have any questions or comments, contact us at [help@cs-supportpro.com](mailto:help@cs-supportpro.com) and we'll resolve your issue ASAP!

## FAQ

- **Q: Can I use this watch winder with diving watches?**

A: No, this watch winder is unsuited for use with watches with a unidirectional bezel, such as most premier diving watches.

- **Q: How long should I rotate my watches on the winder?**

A: For best results, rotate your watches for at least 3 hours each time.

## Disclaimer

This mechanical watch winder maintains the service of active watches but CANNOT by itself restart completely stopped ones. Manually wind any such stopped watches before placing them on the winder. Similarly, this winder's turntable is bidirectional, alternating between clockwise and anti-clockwise rotation. It is unsuited for use with watches with a unidirectional bezel, such as most premier diving watches.

## Safety Information

### Warning

- ONLY use this device on stable level surfaces.
- DO NOT place this device near any flammables or explosives.
- DO NOT let children or persons with compromised physical or mental capabilities use this device without close supervision.
- DO NOT get this device wet or operate it with wet hands.
- To use an external power source, make sure it is stable and compatible with this device. ONLY use the provided power cord with this device and unplug it between uses.
- Store out of the reach of children.

 
 
 
## Specifications

Power Cord	Input Power	100–240 V~ 50/60 Hz	
	Output Power	3V 1.2A	
Compatible Battery Type		2 × AA	
Watch Capacity		2	
Turntable Diameter		12.5 cm	4.9 in.
Cushion Size		6.2 × 4.2 × 3 cm	2.4 × 1.9 × 1.2 in.
Dimensions		18.2 × 18 × 20.8 cm	7.2 × 7.1 × 8.2 in.
Net Weight		1.9 kg	4.2 lb.

**Package List**

Item	Name	Qty.
A	Watch Winder	1
B	Power Cord	1
C	Cleaning Cloth	1
D	Fabric Bag	1

**Product Diagram**

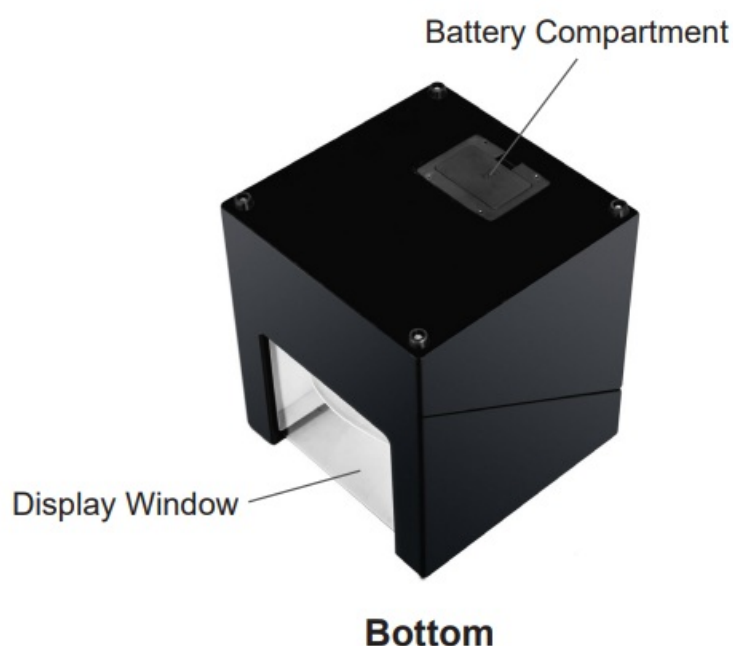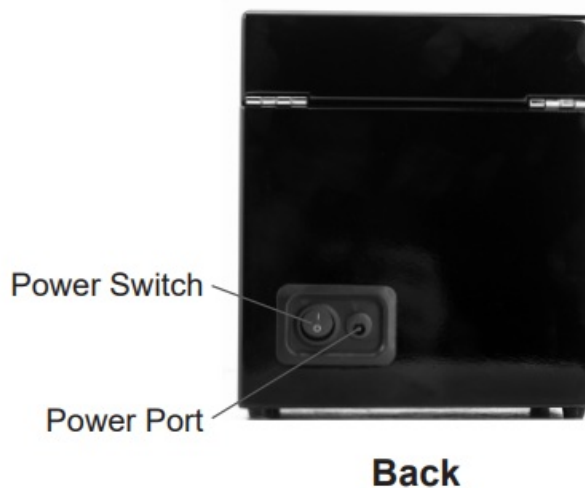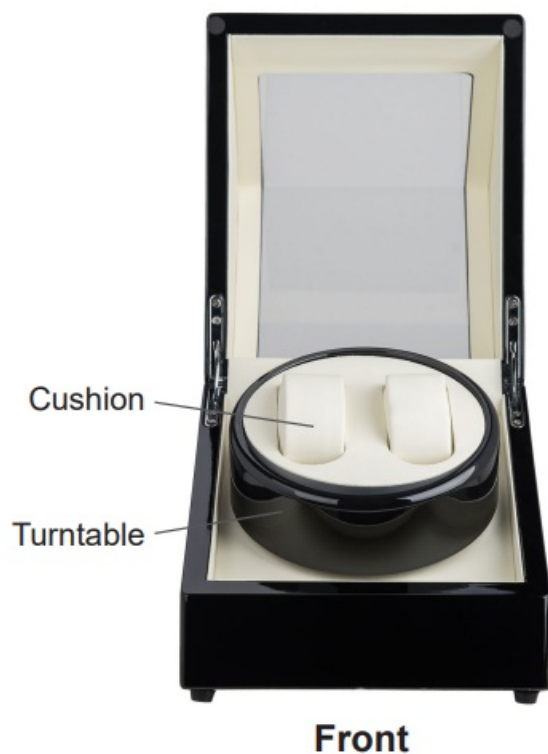

## Operation

1. Open the cover of your watch winder and take out one of the cushions. Loosen your watch strap, place the watch on the cushion wrapping the strap around it, and refasten the strap. Fit the cushion back into place on its turntable.
2. Repeat as needed, using only one watch per cushion. Close the cover.
3. Connect the winder to a stable compatible power source using the provided power cord or fit 2 AA batteries (not included) into the compartment at the bottom of the device.
4. Flip the power switch on the back of the winder to I. The turntable will rotate clockwise for 2 minutes, pause for 6 minutes, rotate anti-clockwise for 2 minutes, and pause for 6 minutes again before restarting the cycle. For best results, rotate your watches for at least 3 hours each time.
5. When finished, turn off the turntable by flipping the power switch to O. Unplug it if using a wall socket or extension cord.

## Maintenance

- Clean the exterior of your watch winder with the provided cloth as needed. Do not use abrasive cleaners or

caustic chemicals.

- If any part of the winder is damaged or shows signs of malfunction, have it repaired or replaced before further use.
- If the winder will not be used for a prolonged period of time, cut off its power before storing in a cool dry place away from direct sunlight and inaccessible to children.


### Contact Us

Thank you for choosing our products! If you have any questions or comments, contact us at [help@cs-supportpro.com](mailto:help@cs-supportpro.com) and we'll resolve your issue ASAP! For a .pdf copy of the latest version of these instructions, use the appropriate app on your smartphone to scan the QR code to the right.



---

### Documents / Resources

	<p><a href="#">CO-Z V20220818 Self Winding Double Watch Rotator Box</a> [pdf] User Manual V20220818 Self Winding Double Watch Rotator Box, V20220818, Self Winding Double Watch Rotator Box, Double Watch Rotator Box, Watch Rotator Box, Rotator Box</p>
---	---

### References

- 🍌 [Transparent outsourced web hosting tech support |SupportPRO](#)
- [User Manual](#)