



[Home](#) » [COASTER](#) » **Coaster 7 Piece Rectangular Dining Set Instruction Manual** 

Contents [[hide](#)]

[1 Coaster 7 Piece Rectangular Dining Set](#)

[2 INTRODUCTION](#)

[3 Tools Required](#)

[4 ASSEMBLY INSTRUCTIONS](#)

[5 CARE AND MAINTENANCE](#)

[6 Documents / Resources](#)

[6.1 References](#)

COASTER

Coaster 7 Piece Rectangular Dining Set


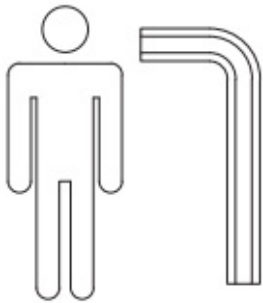











INTRODUCTION

Thanks for purchasing and trusting us with your home decorating plans. This product is a piece of furniture designed and made by us. We are committed to R&D and innovation, and creating the most exquisite and diverse outdoor series. After unpacking and before every use, check whether the item shows any damage.

In addition, check that you have all parts and hardware before assembly. If there is any damage, please do not use it and call customer service. If you do not have all the parts lists, have your dealer contact us, and we will send them to you immediately. This item of furniture is intended for indoor and outdoor use. Please take time to read and follow the instructions below. Then, use this item as described in this operating manual. We accept no liability for damage caused by improper use.


Tools Required

			
	Part Number	Images and Sizes	Qty.
	A		1
	B		1
	C		1
	D		1
	E	 M6*60	2
	F	 M6*15	10
	G	 M6	12
	H		1

ASSEMBLY INSTRUCTIONS

CAVEAT

Note: Please do not tighten any until all bolts have been put in the o right place. If you tighten one bolt, it may cause other out of position.

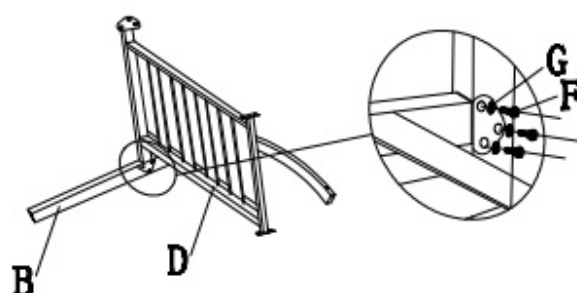


STEP 1

Assemble arm (B) to seat (D) with 3 washers (G) and 3 bolts (F). Do not screw down.

CAVEAT

Note: Please do not tighten any bolt until all have been put in the o right place. If you tighten one bolt, it may cause other bolts to be out of position.

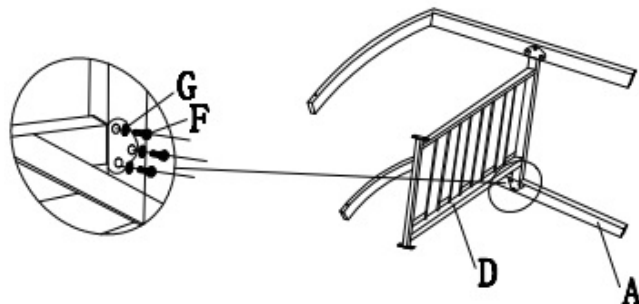


STEP 2

Assemble arm (A) to seat (D) with 3 washers (G) and 3 bolts (F). Do not screw down.

CAVEAT

Note: Please do not tighten any until all bolts have been put into the right place. If you tighten one bolt, it may cause other out of position.

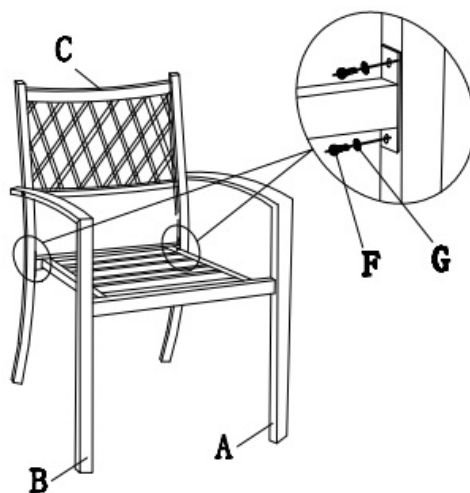


STEP 3

Assemble back (C) to seat(D) with 4 washers (G) and 4 bolts (F)-DO not screw down.

CAVEAT


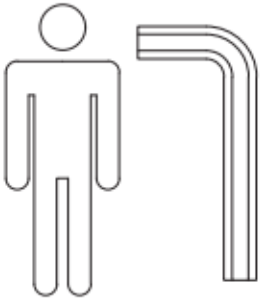

 


 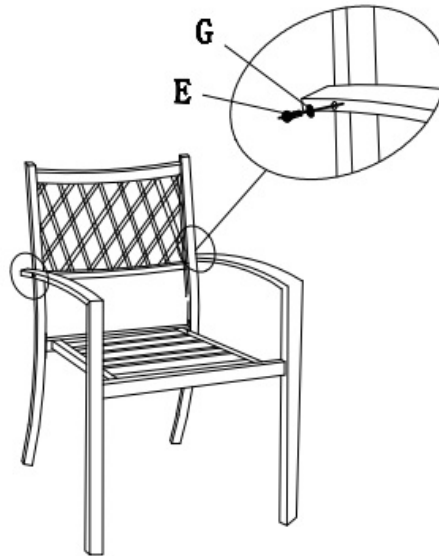


Note: Please do not tighten any bolt until all have been put inthe right place. If you

tighten one bolt, it may cause other bolts to be out of position.




STEP 4

Assemble back (C) to arms(A+B) with 2 washers (G) and 2 bolts (E). Do not screw down.
Tighten all screws.

			
	Part Number	Images and Sizes	Qty.
	A		1
	B		4
	C		1
	D	 M6*30	16
	E		16
	F		1

CAVEAT

Note: Please do not tighten any bolt until all bolts have been put into the right place. If you tighten one, it may cause other bolts to be out of position.

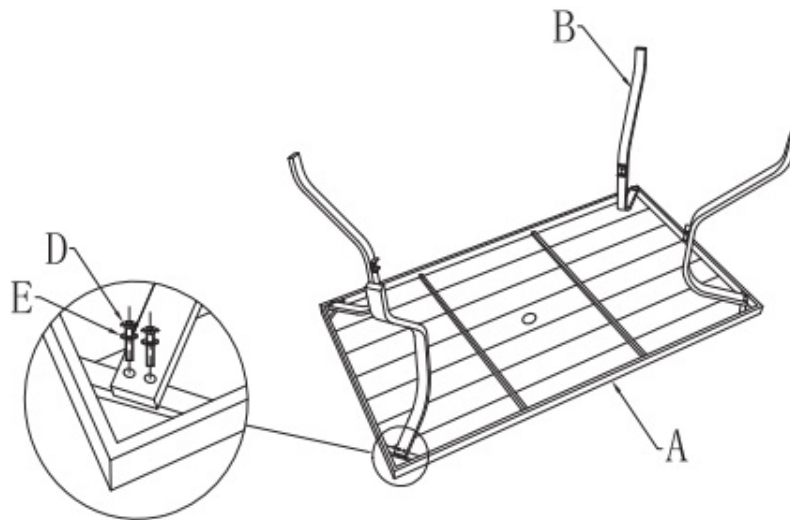


STEP 1

Attach 4 legs (B) to the table top (A) using 8 washers (E) and 8 bolts(D)- Do not screw down.

CAVEAT

Note: Please do not tighten any bolt until all bolts have been put in the o right place. If you tighten one bolt, it causes other bolts to be out of position.

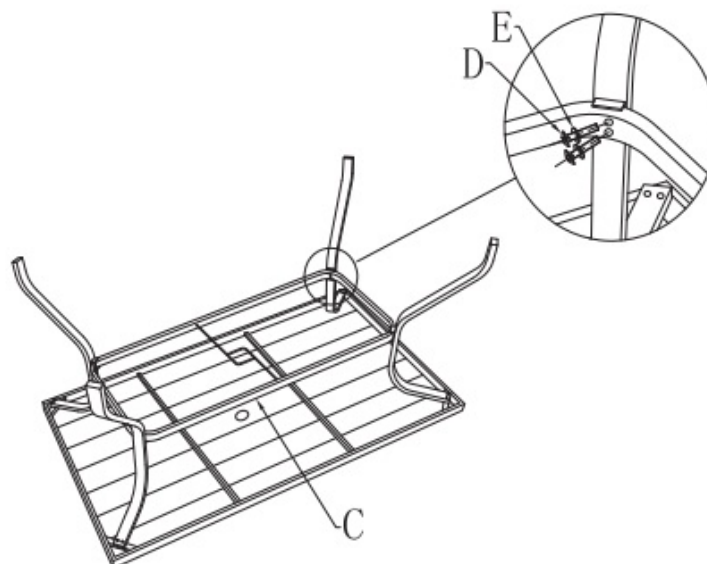

STEP 2


Attach the fix ring (C) using 8 washers (E) and 8 bolts(D). Do not screw down. Upon completion of full assembly and bolted wallscrews can be tightened down.

CARE AND MAINTENANCE

Follow instructions for the material of your special product to make sure that it stays in the best shape for as long as possible. The information below is only intended as a general guideline. For more information, please contact us.



- Only need to rinse it thoroughly with clean water to wash away dirt and grime.
- Never use abrasive cleansers on the furniture, since they can attack the surfaces and leave behind scratch marks.
- For the stubborn grime and stains, just use a soft sponge and mild soapy water, and then dry it with a cloth or paper towel.
- Check the stability of the screws, nuts,s and nutcap before each use.
- Tighten them up after one to two months' use whenever required.
- Avoid improper use, and be careful not to scratch or damage the surface with sharp objects.
- When you move your furniture, make sure you lift it rather than pulling or pushing it to avoid damaging the floor legs and mounting.

Documents / Resources

	Coaster 7 Piece Rectangular Dining Set [pdf] Instruction Manual nnug1152, W004863744, 7 Piece Rectangular Dining Set, 7 Piece Rectan gular Dining Set, Rectangular Dining Set, Dining Set, Set
---	--

References

- [User Manual](#)

 7 Piece Rectangular Dining Set, Coaster, Dining Set, nnug1152, Rectangular Dining Set, Set,
 COASTER W004863744

—

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.