

 


## **Contents** [ [hide](#) ]

- [1 COBAK KB25LY E-Reader Page Turner](#)
- [2 Introduction](#)
- [3 Package Contents](#)
- [4 Product Features](#)
- [5 How to Use](#)
- [6 Pairing the Devices](#)
- [7 Correct Use of Page Turner](#)
- [8 Page Turner Incorrect Use](#)
- [9 Warranty](#)
- [10 FCC Statement](#)
- [11 Frequently Asked Questions](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)



## **COBAK KB25LY E-Reader Page Turner**

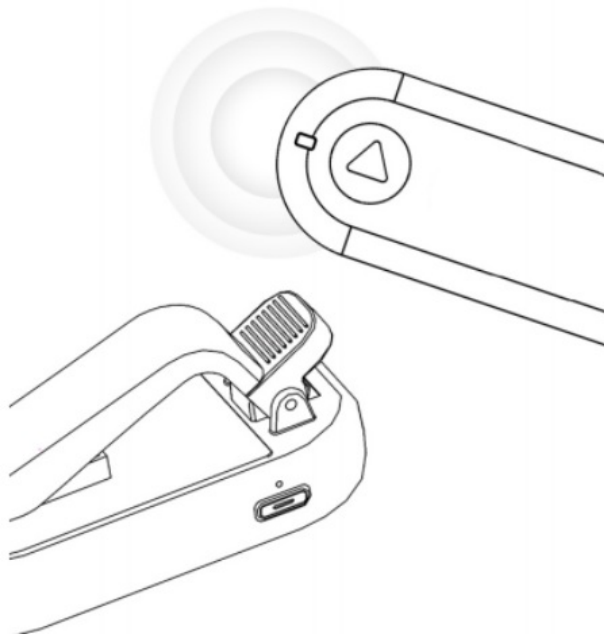


## Introduction

Thank you for choosing the CoBak Page Turner. This accessory includes a clip, a magnetic remote control, and a wrist strap for convenient use. It supports forward page turning, bringing a comfortable hands-free reading experience to your e-reader.

## Package Contents

 - Page Turner Clip (1 pc)
- Remote Control (1 pc)
- Wrist Strap (1 pc)
- USB-C Charging Cable (1 pc)
- User Manual



Page Turner Clip  
(1 pc)



 
Remote Control  
(1 pc)



Wrist Strap  
(1 pc)



USB-C Charging  
Cable (1 pc)



User Manual

## Product Features

- **Magnetic Docking:** The remote control attaches magnetically to the clip for storage and charging.
- **Shared Charging:** A single USB-C port charges both the clip and the remote simultaneously.
- **Wrist Strap:** Keeps the remote easily accessible and prevents accidental drops.

## How to Use

### Installing the Clip

- Attach the clip securely to the side of your e-reader.
- Make sure it does not block the screen.

### Using the Remote

- Attach the wrist strap to the designated hole and wear it around your wrist for convenience and safety.
- Use the forward button to turn pages.

### Charging

- Dock the remote onto the clip magnetically.

- Connect a USB-C cable to the clip's charging port.
- Both the clip and the remote will charge simultaneously.

## **Charging Indicator**

- Red Light – Charging
- Green Light / Off – Fully charged
- Charging time: ~3 hours

## **Auto Sleep & Wake**

- The clip will automatically enter sleep mode after 10 minutes of inactivity to conserve battery.
- To wake the clip, simply press the button on the clip.
- Tip: Before first use or after long storage, always press the clip button to activate the device.

## **Pairing the Devices**

### **Default Pairing**

- The clip and remote are pre-paired at the factory.

### **Re-Pairing**

- Press and hold the pairing button on the clip until the indicator light flashes blue.
- Press the button on the remote. The clip's indicator light will flash blue once to confirm successful pairing.

## **Correct Use of Page Turner**



The blue part of the page turner sensor contacts the blue area of the screen (shown on the right).



The readers screen senses the appropriate area.



Page Forward

Correct use of the single clip

## Page Turner Incorrect Use

**Stop!** You Might Be Using Your Page Turner Wrong.

### Why This Matters?

- Over-pressing triggers the device's rapid-scroll mode, disrupting your reading flow. Master the tap, and enjoy seamless navigation.
- Here are some common mistakes users make. Please avoid the following examples:
  - Wrong: Clamped to the left side of the screen
  - Wrong: Clamped on the upper/lower edges
  - Wrong: Clamped too far inside
  - Wrong: Not clamped in the reading area



**Wrong:** Clamped to the left side of the screen



**Wrong:** Clamped on the upper and lower edges



**Wrong:** clamped too far inside



**Wrong:** Not clamped in the reading area

## Safety Notes

- Do not disassemble.
- Avoid placing near strong magnetic or electronic interference.

## Warranty

This product comes with a 1-year warranty. For support, please visit our Amazon store or contact customer service.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

## **RF Exposure Information**

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

## **Frequently Asked Questions**

How do I charge the E-Reader Page Turner?


Dock the remote onto the clip magnetically and connect a USB-C cable to charge both devices simultaneously.

What should I do if the page turner is not working correctly?

Ensure the clip is correctly attached and not blocking the screen. Check the pairing



status and re-pair if necessary.

## Documents / Resources

	<a href="#">COBAK KB25LY E-Reader Page Turner [pdf]</a> User Manual KB25LY, KB25LY E-Reader Page Turner, E-Reader Page Turner, Page Turner, Turner
---	---

## References

- [User Manual](#)

 COBAK, E-Reader Page Turner, KB25LY, KB25LY E-Reader Page Turner, Page Turner,  COBAK Turner

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website



☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.