



Cobra CPP7510 Jum Pack Portable Jump Starter Power Pack User Manual

[Home](#) » [Cobra](#) » Cobra CPP7510 Jum Pack Portable Jump Starter Power Pack User Manual 



CPP7510 Jum Pack Portable Jump Starter Power Pack User Manual

Contents

- [1 CPP7510 Jum Pack Portable Jump Starter Power Pack](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 Operation](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

CPP7510 Jum Pack Portable Jump Starter Power Pack



Portable Power – Anytime, Anywhere!

Thank you for purchasing the Cobra CPP7510 JumpPack portable jump starter PowerPack. Before using this product, please read these instructions carefully to learn about the features and capabilities of the JumpPack and how to get the best performance.

Note: Please charge your CPP7510 JumpPack completely prior to using it for the first time. ©2016 Cobra Electronics Corp. Part No. 480-1075-P Printed in China Version A TM

The Cobra line of quality products includes:

- CB Radios
- Dash Cams
- Radar Detectors
- Marine VHF Radios
- Power Inverters
- Accessories

www.cobra.com

IMPORTANT SAFETY INSTRUCTIONS

Charge the JumpPack fully prior to use.

Precautions when working with the JumpPack:



WARNING: Keep the unit clear of fire and water.



WARNING: Shock Hazard. Keep away from children. Do not insert foreign objects into the Jump Start Cable Input, the USB Output Port, or the Charge Adapter Input Jack. Do not expose this product to water, rain, snow, condensation, or spray. Do not open the JumpPack to replace the internal battery. No user replaceable parts are inside the JumpPack.



WARNING: Explosion Hazard. Do not use this product where there are flammable fumes or gases, such as an inadequately vented bilge of a boat, or near propane tanks. Do not use this product in an enclosure containing automotive-type lead-acid batteries.

The Jump Start Cable clamps must be connected positive to positive (red clamp to battery [+]) and negative to negative (black clamp to battery [-]).



WARNING: Fire Hazard

Do not crush or puncture the JumpPack. Never allow the Jump Start Cable's red and black clamps' metal contacts to touch each other or another common metal conductor. This could cause damage to the unit and/or create a fire hazard. The jump start feature is designed only for starting vehicles, and Jump Start Cables must be disconnected

from the vehicle's battery and from the JumpPack once the vehicle starts.

When jump starting a vehicle with the JumpPack, turn the ignition key for no more than 3 seconds at a time.

Caution: Operating temperature

Do not expose the JumpPack to temperatures over +113° F (+45° C) or under -14° F (-10° C). Using the JumpPack at high or low temperatures may reduce the internal battery capacity and shorten the battery life.

Note: In extreme cold weather conditions, please store the JumpPack indoors for best results.

The JumpPack is supplied with a rechargeable Li-Cobalt battery.

This battery is self-contained and not consumer replaceable. Battery must be disposed of properly when it no longer holds a charge. Proper charging practices will increase the life of the batteries. For information on battery recycling call toll free 800-822-8837.


Precautions when working with vehicle batteries:



WARNING: Explosion and fire hazard

1. Follow all instructions published by the battery manufacturer and the manufacturer of the equipment in which the battery is installed.
2. Make sure the area around the battery is well-ventilated.
3. Never smoke or allow a spark or flame in the vicinity of the engine or batteries.
4. Be careful not to drop a metal object on the battery or allow a metal tool to simultaneously touch the positive and negative cable ends or battery terminals.
5. Remove personal metal items such as rings, bracelets, necklaces, and watches when working with batteries. Batteries produce a short-circuit current high enough to weld a ring or other similar objects to metal, causing a severe burn.
6. If you need to remove a battery, always remove the negative terminal from the battery first. Make sure all accessories are off to prevent causing a spark.
7. Someone should be within range of your voice, or close enough to come to your aid when you work near batteries.
8. Have plenty of fresh water, soap and a supply of baking soda on hand in the area of the batteries in case of contact with battery acid. Baking soda neutralizes lead acid battery electrolyte.

Product:

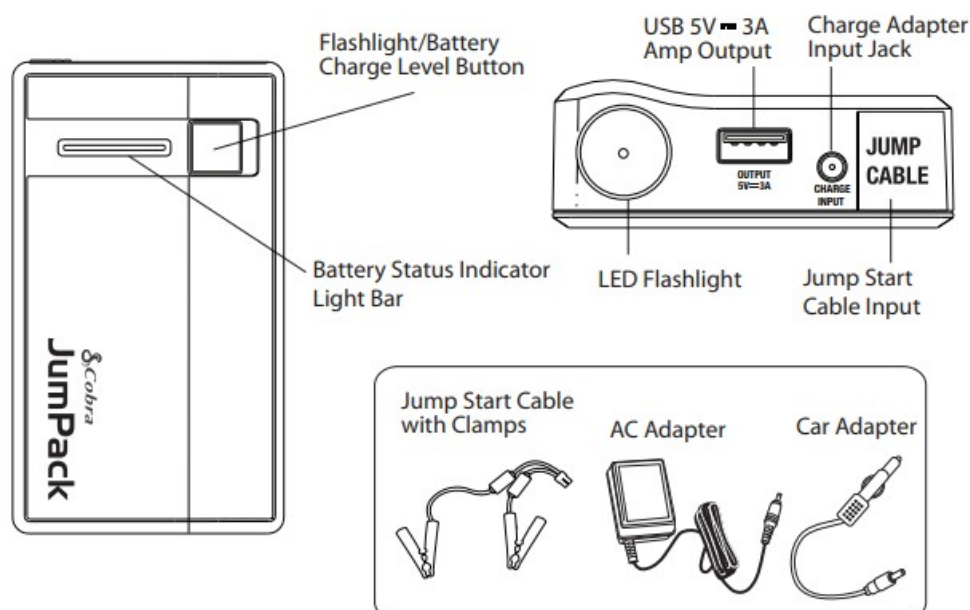

Operation


Recharging the JumpPack:

The CPP7510 JumpPack can be recharged with the supplied Car Adapter or with the supplied AC Adapter. When the CPP7510 is charging, the light bar will show the current battery charge level. The last section of the light bar that is lit will blink to show that the JumpPack is charging. When the JumpPack is fully charged the light bar will turn off automatically. For best battery performance the JumpPack should be fully recharged every 3 months.



Check Battery Charge Level:

To check the battery charge level of the JumpPack press the button on the top of the unit with no device connected. The green light bar will show the remaining battery charge level:

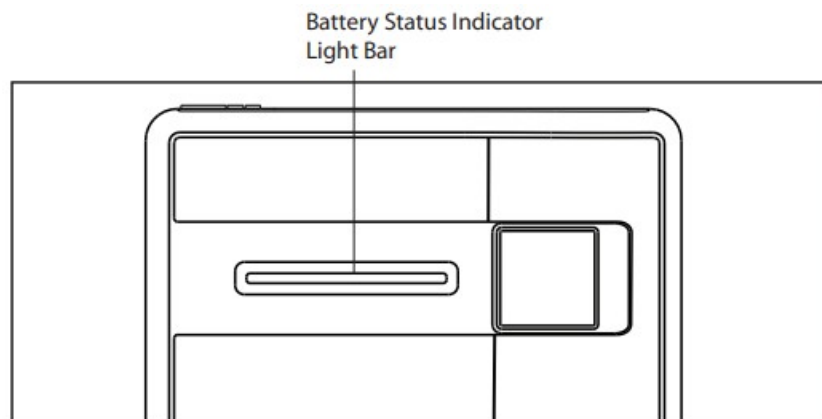

1st Section on: 10%-40% charge

2nd Section on: 40%-65% charge



3rd Section on: 65%-85% charge

4th Section on: 85%-100% charge

Note: When charging a device the section light may decrease because the JumpPack cannot accurately measure the capacity during rapid charging. To confirm the actual battery charge level, disconnect the device being charged and press the Flashlight/Battery Charge Level Button.


Checking the Fuse:

The Jump Start Cables are designed with an in-line fuse to protect the Jumpack in the event of an over-load condition. The Jump Start Cables include a clear case to that the in-line fuse is intact:

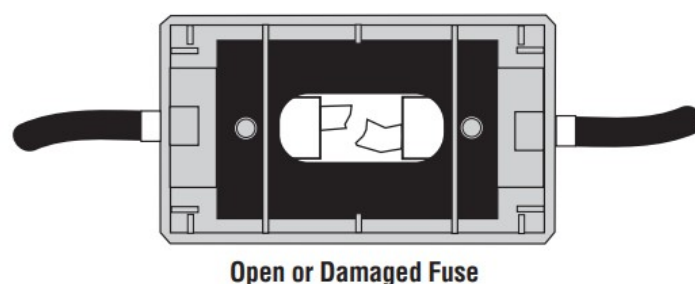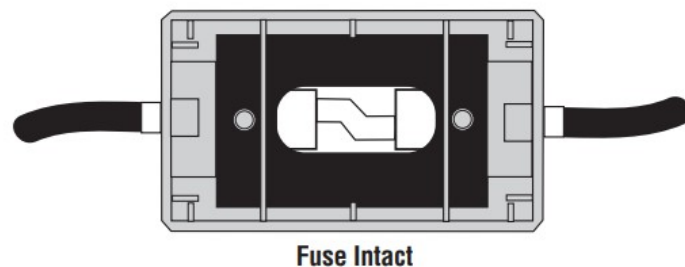

CAUTION: Do not use the Jump Start Cables if the fuse appears to be opened or damaged. For any questions, please call 773-889-3087 for assistance or visit us online at: www.cobra.com

Starting a Vehicle:

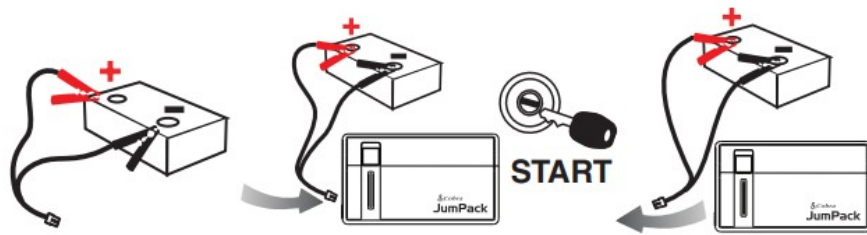

1. Make sure the JumpPack is fully charged.
2. Turn off all the accessories on the vehicle.
3. Connect the RED clamp to the POSITIVE post of the battery.
4. Connect the BLACK clamp to the NEGATIVE post of the battery.
5. Connect the Jump Start Cable into the Jump Start Cable Input.
Be sure that the plug is firmly pressed into the JumpPack.
6. Turn the ignition key to start the vehicle. Do not crank the ignition for more than 3 SECONDS at a time.
7. If the vehicle does not start on the first try, WAIT FOR 1 MINUTE before trying to start the vehicle again.

NOTE: If your vehicle does not start after 3 attempts, consult with a mechanic.

If the engine starts:

8. Immediately disconnect the Jump Start Cable from the JumpPack, then from the battery posts.
9. Leave the engine running for at least twenty minutes to allow the vehicle's battery to recharge.

Starting a Vehicle continued:

NOTES: The JumpPack is designed for gasoline powered passenger cars in good working order and with batteries that are not damaged but require assistance commonly due to leaving lights on, cold temperature, or sitting unused for limited periods of time. The JumpPack jump starter uses a special high current battery to provide up to 400 peak amps to start your engine. It can provide 200 amps starting current to jump start up to 3 cars on one charge. After this, the unit must be recharged.


The JumpPack is intended to jump start a vehicle with a battery that is not completely discharged.

Charging a 5V USB Device:

To charge a 5V USB device, connect the device's cable to the JumpPack's USB output.

The JumpPack will turn on and start charging the device automatically. The green light bar will indicate the device is charging.

Once the device reaches its charge capacity and ceases charging, the light bar will turn off.

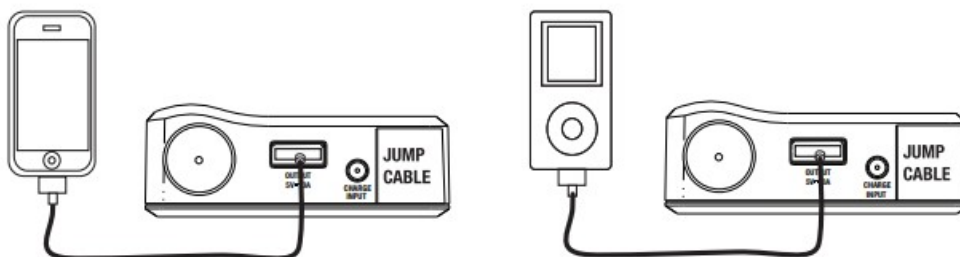


Product Features:

LED Flashlight:

Press the Flashlight/Battery/Charge Level Button for 3 seconds to turn on the LED flashlight. Press again to activate the strobe function. Press again to activate the SOS function. Press again to turn Off.

- Lithium Cobalt rechargeable battery.
- 200 Amp Starting Current / 400 Amp Peak Current.
- 5V/3 Amp USB Output for rapid charging of portable devices.
- High Intensity work LED light, strobe and SOS .
- Rechargeable by car adapter, or 120 VAC Wall Adapter.

Product Specification:

• Li-Cobalt rechargeable battery:	11.1V/28Wh
• Size:	5.03" x 2.87" x 0.98" (128mm x 73mm x 25mm)
• Weight:	10.58 oz. (300g.)
• Recharge times:	car or home – 4 hours
• Starting/Peak Current:	200 Amps/400 Amps
• USB Output:	5V  3 Amps

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

WARNING: Any modifications made to this device that are not expressly approved by party responsible for compliance could void the user's authority to operate this device. Cobra and the snake design are registered trademarks of Cobra Electronics Corporation, USA.

Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA.

PROPOSITION 65 WARNING: This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Limited 1-Year Warranty:

For Products Purchased in the U.S.A.

Cobra Electronics Corporation warrants that its Cobra CPP7510 JumPack Charger, and the component parts thereof, will be free of defects in workmanship and materials for a period of one year from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A.

Cobra will, without charge, repair or replace, at its option, defective products or component parts within the warranty period upon delivery to the Cobra Factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt. You must pay any initial shipping charges

required to ship the product for warranty service, but the return charges will be at Cobra's expense, if the product is repaired, this warranty gives you specific rights, and you may also have other rights which vary from state to state.

Exclusions: This limited warranty does not apply:

1. To any product damaged by accident.
2. In the event of misuse or abuse of the product, or as a result of unauthorized alterations or repairs.
3. If the serial number has been altered, defaced or removed.
4. If the owner of the product resides outside the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty.

Cobra shall not be liable for any incidental, consequential or other damages; including, without limitation, damages resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

For Products Purchased Outside The U.S.A.

Please contact your local dealer for warranty information.

Product Service:

For any questions about operating or installing this new Cobra product, or if parts are missing...PLEASE CALL COBRA FIRST...do not return this product to the store. If this product should require factory service, please call Cobra before sending the product. This will ensure the fastest turn-around time on any repair.

If Cobra asks that the product be sent to its factory, the following must be furnished to have the product serviced and returned:

1. For Warranty Repair include some form of proof-of-purchase, such as a mechanical reproduction or carbon of a sales receipt. Make sure the date of purchase and product model number are clearly readable. If the originals are sent, they cannot be returned;
2. Send the entire product;
3. Enclose a description of what is happening with the product. Include a typed or clearly printed name and address of where the product is to be returned, with phone number (required for shipment);
4. Pack product securely to prevent damage in transit. If possible, use the original packing material;
5. Ship prepaid and insured by way of a traceable carrier such as United Parcel Service (UPS) or Priority Mail with delivery confirmation to avoid loss in transit to: Cobra Factory Service, Cobra Electronics Corporation, 6500 West Cortland Street, Chicago, Illinois 60707 U.S.A.;
6. If the product is in warranty, upon receipt of the product it will either be repaired or exchanged depending on the model. Please allow approximately 3 – 4 weeks before contacting Cobra for status. If the product is out of warranty, a letter will automatically be sent with information as to the repair charge or replacement charge.

For any questions, please call 773-889-3087 for assistance or visit us online at: www.cobra.com

Customer Support & Trademarks:

Customer Support

Should there be any problems with this product or further information needed on its features please visit www.cobra.com for support, frequently asked questions, Declarations of Conformity, and the electronic manual.

Waste Electrical and Electronic Equipment Information

This product has required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment, if not properly disposed. In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems for product disposal. Those systems will reuse or recycle most of the materials of the product you are disposing in a sound way.



■ The crossed out wheeled bin symbol informs you that the product should not be disposed of along with municipal waste and invites you to use the appropriate separate take-back systems for product disposal.

If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration. You may also contact your supplier for more information on the environmental performances

of this product.
The product label is located on the bottom of the unit.
Trademark Statement
Cobra, JumpPack and the snake design are proprietary trademarks of Cobra Electronics Corporation, USA.
NOTES



<https://manual-hub.com/>

Documents / Resources

	<p>Cobra CPP7510 Jum Pack Portable Jump Starter Power Pack [pdf] User Manual CPP7510 Jum Pack Portable Jump Starter Power Pack, CPP7510, Jum Pack Portable Jump Starter Power Pack, Pack Portable Jump Starter Power Pack, Portable Jump Starter Power Pack, Jump Starter Power Pack, Starter Power Pack, Power Pack</p>
--	---

References

-  [Portable Power & Automotive Electronics | Cobra.com](#)
-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)