

COBY CD201 Wireless Anti-Skip CD Player



# COBY CD201 Wireless Anti-Skip CD Player User Manual

[Home](#) » [COBY](#) » COBY CD201 Wireless Anti-Skip CD Player User Manual 

## Contents

- [1 COBY CD201 Wireless Anti-Skip CD Player](#)
- [2 Product Usage Instructions](#)
- [3 Overview](#)
- [4 Charging](#)
- [5 Turning on/off](#)
- [6 Listening to FM Radio](#)
- [7 Specifications](#)
- [8 Safety Statement](#)
- [9 FCC Statement](#)
- [10 SUMMIT ELECTRONICS LLC One Year Limited Warranty](#)
- [11 Customer Service](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)

# COBY®

COBY CD201 Wireless Anti-Skip CD Player



## Specifications

- **Model:** CD201
- **Features:** Wireless Anti-Skip CD Player
- **Accessories:** Wired Earphone, Micro USB Charging Cable, User Manual

## Product Usage Instructions

### Charging

- To charge the CD player, connect the Micro USB Charging Cable to a USB power source and the charging port of the CD player.
- The charging LED will indicate the status (Steady red for charging, off when fully charged).
- Charging time is approximately 4 hours.

### Turning On/Off

- **Turning On:** After fully charging, press the Play/Pause button to turn on the CD player. It will default to CD playback mode.
- **Turning Off:** In CD mode, press the Stop button twice. In FM Radio mode, press the Stop button once.

### Playing CD

1. Press the Open button to open the CD door.
2. Place a disc on the disc tray with the label side up.
3. Close the CD door and press Play/Pause to start loading the CD.

### Playback Control

- **Play/Pause:** Press the Play/Pause button.
- **Stop:** Press the Stop button.

- **Next Track:** Press the Next Track button.
- **Previous Track:** Press the Previous Track button.
- **Volume Control:** Use the Volume +/- buttons.
- **Playback Mode:** Press Mode (M) button to set repeat, shuffle, or intro modes.

## **Programming a CD**

1. In CD playback mode, press Stop to stop playback.
2. Press the Program button, select tracks, and save for programming up to 20 tracks.
3. Press Play/Pause to start playback of programmed tracks.

## **Bluetooth Audio-Out Mode**

You can play music on a Bluetooth speaker and control it using the CD player buttons.

## **Listening to FM Radio**

1. Tune to preset radio stations using Previous/Next Track buttons.
2. Adjust volume with Volume +/- buttons.

## **Frequently Asked Questions (FAQ):**

### **Q: How do I know if the CD player is fully charged?**

**A:** The charging LED indicator will turn off when the CD player is fully charged.

### **Q: Can I use Bluetooth headphones with this CD player?**


**A:** No, this CD player does not support Bluetooth headphones, but it has Bluetooth Audio-Out mode for external speakers.




### **Q: How many tracks can be programmed in the CD player?**

**A:** You can program up to 20 tracks in the CD player for playback in a specific order.

- 1 X CD201 Wireless Anti-Skip CD Player
- 1 X Wired Earphones
- 1 X Micro USB Charging Cable
- 1 X User Manual
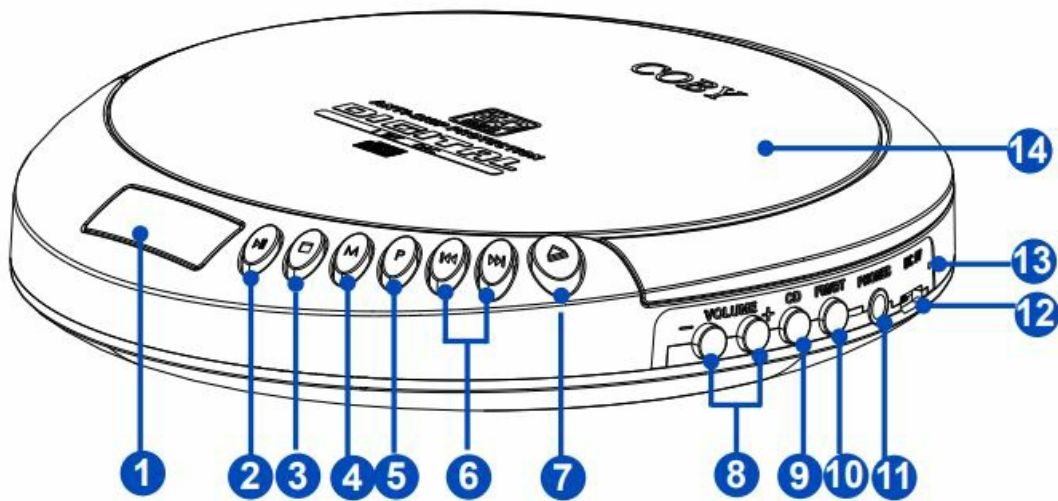
## **Overview**




1. **LCD Display** – Displays the status of the CD player.
2. **Play/Pause button**  – In power off mode, press to turn on the CD player.
  - In CD mode, press to play or pause the playback.
3. **Stop button**  – In CD mode, press to stop the playback; press again to turn off the CD player. In FM radio mode, press to turn the FM Radio off.
4. **Mode button** – Press to set the CD playback mode.
5. **Program button** – Press to program a loaded CD to play tracks in a specified order.
6. **Previous/ Next Track button**  – Press to skip to the previous or next track / preset radio station.
7. **Open button** – Press to open the CD door.
8. **Volume +/- Button** – Press to increase or decrease the volume level.
9. **CD button** – Press to enter the CD playback mode.
10. **FM/BT button** – Press to enter FM radio mode; press and hold to enter Bluetooth Audio-Out mode.
11. **Earphone jack** – Connect your earphones or headphones to listen to CD music or FM radio.
12. Micro USB Charging port
13. Charging LED indicator
14. CD door

## Charging



### Charging

Connect the supplied Micro USB Charging Cable to a USB power source and the Micro USB charging port of the CD player.

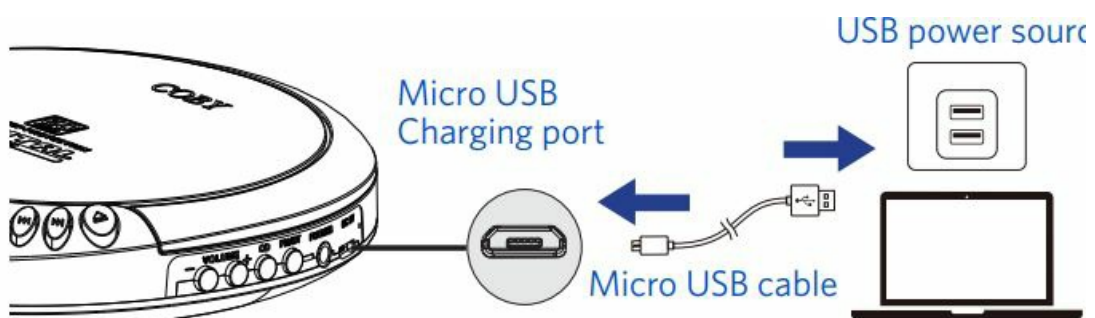

## Charging LED indication


Charging	Steady red
Fully charged	Off
Charging Time	4 Hours

## Turning on/off





Turning on/off

### Turning the CD player on

- After fully charging the CD player, press the Play/Pause button  to turn on the CD player, and it will automatically default to CD playback mode.
- Turning the CD player off

### To turn the CD player off:



- In CD mode, press the Stop button  twice.
- In FM Radio mode, press the Stop button  once.

## Playing CD



Playing CD





### Loading a CD

1. Press the Open button  to open the CD door.
2. Place a disc on the disc tray with the label side up.
3. Press the CD door to close it.
4. Press the Play/Pause button  to turn the CD player on, then the CD player will automatically enter CD mode and load the CD, and the “CD” appears and the track format flashes on the display screen.



### Playing a CD

1. Follow the instructions for loading a CD and connect the included earphones to the earphone jack of the CD player.
2. Wait a few seconds until both the CD's track number and elapsed time appear on the display screen.

## Playback Control

Play/Pause	Press the <b>Play/Pause button</b>  .
Stop	Press the <b>Stop button</b>  .
Next track	Press the <b>Next Track button</b>  .
Previous track	Press the <b>Previous Track button</b>  .
Volume up	Press the <b>Volume + button</b> .
Volume down	Press the <b>Volume - button</b> .
Set the playback mode	<p>Press the <b>Mode button M</b> to set your desired playback mode. The playback mode indicator will appear on the display screen.</p> <p><b>REP:</b> Repeat mode for playing a single track repeatedly.</p> <p><b>ALL REP:</b> All Repeat mode for repeating an entire CD.</p> <p><b>RAND:</b> Random mode for shuffling the track playback order.</p> <p><b>INTRO:</b> Intro mode for previewing the first ten seconds of each track in intro mode.</p> <p><b>Note:</b> To set Intro playback mode, press the <b>Mode button M</b>, then press the Previous or Next track button.</p>

## Programming a CD

1. In CD playback mode, press the Stop button  to stop the CD playback.
2. Press the Program button P. "00" begins to blink on the display screen.
3. Press the Previous/Next Track button to select the track you wish to program.
4. Press the Program button P to save the selected track for programming.
  - Repeat steps and step4 to program up to 20 tracks to play in the order they are programmed.
5. Press the Play/Pause button  to start the playback for the programmed tracks.

## Bluetooth Audio-Out Mode



### Bluetooth Audio-Out Mode

## Output music to external devices via Bluetooth


- **Step1.** In CD playback mode, press and hold the FM/BT button until the "BE" flashes on the display screen, indicating it enters Bluetooth Out mode.
- **Step2.** Turn on your device (like a Bluetooth speaker) and select Bluetooth mode in your device's setting, then the CD Player will automatically be paired with your device. If it is successfully connected, the "BE" stops flashing on the display screen. And the music will be output to your device for playback.
- **Step3.** Music will be playable on your Bluetooth speaker and controlled like CD playback mode through the

buttons on the CD player.

## Listening to FM Radio



### Listening to FM Radio

- Searching and presetting radio stations automatically
  - Before Listening to FM Radio, connect your headphone to the CD player.
1. **Select FM Radio mode:** Press the FM/BT button to enter FM Radio mode, then the FM indicator and Radio frequency appear on the display screen.
  2. Press and hold the Play/Pause button  for 2 seconds to automatically search for the radio stations with strong reception.
    - Then all available radio stations will be stored by the preset channel number in order, and the first preset radio station will broadcast automatically.

### Listening to the preset radio stations

1. In FM Radio mode, press the Previous/Next Track button to tune to your desired preset radio station.
2. Press the Volume +/- button to adjust the broadcast volume level.

### Notes:

1. You can try to position the headphone cable for better reception.
2. In FM Radio mode, you can press the CD button to switch to CD playback mode.

## Specifications

Model NO./Name	CD201/ Wireless Anti-Skip CD Player
Power Input	5V / 1A
Charging Time	4 Hours
Playtime	Up to 6 hours
Battery Capacity	3.7V, 1500 mAh
Power Consumption	1.52 W( Max.)
Frequency Response	90Hz-20kHz
FM Frequency Range	87.5-108.0Mhz
Signal-to-noise ratio	42 dB
Dimension	1.97 × 1.57 × 1.18" (50 × 40 x 30 mm)
Weight	8.36 oz (237 g)

**Note:** Specifications are subject to change without notice.

## Safety Statement

### Safety Precautions

1. Avoid dropping.
2. Do not disassemble this device.
3. Do not expose this device to rain or moisture or submerge it in water.
4. Ideal temperatures are 0°C to 35°C. Avoid extreme temperatures.
5. Keep the device away from excessive heat, such as sunshine, fire, or the like.
6. Do not use the device outdoors during thunderstorms.
7. Use original or certified cables.
8. Do not use any corrosive cleaner/oil to clean.
9. Keep out of reach of children. It contains small parts which may be a choking hazard.
10. Observe local laws and regulations while using the device.
11. To prevent damage to your device's parts or internal circuits, do not use it in dusty, smoky, damp, or dirty environments.
12. Do not use, store, or transport the device where flammables or explosives are stored. Using your device in these environments increases the risk of explosion or fire.

## FCC Statement

### FCC ID: 2AMSOSTW002

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference
2. this device must accept any interference received, including interference that may cause undesired operation.



**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver.
3. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

#### **FCC Radiation Exposure Statement:**

The device has been evaluated to meet general RF exposure requirements.  
The device can be used in portable exposure conditions without restriction.

#### **Disclaimer**

All information, design, and specifications contained in this manual were correct at the time of this publication. As the product goes under continuous upgrades and changes, however, the final device may have slight differences. The contents of this manual are subject to change without prior notice, and Coby will not be liable for any errors contained herein or for incidental or consequential damages in connection with the furnishing performance or use of this manual.

COBY COPYRIGHT 20© 24 ALL RIGHTS RESERVED. COBY IS A REGISTERED TRADEMARK OF CBY HOLDINGS, LLC. MANUFACTURED BY SUMMIT ELECTRONICS LLC. USED UNDER LICENSE. CBY HOLDINGS, LLC DOES NOT MANUFACTURE THIS PRODUCT OR PROVIDE ANY MANUFACTURER'S WARRANTY OR SUPPORT. THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY THE BLUETOOTH SIG, INC. AND ANY USE OF SUCH MARKS BY SUMMIT ELECTRONICS LLC IS UNDER LICENSE. OTHER TRADEMARKS AND TRADE NAMES ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS.

**WARNING:** CANCER AND REPRODUCTIVE HARM – [WWW.P65WARN-INGS.CA.GOV](http://WWW.P65WARN-INGS.CA.GOV).

#### **SUMMIT ELECTRONICS LLC One Year Limited Warranty**

- **WARRANTY** SUMMIT ELECTRONICS LLC LIMITED WARRANTY ("Warranty") – For product Categories Listed in the Chart Below (as applicable, "Product") Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully. If you are still having trouble with your Product, please contact Technical Support at [support@cobyaudio.com](mailto:support@cobyaudio.com).
- **Warning:** Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children.

Subject to the terms and conditions herein, SUMMIT ELECTRONICS LLC (hereinafter called "SUMMIT ELECTRONICS LLC") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

- Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period for one year, to begin from the original date of Customer purchase.
- If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, SUMMITELEC-TRONICSLLC will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable) either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/ or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and SUMMIT ELECTRONICS LLC's sole liability for breach of the limited warranty contained herein.
- This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the product, any other Customer-induced damage, or the alteration or removal of any product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than SUMMIT ELECTRONICS LLC or a party authorized in writing by SUMMIT ELECTRONICS LLC; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions; or (g) any acts of God. The product is sold to Customers for personal, non-commercial use only. Product is not warranted for the Customer's commercial or rental use.

In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications.

- SUMMIT ELECTRONICS LLC disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes all risks associated with such uses of Product and agrees to indemnify SUMMIT ELECTRONICS LLC for any damages claimed against SUMMIT ELECTRONICS LLC for such uses. EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS", AND SUMMIT ELECTRONICS LLC DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (I) OF MERCHANTABILITY, (II) OF FITNESS FOR A PARTICULAR PURPOSE, OR (III) OF NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL SUMMIT ELECTRONICS LLC BE LIABLE TO THE CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY, OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF SUMMIT ELECTRONICS LLC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, SUMMIT ELECTRONICS LLC'S AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCT CAUSING THE DAMAGES, IF ANY. This Warranty gives customers specific rights, and Customers may also have other rights that vary from jurisdiction to jurisdiction. To obtain Warranty service, the Customer must email SUMMIT ELECTRONICS LLC Technical

Support before making a Product return. The customer must include with the Product return the following items (failure to enclose any of these items may result in a delay in the processing of your Warranty claim): (i) a dated sales receipt that indicates the place of purchase, model number of Product, and amount paid; (ii) a detailed description of Customer's problem with Product; (iii) Customer's full name, phone number, and return address, and; (iv) a money order made out to SUMMIT ELECTRON-ICS LLC Electronics Corporation to cover return shipping charges to US destinations only, for the applicable dollar amount shown for the Product in the table above. SUMMIT ELECTRONICS LLC will not make return shipments to a P.O. Box. For shipping to international addresses, actual freight will be charged to the Customer.

- Return your Product freight-prepaid in its original packaging, or packaging that affords an equal measure of protection. Please allow 4 to 6 weeks for the processing of your claim (6 to 8 weeks from November to February).

PRODUCT CATEGORY	SHIPPING* (USD)
Adapters, Converters, Chargers, Headphones, Microphones, Cellular Accessories	\$7.99
Alarm Clocks, Portable CD Players, Radios, Corded Telephones, MP3 Players, Digital Photo Frames (screen size less than 5")	\$7.99
Portable Stereo Systems, Speaker Systems, Cordless Telephones, Home DVD Players	\$14.99
Home Theater DVD Systems, Portable DVD Players, Portable Media Players, Digital Photo Frames (screen sizes 5" to 11")	\$14.99


- You must email SUMMIT ELECTRONICS LLC Technical Support before making a return.
- Please ask if you are unsure of which category your product falls under.
- US destinations only.

## Customer Service

- To get the best after-sales service, access the Contact webpage from the link:  
<https://summitcegroup.com/pages/contact>.
- You can also email us at [support@cobyaudio.com](mailto:support@cobyaudio.com) for return information and customer support!
- For more information, please visit: <https://summitcegroup.com>

---

## Documents / Resources

 <p>COBY® CD201 Wireless Anti-Skip CD Player Manual de usuario / User Manual</p> <p>Bluetooth®</p>	<p><a href="#">COBY CD201 Wireless Anti-Skip CD Player</a> [pdf] User Manual</p> <p>CD201 Wireless Anti-Skip CD Player, CD201, Wireless Anti-Skip CD Player, Anti-Skip CD Player, Skip CD Player, CD Player, Player</p>
--	---

## References

- [Summit Electronics LLC](#)
- [Contact – Summit Electronics](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.