



Coca-Cola CC-BCS-DRB Bluetooth Can Speaker Instruction Manual

[Home](#) » [Coca Cola](#) » Coca-Cola CC-BCS-DRB Bluetooth Can Speaker Instruction Manual 

Coca-Cola CC-BCS-DRB Bluetooth Can Speaker Instruction Manual



Contents

- 1 Introduction
- 2 Safety Rules
- 3 Package Contents
- 4 Product Diagram
- 5 How To Use
- 6 General Functions
- 7 Pairing to a Bluetooth® Enabled Smart Device
- 8 Charging your Speaker
- 9 Hands free Function:
- 10 Product Specifications
- 11 FAQ
- 12 Why is there no power even when the Speaker is turned on?
- 13 2. There is no sound during playback.
 - 13.1 Support
 - 13.2 Manufacturer Warranty
 - 13.3 FCC Compliance Statements
 - 13.4 Documents / Resources
 - 13.4.1 References
 - 13.5 Related Posts

Introduction

Thank you for purchasing the Coca-Cola Bluetooth Can Speaker! In order to get the best use of this speaker, please read this user manual to get yourself familiar with the speakers features and functions!

Safety Rules

1. Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual.
2. Be wary of any edges, uneven surfaces, metal parts, accessories and its packaging to prevent any possible injury or damage.
3. Do not modify, repair or dismantle the product. Doing so may result in fire, electric shock, complete breakdown of the product, etc. All of which are not covered under warranty.
4. Do not use any diluent or volatile liquid to clean the product.
5. Do not use the product in a hazardous location.

Package Contents

Package contains

- a. Wireless Can Speaker




b. USB charging cable



c. 3.5mm to 3.5mm audio cable



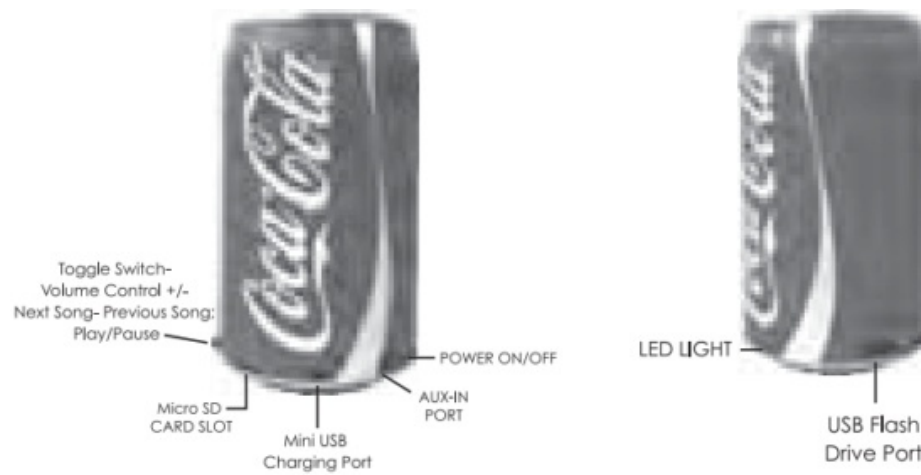

Product Diagram



How To Use

General Functions

| Desired Result | Required Action |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Turn on/off | Turn on the speaker by sliding the on/off position to the right. Turn off the speaker by sliding the on/off position to the left. |
| Charging port | Insert the mini USB end of the charging cable into the speaker, and the USB end into a Wall adapter / PC or Laptop. |
| Bluetooth | Activate the Bluetooth feature on your smart device and set the device to search for Bluetooth® devices. (See the User Manual of your device) The Can Speaker will show up on your device list as “Coca-Cola Speaker” if pass code is requested enter (0000), the voice prompt will tell you if the pairing is successful |
| Play/Pause (Center of the wheel) | Short Press in the Play/Pause button to play your device’s Music. When playing your music you can answer a call by pressing in the Play/Pause button or double press to reject a call. You can also double press the Play/Pause button to redial the last number. |
|  | Toggle the wheel to the right to skip to the next track. Slide and hold the wheel to the right to lower the volume of the speaker. |
|  | Toggle the wheel to the left to go back to the previous track. Slide and hold the wheel to the left to increase the volume of the speaker. |
| Micro SD card slot | Insert your Micro SD card, be sure that it contains MP3 music files only. The speaker will prompt “memory card mode”, and will begin to play the music from your memory card automatically. If you power on the speaker with a Micro SD card already inserted, it will switch to that mode automatically. |
| USB Flash Drive | Insert your USB Flash Drive, be sure that it contains MP3 music files only. The speaker will prompt “USB Flash Drive”, and will begin to play the music from your Flash Drive automatically. If you power on the speaker with a USB Flash Drive already inserted, it will switch to that mode automatically. |
| AUX port | Insert the AUX cable to play music from non-Bluetooth device including Laptop, PC. and Tablet. 3 |

Pairing to a Smart Device: To use your Bluetooth Can Speaker you must first pair your speaker with a smart device. Once your Bluetooth® speaker is paired to a smart device, they will remain paired and automatically recognise each other whenever they are within range.

Pairing to a Bluetooth® Enabled Smart Device

- On your smartphone/device be sure that the Bluetooth is powered on. .
- Power on the speaker and you will hear the following voice prompt “Bluetooth pairing mode”; the LED light will begin to flash blue rapidly.
- Open the Bluetooth connection settings on your device be sure that the Bluetooth is turned on, and your device will start to search for the speaker. Once you see the “Coca-Cola speaker” in your device list, click on it to connect.
- Once connected successfully you will hear a voice prompt, “The Bluetooth device is connected successfully”.

Charging your Speaker

Use the Mini USB cable provided with this speaker. Connect the Mini USB end of the cable into the Mini USB charging port on the Coca-Cola Speaker. Connect the USB end of the cable to a USB port on a PC/Laptop or wall adapter to activate charging. The LED light will turn Red indicating that the speaker is being charged, and turn off once the speaker is fully charged.

***Make sure to charge the speaker for a minimum of 3 hours before initial use.**



Hands free Function:

1. Enjoy hands free calling with the Speaker when connected to the Bluetooth on your smart device. When you receive an incoming calls, it will voice prompt the incoming phone number.
2. Short click PLAY/PAUSE to answer the phone call
3. Short click PLAY/PAUSE to end the phone
4. If you want to reject the call double click the PLAY/PAUSE

Product Specifications

| | |
|--------------------------|---------------------|
| Material | ABS |
| Speaker Power Output | 3 watts |
| Impedance: | 4 ohms |
| Frequency Response: | : 180Hz-18KHz |
| Bluetooth® Version: | V5.3 |
| Battery Capacity: | Lithium ion: 300mAh |
| Charge Type 3.7-5 volts: | Via Mini USB Cable |
| Net weight: 130g | S/N: 2=85Db |

FAQ

—

Why is there no power even when the Speaker is turned on?

Ans: Ensure the battery has been charged up to 3-4 hours for initial use.

—

2. There is no sound during playback.

Ans: Check the connection between the speaker and the phone or computer, if the connection is not established, please connect again. Make sure the speaker is paired with your Bluetooth enabled device.


UP TO 3-4 HRS
PLAYTIME




BUILT-IN
MIC



Support

If you have problems with your device, please consult the instructions in this manual.

Manufacturer Warranty

We stand by our products! That's why we guarantee them from any functional defects for one year from the original date of purchase. Should you have an issue please call us at (877)995-8505 or email us at info@mnsbrands.com




CC-BCS-DRB

Designed in the U.S.A. | Made In China Manufactured, marketed, and distributed under license by M&S Accessory Network Corp., 10 W. 33rd St., New York, NY 10001 Designed in the U.S.A | Made in China.

For support call: [877-995-8505](tel:877-995-8505) or

Email: info@mnsbrands.com

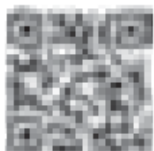

www.mnsbrands.com

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: **(1)** this device may not cause harmful interference, and **(2)** this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Compatible with all Bluetooth® enabled devices The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.



COCA-COLA, COKE, the Contour Bottle Design, the Dynamic Ribbon Device and the Red Disc Icon are trademarks of The Coca-Cola Company and, in Canada, Coca-Cola Ltd. The Coca-Cola Company. All rights reserved. Produced by M&S Accessory Network Corp. under a trademark license from The Coca-Cola Company.

Operation manual

Please read the manual before operating this product.

M&S Accessory Network declares that radio equipment CC-BCS-DRB is in compliance with Directive 2014/53/EU.

The EU Declaration of conformity is available at <https://gabbagoods.com/pages/compliance-documents>



Documents / Resources

| | |
|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A small thumbnail image showing the cover of the instruction manual for the Coca-Cola CC-BCS-DRB Bluetooth Can Speaker. | <p>Coca-Cola CC-BCS-DRB Bluetooth Can Speaker [pdf] Instruction Manual 2AFXXGG-BCS, 2AFXXGGBCS, CC-BCS-DRB Bluetooth Can Speaker, CC-BCS-DRB, Bluetooth Can Speaker, Can Speaker, Speaker</p> |
|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.