


Code Black 53 Manual Firmware Update Instructions

Home » Code Black » Code Black 53 Manual Firmware Update Instructions

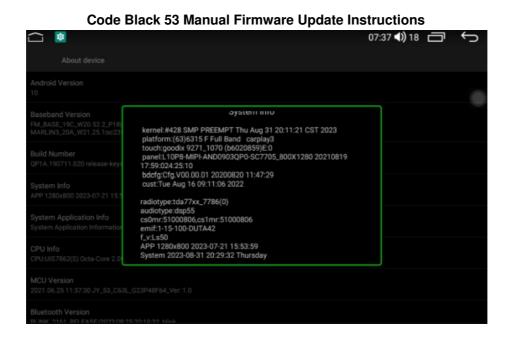

 Hease read through the instructions before downloading the file. This update can only be done on a windows based computer or a MAC.

STEP 1

- Insert the SD card into the computer!
- Format your SD card (Making sure it's completely empty)

STEP 2 "Don't change the file name and only download the Fille once! If you download the file more than once and there's a number beside it (1),(2),etc. All will cause the update to be sansuccessful.

(Using a Windows Computer)

- · Select "Download Firmware" under Code Black Select
- You'll then need to open your downloads folder

 Downloads You should see the ZIP file. Le# click & hold, drag, and drop the file onto your main desktop You You should see the ZIP file. Left click hold, drag,
- Once the ZIP the is on your desktop. Open the Zip file Then Left click & hold, drag, and drop the the onto your desktop.
- Once on your desktop. You can then pull up your FILE Explorer

 Once opened, on the left side scroll to the bottom and click on the SDHC SDHC (E:) or whichever your SD card is reading as.
- You'll then Left click & hoid, drag, and drop the file from the desktop onto the SD card.
- Please make sure this file is the only thing on the SD card. $^{\begin{subarray}{c} Rom_Code_UML3.Bin \\ 2\ MB \end{subarray}}$
- You can remove the SD card from your computer.

(Using a MAC/Apple Computer)

- Select "Download Firmware under Code Black Select.
- You'll Double click on the ZIP file to open it. It't put the Sie into an unzipped folder on your Desktop
- You'l need to open this folder and remove the 2 files (THEY CANNOT BE IN A FOLDER ON THE SD CARDO
- You can Left click & hold, drag, and drop each file individually to your Removeable Dick OR SD card icon (Whichever it reads as.)
- Please make sure this file is the only thing on the SD card . $^{\mbox{\scriptsize lower}}$ $^{\mbox{\scriptsize Rom_Code_UML3.Bin}}$
- · You can remove the SD card from your computer

STEP 3

- With camera in the **OFF** position. Insert the 50 cant
- Hold the right arrow button while simultaneously putting the camera into SETUR.
- The camera will go through a few things and may restart.
- Do not turn the camera's power off or press any buttons while the upgrade is in process!
- Once the camera tries to connect so the network. (NOT waiting on signal)
- Press MENU, Arrow to the right to the SYS/GEAR Tab, arrow down to DEFAULT, Press OK, an tow to YES and Press
 - **OK** (This' restore the camera back to factory settings)
- Arrow **down** to **SOFTWARE VERSION** and see that it reads MCU: V1053. IF you see the correct firmware on the camera, proceed with the next steps.

If you're updating more than 1 camera, turn the camera OFF and remove the Firmware SD card. You may start over with STEP 3 in the next device. IF not follow the instructions below.

STEP 4

- Make sure your camera is in SETUP and connected to the network.
- · Press your SHOT Button. (This captures the pictur
- Press the Ok button. This pulls the picture op)
- HIT MENU, Arrow down to send and Press OK

Wait for the send progress to hit 100% and check the App to see if the photo came through. If so, go ahead and turn your camera to the **ON** position and you should be good to go!

<u>SD CARD SPECIFICATIONS</u>-Our cameras function with a Standard SD card, Class 10, between 8-32 GB, "We ONLY recommend Sony, ONN, or Covert SD cards, "We don't recommend using San Disk brand, as they don't meet the requirements for the cameras. **Please, don't use any cards that say** Ultra/Ultra Rus, High Performance, Platinum, Extreme, Tough, HD/High definition, Plus, Elite, Pro, Image Mata, Edge, MICRO adapter, etc. These types of SD cards don't work well with our devices.

Contents

- 1 Documents / Resources
 - 1.1 References
- **2 Related Posts**

Documents / Resources



Code Black 53 Manual Firmware Update [pdf] Instructions

53, 53 Manual Firmware Update, 53, Manual Firmware Update, Firmware Update, Update

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.