



CR1100 Barcode Reader User Guide

[Home](#) » [code](#) » CR1100 Barcode Reader User Guide 

Contents

- [1 CR1100 Barcode Reader](#)
- [2 Configuring CR1100 & CR1500 Barcode Readers](#)
- [3 CR100 and CR1500 Reader Settings](#)
- [4 Firmware Version Information](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



CR1100 Barcode Reader



Configuring CR1100 & CR1500 Barcode Readers

To configure a CR1100 or CR1500 to be assigned to a patient room or workstation-on-wheels, scan only one of the following barcodes:



CC004395_02

Epic Patient Look up

&



CC005888_01

Epic Alt Keypad Emulator

Scan the preferred feedback settings (not for a CR1100):



M20329_01

Beep On
Vibrate On



M20331_01

Beep On
Vibrate Off



M20330_01

Beep Off
Vibrate On

CR100 and CR1500 Reader Settings



M20111_01

Reset to factory defaults

Firmware Version Information

Scan the following barcodes to identify firmware versions:



M20361_01

Reader information

Documents / Resources



[code CR1100 Barcode Reader \[pdf\] User Guide](#)
CR1100, CR1500, CR1100 Barcode Reader, CR1100, Barcode Reader