

CofunKool M6 Conference Speaker and Microphone Instruction Manual

Home » CofunKool » CofunKool M6 Conference Speaker and Microphone Instruction Manual





Speakerphone Manual V1.0




Contents

- **1 FEATURE SPOTLIGHT**
- 2 PACKAGE LIST
- **3 TECH SPECIFICATIONS**
- **4 OPERATE**
- **INSTRUCTION**
- **5 DEFECT STATEMENT**
- **6 ATTENTION**
- **7 WATTANTY**
- 8 Documents / Resources
 - 8.1 References

FEATURE SPOTLIGHT

Thanks for choosing our speakerphone, which apply to education, enterprise meeting and video call, etc. It has the advantages of long distance picking up sound, active noise reduction, echo cancellation, Whistle suppression, restore human voice and so on.

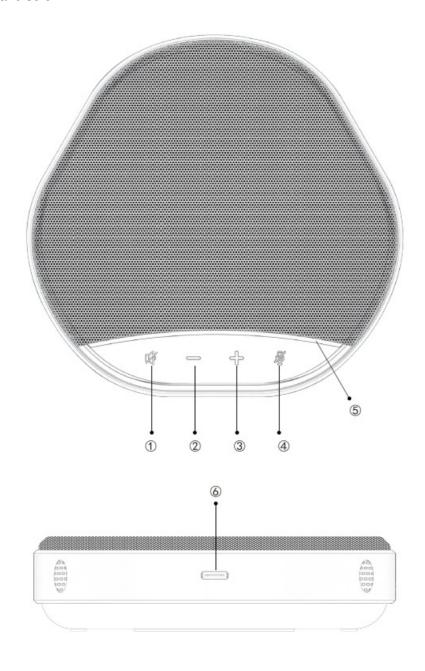

- 2. Volume down
- 3. Volume up
- 4. Mute microphone
- 5. Status Light
- 6. USB-C power port

PACKAGE LIST

 
Please check and confirm all accessories that should be provided.

①Speakerphone M6

②USB cable

③User manual








TECH SPECIFICATIONS

Model	M6
Frequency response	48Khz
Speaker power	5W
Microphone	2
Coverage	Omnidirection
Best pick-up distance	3m(Suitable for conference rooms within 20m')
Noice reduction	Support AEC,AI noice reduction
Connection	Driverless, Plug-and-Play
Cable length	1 meter

OPERATE INSTRUCTION

Connect with laptop/desktop via USB
 USB connecting, speakerphone power-up; USB disconnect, speakerphone power-off.

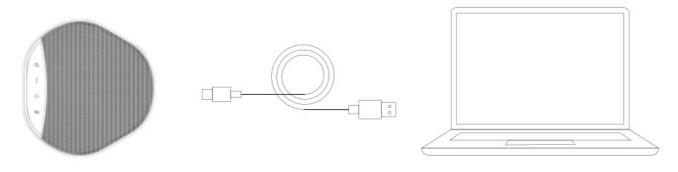

2. Button control

Button sign	Button operation	Function
好	Click	Mute/unmute speaker
_	Click/Press and hold	Volume down
+	Click/Press and hold	Volume up
Ý	Click	Mute/unmute microphone

3. Status light

Indicator status	Function
Eight blue light up in order	Speakerphone active
Right side 4 red light on	mute microphone
Left side 4 red light on	mute speaker
Blue light up to right	Volume up
Blue light off to left	Volume down

DEFECT STATEMENT

Issue	Possible reason	Solution
Nothing happen when connect PC via USB	USB cable not connect correctly USB cable damaged	1.Reconnect the USB cable 2.Replace the USB cable
Speaker not working	Speaker not be used correctly Speaker volume is zero	Set M6 speaker as default speaker Press the volume up button
Microphone not working	1.Microphone not be used correctly 2.Microphone under status of mute	1.Set M6 microphone as default microphone 2.Unmute the microphone
If the above problems are s olved according to the above methods, still does not work	Driver identification error	Open the device manager, find the "Sou nd, Video and Game controller" option, c hoose to uninstall the current M6 device driver, reinsert the device and connect to the computer
Volume buffon not working	Speaker not be used correctly	Set M6 speaker as default speaker

ATTENTION

- 1. Do not use in hot, cold, dusty or humid environments;
- 2. Try to avoid dropping the product, a severe drop may result in product damage, malfunction or surface scratches;
- 3. Do not disassemble the product by yourselves, the damage caused by the user disassemble is not covered by the warranty.

WATTANTY

- 1. The warranty of this product will be void if the following conditions occur:
 - . Man-made destruction
 - . Repaired or disassembled by by another company technician
 - · Damage due to drop or collision
- 2. You can contact us for any questions about the product, and we will provide you with the best solution.

(The information contained in this mn.au.al is subject to change without notice Windows is trademark of the Microsoft group of companies Mcistadrnk of Apple inc registered in the trite States ad other countries.)

Documents / Resources



<u>CofunKool M6 Conference Speaker and Microphone</u> [pdf] Instruction Manual M6, M6 Conference Speaker and Microphone, Conference Speaker and Microphone, Speaker and Microphone, Microphone

References

• User Manual

Manuals+, Privacy Policy