



Home » COKUNST » Cokunst 500ML Portable Biender User Manual 📆

#### **Cokunst 500ML Portable Biender**



Please read the manual carefully before use!

#### Contents [ hide ]

- 1 Froduct Components
- 2 Installation of The Fortable Lid
- 3 Assembly of Cleaxing Brask
- 4 Technical Specifications
- 5 Instructions before Use
- 6 Lighting Instructions
- 7 How to Use?
- 8 How to Clean?
- 9 Cleaning and Maintenance
- 10 Warm Tips
- 11 Safety Features
- 12 Troubleshooting
- 13 Customer Support
- 14 Documents / Resources
  - 14.1 References

## **Froduct Components**




Installation of The Fortable Lid



# **Assembly of Cleaxing Brask**

Insert the two small tentacles of the blue rod into the hole of the white rod.

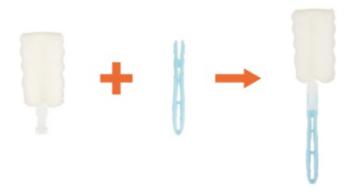

# **Technical Specifications**

Model	PSB-8
Capacity	17oz

Recommended Max Capacity	15oz
Bottle Material	PCTG Food Grade
Blade Material	304 Stainless Steel
Motor Revolving Speed	18000-22000rpm
Working Current	12-20A
Working Voltage	DC7.4V
Battery Volume	18650 Lithium ion battery 1500mAh

#### **Attention**

- Please charge at least once a month, otherwise the battery will be damaged.
- Please do not use the steel ball, corrosivity cleanser or dishwasher to clean the blender, otherwise the elements will be damaged.
- Please do not put the base into the refrigerator or water, otherwise the battery will be damaged.
- This product is exclusive for juice making, not suitable for blending hard objects such as meat, nuts or beans.
- The blender can't be disinfected by microwave or hot water above 122 deg \* F
   otherwise the accessories will be deformed.
- Please keep the product away from children and the mentally ill.

#### **Instructions before Use**

- Please clean the blender before use.
- Please click the button once to check the power to ensure the battery is fully charged.
- Please align the "LOCK arrow" on the bottle with the power button on the base when installing the bottle and base.
- Please check the light indication instructions:

## **Lighting Instructions**

Blender Status	Lighting	
Bottle not properly tightened at startup ("L OCK arrow" not aligned with power button ).	Flash red and blue for 2s.	
After spinning the bottle into the base until I tightened.		
When spinning the bottle out of the base.		
Click the button once to check the power status.	Blue light is on. One blue light represents 25% power.	
When blending.	All indicator lights will continuously flash in blue.	
Low power while blending.	All indicator lights will flash in red.	
Out of power while long press the button.	All indicator lights in red or off.	
When charging.	Indicator light(s) will flash slowly at curren t battery level.	
When fully charged.	All indicator lights will light up in blue.	
Blades gets stuck.	Red light flashes quickly for 8s.	
Battery low voltage	Red light on for 5s.	
Auto-stop blending after 30s	Flash red and blue for 3s.	

## How to Use?

# Step 1

Tighten the bottle to the base until the "locking arrow" on the bottle aligns with the power button.



Step 2

Click the button to check the power. Please fully charge the blender before use.



Step 3

Remove the bottle from the base by aligning the "unlock arrow" on the bottle with the power button.



Step 4

Place the fruit inside the bottle (cutting them into small pieces, making up 20% of the capacity.



Step 5

Pour in milk or pure water (The liquid takes up 60%, fruit plus liquid can not exceed the Max line).



#### Step 6

Slightly tilt the blender and long press the switch button to start, then shake the blender to make sure the fruit is completely mixed with the milk or water.



### Step 7

The blender will auto-stop blending after 30 seconds. Turn the blender upside down, unscrew the base, then screw on the portable lid, and enjoy it at anytime.



#### **How to Clean?**

Add 80% of water, and long press the button to clean automatically.



If the stain is strong, uncrew the lid and bottle, and clean with the included cleaning brush. (Cover the waterproof cover of the charging port before cleaning! Do not touch the blade with your hands!)



## **Cleaning and Maintenance**

- Make sure the blades stop running before cleaning.
- Do not use dishwasher steel balls, abrasive cleaners, or corrosive liquids (such as gasoline, or acetone) to clean this products, it is recommended to use the included cleaning brush to clean the blade.
- The host part can be cleaned quickly with flowing water, please dry it in time after cleaning, do not place it in water or other liquids soaked.
- When storing, please ensure that the product is clean, dry and placed in a dry and ventilated place without direct sunlight.

### **Warm Tips**

• To meet the shipping requirements, the blender is shipped with only 60% power, it is

- recommended to be fully charded before use to ensure battery life.
- It is recommended to recharge in time when the power is below 50% to ensure that the blender has enough power to work.

### **Safety Features**

- Nothing inside for 5 seconds Auto power-off
- Bottle and Base Separation Auto power-off
- Battery is being charged Auto power-off
- Auto-stop blending after 30s
- Click to stop when blending
- Gravity sensing device
- Indicator light
- No 100% power consumption
- BPA-free food-grade material

### **Troubleshooting**

	Analysis	Solution
	Low power	Click the button once to ch eck power status. When th e power is less than 25%, please charge it.
	Bottle not properly tighte ned to the base	Retighten until the "LOCK arrow" on the bottle is align ed with the power button(re fer to step 1 of use)
	Blades get stuck	Hold the blender upside do wn and long press the pow er button to turn it on, then turn it back and shake gent ly.

Not working	Ingredients added are above the MAX line Worked many times	Remove some ingredients until below the MAX line and use as usual.
	Worked many times in a row	Wait 20 minutes and then u se it normally.
	Base and bottle are separated	The blender has security protection. If the base is se parated from bottle, the bla des will not rotate.
	Operation is incorrect	One-click to check the pow er, long press to turn on.
	No charged over a mont	Please charge the blender at least once a month, othe rwise the battery will be ea sily damaged.
Leakage	Ingredients added are above the MAX line	Remove some ingredients until below the MAX line and use as usual.
	Bottle not properly tighte ned to the base	Retighten until the "LOCK with the power button(refer to arrow" on the bottle is all gned step 1 of use)

If the solutions above can't solve the problem, please scan the COKUNST after-sales QR to get help.

Scan for Online Support



### **Customer Support**

#### NINGBO NINHUA INTERNATIONAL CO., LTD

ADD: No. 755 Liyuan North Road, Room 535, Haishu District, 315000, Ningbo, Zhejiang

After-Sale Service:

cokunstaftersale@gmail.com

www.facebook.com/COKUNST.Official

www.instagram.com/cokunst.official



## **Documents / Resources**



Cokunst 500ML Portable Biender [pdf] User Manual

500ML, 500ML Portable Biender, 500ML, Portable Biender, Biender

#### References

- User Manual
  - ▶ 500ml, 500ML Portable Biender, Biender, COKUNST, Portable
- COKUNST Biender

## Leave a comment

Comment *		
Name		
Email		
Website		
☐ Save my name, email, and website in this browser for the next time I commen	it.	
Post Commant		
Post Comment		
Cooyaha		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.