



COLOER 900W Low Voltage Transformer User Manual

[Home](#) » [COLOER](#) » COLOER 900W Low Voltage Transformer User Manual 

COLOER 900W Low Voltage Transformer User Manual



Contents

- [1 Package Contents](#)
- [2 Features](#)
- [3 Product Dimensions](#)
- [4 IMPORTANT SAFETY INSTRUCTIONS](#)
- [5 SIZING TRANSFORMER](#)
- [6 MOUNT THE TRANSFORMER UNIT](#)
- [7 CHECK VOLTAGE AT EACH FIXTURE](#)
- [8 CHIECK OUTPUT AMPS](#)
- [9 DETERMINE INPUT AMPS](#)
- [10 Determine System Load and Voltage Drop](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)


Package Contents

Transformer

Features

- Power:900W
- Input:120VAC, 50/60Hz
- Output Voltage:12/15V AC
- Two commons
- Heavy duty 304 stainless steel
- Stainless steel standard finish
- Lifetime warranty

Product Dimensions

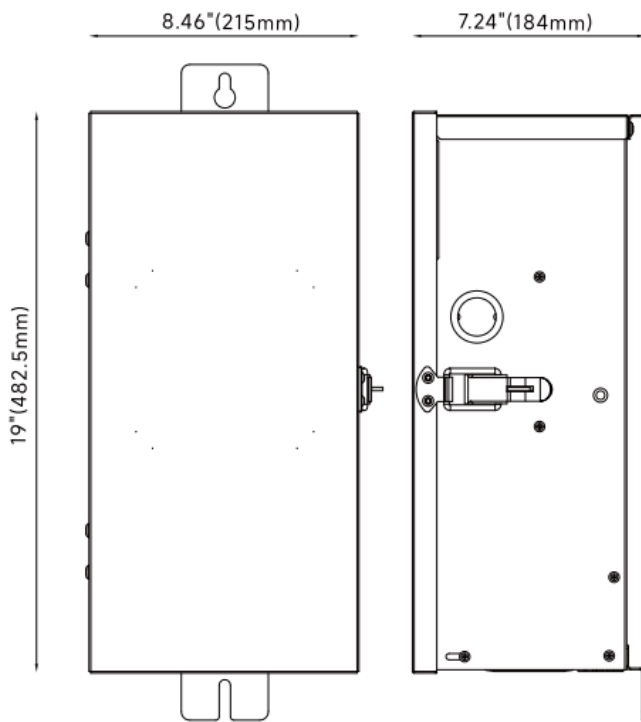

IMPORTANT SAFETY INSTRUCTIONS

WARNING

If for conduit connected POWER UNIT RISK OF SHOCK. Install power unit at least 5 feet from a pool or spa and at least 10 feet from a fountain. Where the power unit is installed within 10 feet of a pool or spa, connect unit to a GFCI protected branch circuit

WARNING

for Power Supply Cord connected POWER UNIT RISK OF ELECTRIC SHOCK. Install power unit at least 5 feet from a pool, spa or fountain Where the power unit is installed (a)indoor within 10 feet of a pool, spa, or fountain, or (b)outdoor, connect power unit to a receptacle protected by a GFCI

- THIS POWER UNIT MUST BE CONNECTED TO A COVERED (FCI RECEPTACLE MARKED "WET LOCATION WHILE IN USE
- CAUTION FOR USE ONLY ON A BRANCH CIRCUIT PROTECTED BY A CLASS A TYPE GROUND FAULT CIRCUIT INTERRUPTER
- FOR USE WITH LANDSCAPE LIGHTING SYSTEMS ONLYLANDSCAPE LIGHTING SYSTEMS ARE FOR OUTDOOR USE ONLY NOT FOR USE IN DWELLING UNITS
- THIS DEVICE IS ACCEPTED AS A COMPONENT OF A LANDSCAPE LIGHTING SYSTEM WHERE THE SUITABILITY OF THE COMBINATION SHALL BE DETERMINED BY CSA OR LOCAL INSPECTION AUTHORITIES HAVING JURISDICTION
- DO NOT CONNECT TWO OR MORE POWER SUPPLIES IN PARALLEL
- DO NOT MOUNT POWER SUPPLY OR FIXTURES WITHIN 3 METERS (10 FEET) OF A SWIMMING POOL OR SPA
- DO NOT USE AN EXTENSION CORD WITH THIS POWER SUPPLY

SIZING TRANSFORMER

The total wattage(W) – or volt amps(VA) for LED- of all of the fixtures operated by this transformer must not exceed the wattage rating of the transformer

If you are powering halogen lamps

Calculate the load by adding the wattage of the lamps in the system. Make sure the load does not exceed the wattage rating of the transformer.

If you are powering LED lamps or fixtures

calculate the load by adding the volt/amp (VA) values of all of the lamps in the system. VA is calculated using the following formula:

VA= Wattage: Power Factor

If the power factor of the LEDs is unknown, use 0.7 as the value for this calculation. Once you have determined the total wattage or total VA value of the run, make sure that the transformer that you have selected has excess capacity in the event that new fixtures are connected to the system at a later date.

Example:

15 fixtures are each operating a 3W LED lamp with an unknown PF value

System VA= 15 x 3: 0.70= 64.3 VA

A transformer with a maximum wattage rating of 150W can be utilized.

MOUNT THE TRANSFORMER UNIT

1. Remove transformer door for easy access
2. Find a solid, flat surface to mount the transformer in a location
 - That is at least 12 inches between the terminals and ground level with wire terminals facing down
 - Six feet or fewer from a 120V supply circuit that is protected by a type A ground fault circuit interrupter.
3. Insert load bearing screws or wall anchors into pre-drilled holes that align with the corresponding keyhole slots on the transformers mounting brackets.
4. Secure the transformers keyhole slots on the mounting brackets to the load bearing screws Wall anchors

MOUNT THE TRANSFORMER UNIT

- Remove the bottom plate from the transformer
- Using a flat head screwdriver, adjust the common tap and appropriate low voltage taps) labeled 12V-15V or 12V-22V) on terminal block to accept secondary wires.
- Run the secondary wire cables through the knockouts in the bottom plate
- Separate the wires from each pair and strip both approximately one inch.
- Connect one wire from each pair to the common tap and the other wire to the appropriate low voltage tap
- Secure the wires to the taps by tightening the common tap and the low voltage taps with a flat head

screwdriver.

CHECK VOLTAGE AT EACH FIXTURE

It is very important that the secondary voltage provided to each fixture is within the input voltage range of the lamp or fixture. Halogen lamps and some LEDs have an input voltage rating of 12V. If the specified input voltage range is 12V, the input voltage provided to the fixture must be between 11V and 12V. If the voltage at the socket exceeds 12V, light output of the lamp will be higher but average rated life will be lower. If the voltage at the socket is lower than TTV, light output will be lower and average rated life will be higher. Many LEDs have an input voltage range of 10V-15V or 10V-18V. For LEDs with input voltage ranges, input voltage supplied to the lamp within that range is acceptable.

- Plug the transformer into a covered 120V GFCI receptacle.
- Switch on the transformer to provide secondary voltage to the fixtures
- Using a voltmeter, check the voltage at each fixture.
- Make sure that the voltage at each fixture is within the specified input voltage range of the lamps or integrated LED fixtures.
- If the measured voltage falls outside of the specified input voltage range of the lamps or integrated LED fixtures, adjust the voltage to the acceptable range by moving the wire to higher/lower voltage tap

CHECK OUTPUT AMPS

After checking the voltages on the run, use a clamp-on meter to measure the output current on the low voltage cable at the transformer for each circuit. Make sure that the output current of the circuit is below the maximum rated Amperage.

Circuit Size	50 Watts	100 Watts	150 Watts	200 Watts	300 Watts
Amp Rating	4.16A	8.33A	12.5A	16.66A	25A

DETERMINE INPUT AMPS

This unit is provided with a looped wire that is attached to the optional photocell plug. Use a clamp-on meter around the looped wire to measure the input current. Apply the clamp on the amp meter around the looped wire to get an input current measurement. Make sure that the input current of the system is below the maximum rated input current:

Transformer Size	75W	150W	300W	600W	900W
Max Input Amps	0.625A	1.25A	2.5A	5A	7.5A

Determine System Load and Voltage Drop

Low voltage landscape system voltage drop occurs along the secondary wire and is affected by the distance of the run, the total wattage of the system, and the gauge of the wire. As a result, fixtures at the end of the systems run will receive lower voltage than fixtures near the beginning of the run. Voltage loss can be minimized in different ways.

Low voltage wire is necessary to run from the secondary power on the transformer to the fixtures it will operate in the system. Low voltage wire is measured by gauges. Thinner wire has a higher number and has a lower

maximum load. The lower the wire number, the thicker the wire and the more current it can carry. Consequently, thicker wire reduces voltage drop so it is suggested that 8/2, 10/2, or 12/2 wire is used for low voltage landscape lighting systems. Below is a table that lists the cable constant value of different wire gauges:

Wire Gauge	#18/2	#16/2	#14/2	#12/2	#10/2	#8/2
Cable Constant	1,380	2,200	3,500	7,500	11,920	18,960


Example:

A 75 ft. run with 100W load using 12/2 wire Voltage Drop- $(75 \times 100 \times 2) \div 7500 = 2V$. This means that a 14V tap is needed to deliver 12V to the final fixture on the run.

One way to minimize voltage drop in this example is to spread the load to separate wire runs. Wiring the system effectively is another way to minimize voltage drop.



Documents / Resources

	COLOER 900W Low Voltage Transformer [pdf] User Manual 900W Low Voltage Transformer, 900W, Low Voltage Transformer, Voltage Transformer, Transformer
---	--

References

- [User Manual](#)