



# COLOR KINETICS Light System Manager Gen6 Instruction Manual

[Home](#) » [COLOR KINETICS](#) » COLOR KINETICS Light System Manager Gen6 Instruction Manual 

## Contents

- 1 COLOR KINETICS Light System Manager Gen6
- 2 Installation Instructions
- 3 Confirm all components received.
- 4 Apply feet
- 5 Rackmount (optional)
- 6 Connect
- 7 Turn the power ON
- 8 Connect
- 9 Turn the power ON
- 10 Push and release to start-up or shut down
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts



## COLOR KINETICS Light System Manager Gen6




## Installation Instructions

Must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.


B Before installing this product, please visit the product page at [www.colorkinetics.com](http://www.colorkinetics.com) for the latest version of the installation instructions. Due to continuous improvements and innovations, installation instructions may change without notice.

### Confirm all components received.

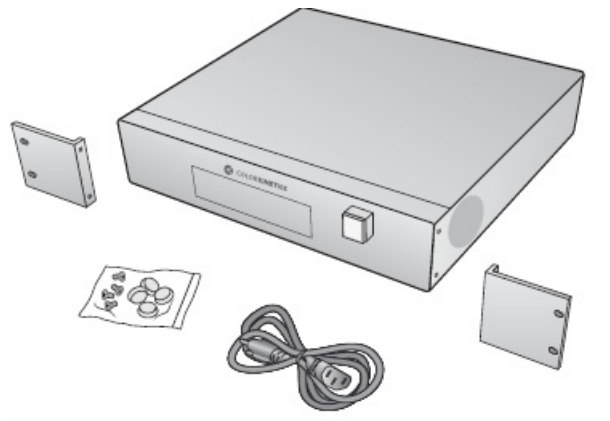


B Important Surge Protection Requirement: [www.colorkinetics.com/KB/surge-protection](http://www.colorkinetics.com/KB/surge-protection)  
Verify the electrical plan and all necessary surge protection requirements.

### Apply feet

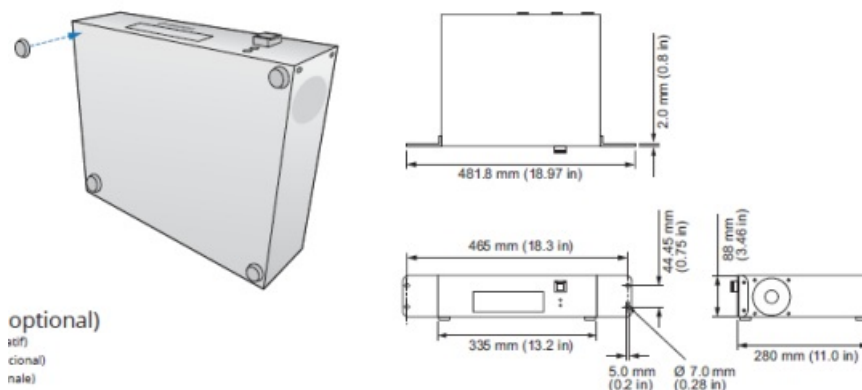


### Rackmount (optional)

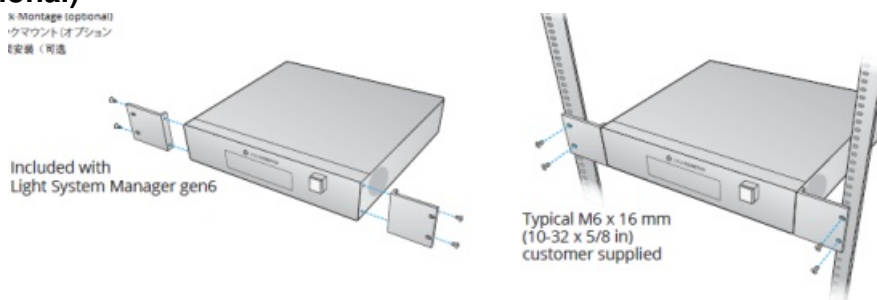


### Make sure power is OFF

## Connect

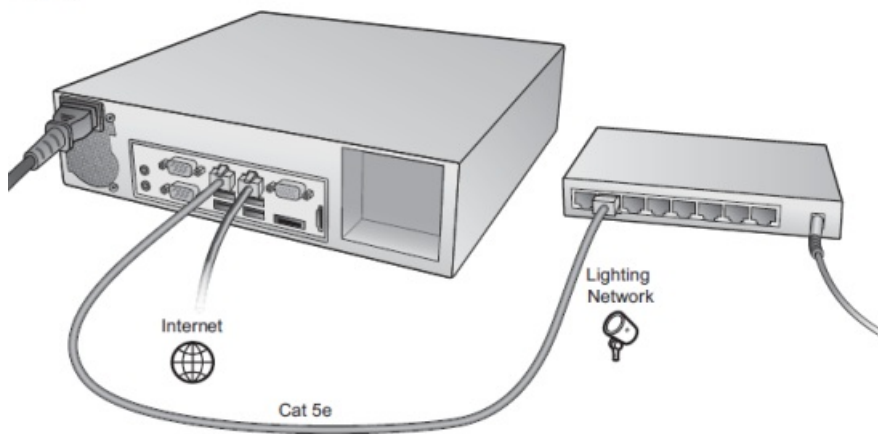


From line power (100 – 240 VAC, auto-switching, 50 / 60 Hz)

## Turn the power ON

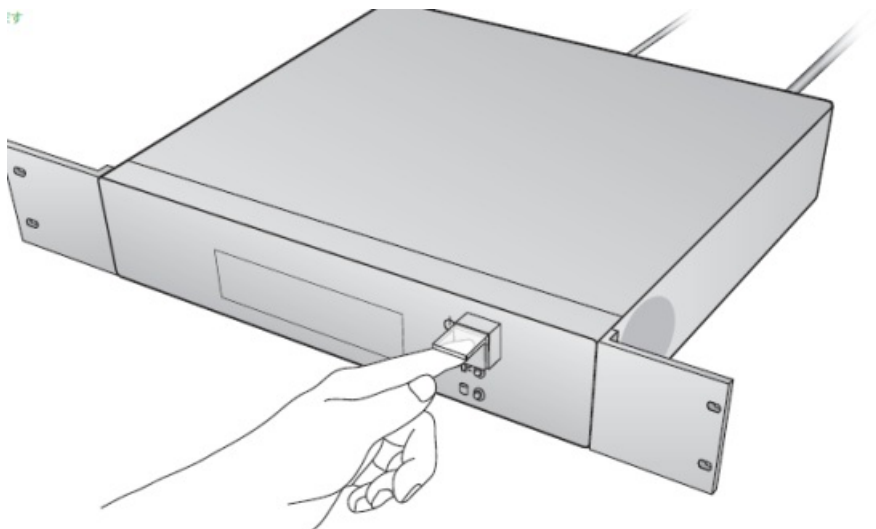

## Connect

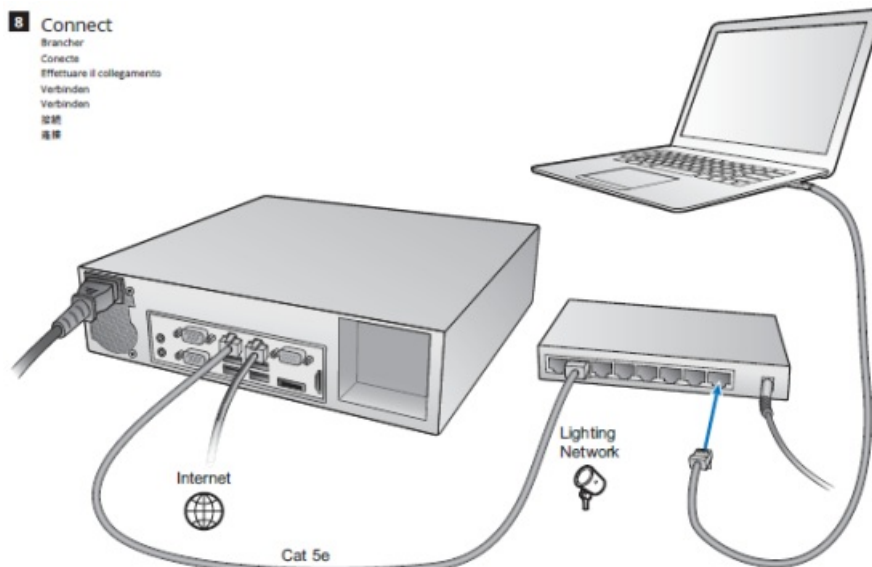

## Turn the power ON




E Light System Composer Software: [www.colorkinetics.com/global/support/lsm](http://www.colorkinetics.com/global/support/lsm)

## Install Light System Composer Software

### Push and release to start-up or shut down

**DO NOT** press and hold the power button or the LSM will not shut down properly. If the LSM does not shut down properly, file system corruption may occur.

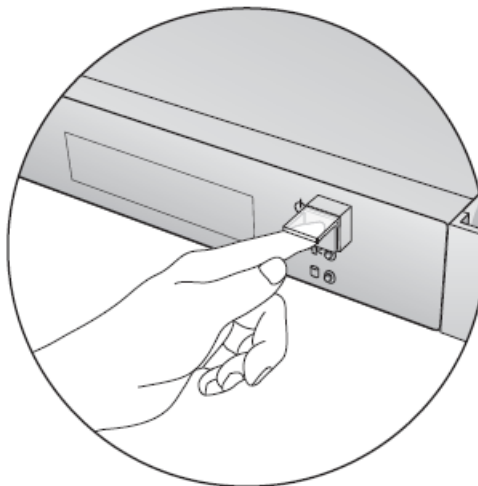


- Verify power is off before installing or de-installing.
- B Do not use any voltage or current the product is not rated for.
- Do not attempt to install or use until you read and understand the installation instructions and safety labels.
- Do not use if the product housing or power cables are damaged.
- Do not modify or alter the product. Doing so will void the warranty.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- CAN ICES-3 (A)/NMB-3(A).
- **Warning** – This is a class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.
- Light System Engine uses open-source software. Open source licenses and terms can be accessed via the Light System Engine web interface in the Config>Settings menu.

© 2020 Signify Holding. All rights reserved. Specifications are subject to change without notice. No representation or warranty as to the accuracy or completeness of the information included herein is given and any liability for any action in reliance thereon is disclaimed.

[www.colorkinetics.com](http://www.colorkinetics.com)

## Documents / Resources

	<p><a href="#">COLOR KINETICS Light System Manager Gen6</a> [pdf] Instruction Manual Light System Manager Gen6</p>
---	--

## References

- [Color Kinetics Official Website | Homepage](#)
- [Light System Manager Support | Color Kinetics](#)
- [Understanding Surge Protection For LED Lighting Systems - Knowledgebase](#)

Manuals+.