



**T2118 Interior  
Barometer with  
4-20mA Output**



# COMET T2118 Interior Barometer with 4-20mA Output Owner's Manual

[Home](#) » [COMET](#) » COMET T2118 Interior Barometer with 4-20mA Output Owner's Manual 

## Contents

- [1 COMET T2118 Interior Barometer with 4-20mA Output](#)
- [2 Product Information](#)
- [3 Technical Data](#)
- [4 Product Usage Instructions](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)



**COMET T2118 Interior Barometer with 4-20mA Output**



## Product Information

### Specifications

- **Product Name:** Interior Barometer with 4-20mA Output
- **Code:** T2118
- **Usage:** Atmospheric pressure transmitter for indoor use in building energy management and HVAC systems
- **Designed for:** Exacting interiors
- **Installation:** Easy installation on ordinary KU68 wiring boxes for household switches and sockets

### Technical Data

- **ATMOSPHERIC PRESSURE SENSOR:** Measuring range 0.1 hPa
- **Accuracy:** User adjustable, Resolution + value
- **Operating Temperature:** 9-30 Vdc
- **Channels:** 1
- **Output:** 4-20 mA
- **Available Pressure Units:** hPa, kPa, mbar, mmHg, inHg, inH2O, PSI, oz/in2
- **Configuration of Output:** User adjustable from PC
- **Power:** 9-30 Vdc
- **Protection Class:** IP20
- **Dimensions:** 88 x 106 x 33 mm
- **Weight:** Approximately 150 g
- **Warranty:** 3 years

### Product Usage Instructions

**code:** T2118

Atmospheric pressure transmitter. Indoor use. For exacting interiors in building energy management and HVAC systems. Are designed for easy installation on ordinary KU68 wiring boxes for household switches and sockets.

### Installation:

To install the interior barometer, follow these steps:

- Locate an ordinary KU68 wiring box for household switches and sockets.
- Mount the barometer securely on the box using appropriate screws.
- Ensure proper electrical connections are made according to the provided manual.

### Configuration:

To configure the output pressure units from a PC:

- Connect the barometer to a PC using the provided cable.
- Access the configuration software on the PC.
- Select the desired pressure units and save the configuration.

### Maintenance:

To ensure optimal performance:

- Regularly check and calibrate the barometer as per the user manual.
- Clean the sensor periodically to remove any dust or debris.

### FAQ

**Q: Can this barometer be used outdoors?**

**A:** No, this barometer is designed for indoor use only.


**Q: What is the warranty period for this product?**

**A:** The product comes with a warranty of 3 years from the date of purchase.

**Q: How can I adjust the output pressure units?**

**A:** You can adjust the output pressure units using a PC and the provided configuration software.

### Documents / Resources

	<p><a href="#">COMET T2118 Interior Barometer with 4-20mA Output</a> [pdf] Owner's Manual T2118, T2118 Interior Barometer with 4-20mA Output, T2118 Interior Barometer, Interior Barometer, T2118 with 4-20mA Output, Barometer with 4-20mA Output, 4-20mA Output Barometer, Output Barometer, Barometer</p>
---	--

### References

-  [TCPDF](#)
- [User Manual](#)