




# COMFAST CF-WR631AX Wireless Router Installation Guide

[Home](#) » [COMFAST](#) » COMFAST CF-WR631AX Wireless Router Installation Guide 

# COMFAST

 
COMFAST  
Quick Installation Guide

## Contents


- [1 Connection Diagram](#)
- [2 Setting Steps](#)
- [3 FAQ](#)
- [4 Documents / Resources](#)

## Connection Diagram


- 1.1 If use dial-up internet, please follow up below connection steps
- 1.2.3.4; If use broadband internet, please follow up below connection steps 2.3.4 and connect WAN port of wireless router to internet directly.

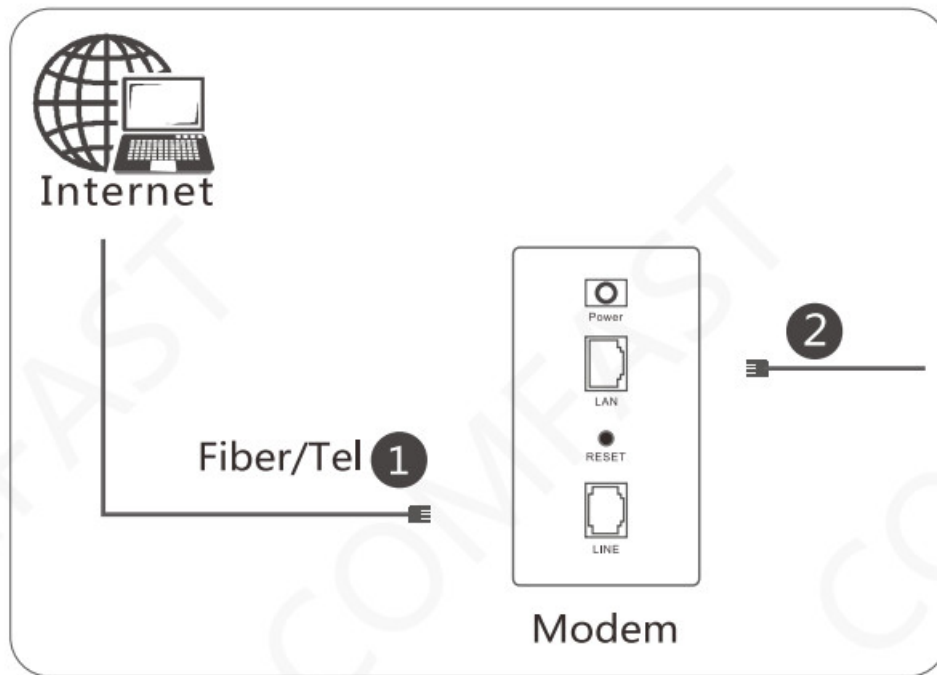

### Broadband Internet

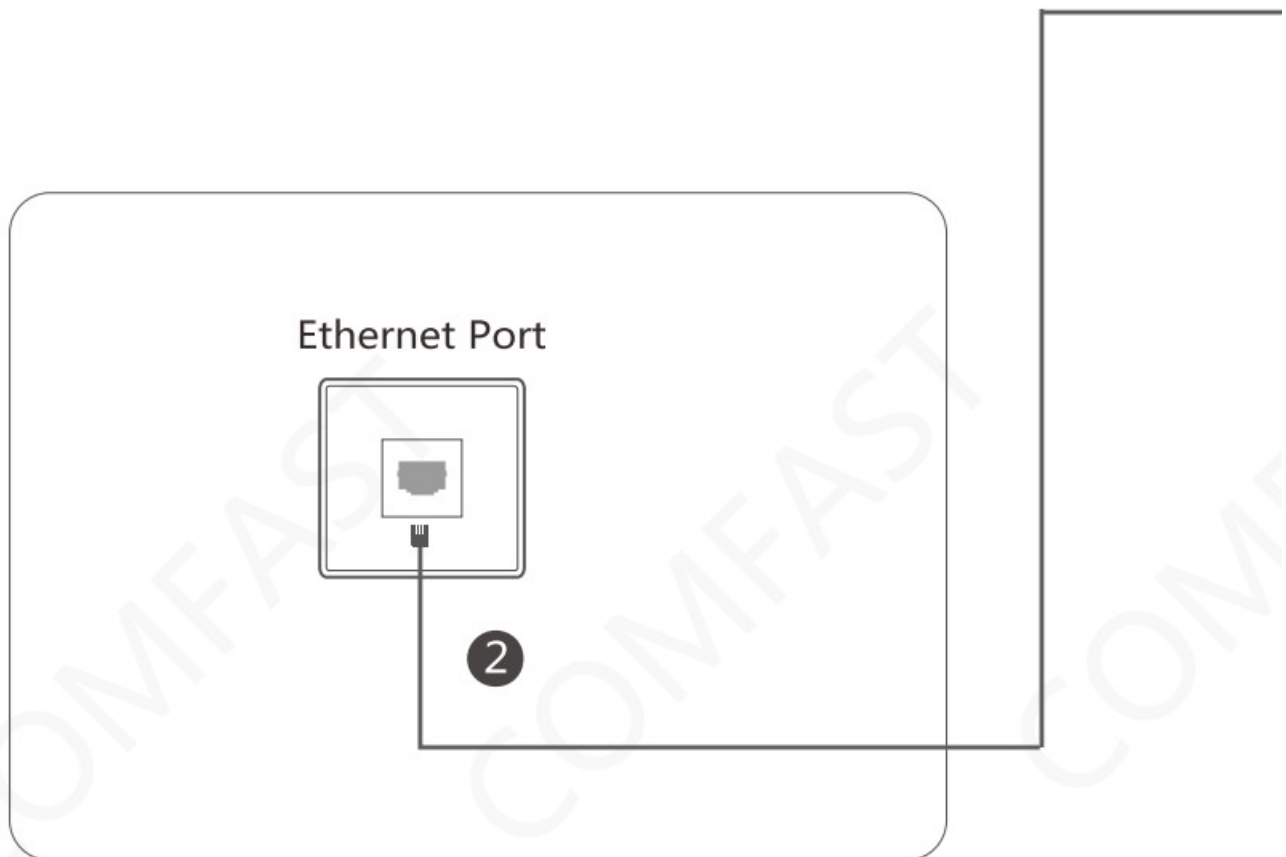 

### Wireless Connection

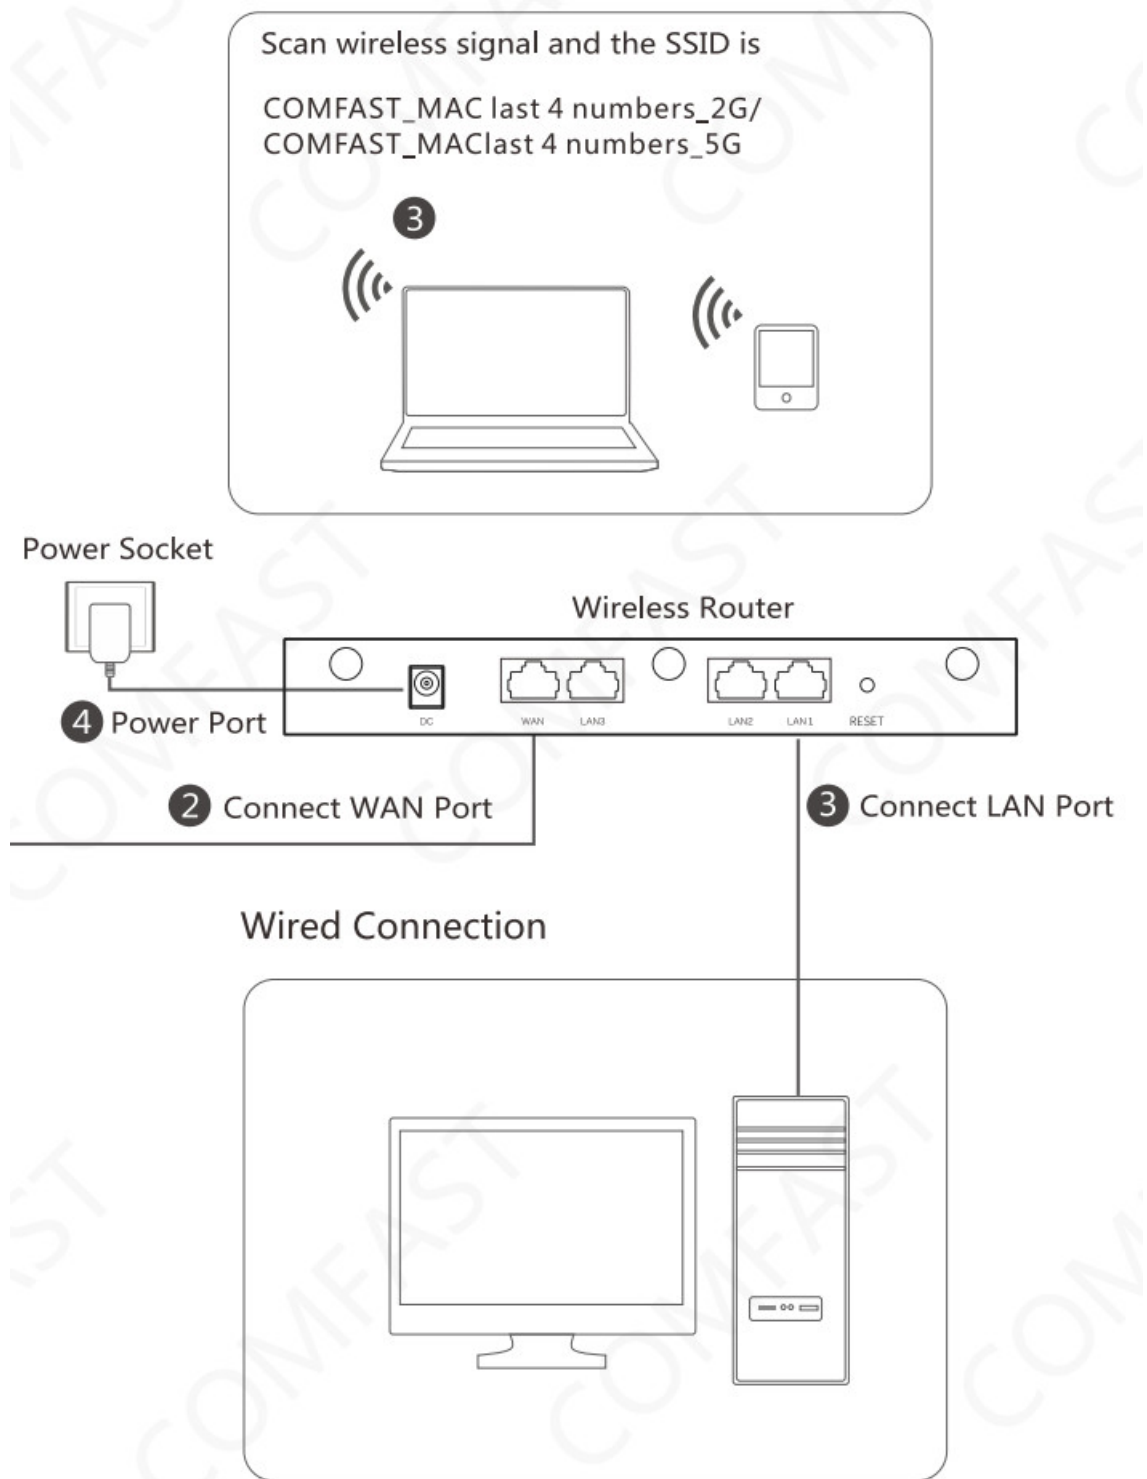 

**Attention:** This user manual is only for settings steps. If have more function requirements, please visit our web: [www.szcomfast.com](http://www.szcomfast.com)

## Setting Steps

2.1 After connecting the routing device, enter 192.168.0.1 in the address bar of your computer (mobile phone) browser to enter the device's setup wizard page. Click on "Experience Now".



2.2 Select the Internet access method, broadband dial-up mode needs to fill in the broadband account and password. Static IP mode requires IP address, subnet mask, gateway, and DNS server.

**Attention:** If login at the first time, it will go to “My guide” automatically. It is same if reset to factory settings.

The image shows the 'My guide' setup screen. At the top, there is an orange header with the text 'My guide'. Below the header, there are two icons: a router icon labeled 'My route' and a globe icon labeled 'Extranet setup'. Under 'My route', there is a section for 'Internet access mode' with a dropdown menu currently set to 'Broadband dial-up (PPPoE)'. Below this, there are input fields for 'user name' and 'password'. At the bottom of this section is an orange button labeled 'next step'.

2.3 Set the WiFi name and WiFi password. You can select “Dual-band in one”. This means that 2.4G and 5.8G are combined and displayed under the same name.

**My guide**

Dual frequency integration ☐

When enabled, 2.4G and 5.8G will be combined to display the same name, and the router will preferentially select the 5.8G network for the terminal. After the names are merged, some terminals may go offline and need to be connected again.

2.4GWiFi Name

5.8GWiFi Name

WiFi password

☒ Example Synchronize the 2.4G password to the 5.8GB password

☐ Use the 2.4G password as the router administration password

[last step](#) [accomplish](#)

2.4 Click” Done” to finish the settings. Then the interface will go to the home page; The device status will can be checked if log in again.

**My guide**

Dual frequency integration ☐

When enabled, 2.4G and 5.8G will be combined to display the same name, and the router will preferentially select the 5.8G network for the terminal. After the names are merged, some terminals may go offline and need to be connected again.

2.4GWiFi Name

5.8GWiFi Name

WiFi password

☒ Example Synchronize the 2.4G password to the 5.8GB password

☐ Use the 2.4G password as the router administration password

[last step](#) [accomplish](#)

## Warnings

1. Pis take off all connection if lightning weather in order to protect the device from damage.
2. Pis stay away from the heat source and keep ventilated.
3. Pis stay away from water when storage, transportation or working.
4. Pis use the power source which standard in the packing.
5. Pis put the device in a smooth surface.

## FA0

If I forget the login name and password of the device, what should I do(how to reset the router)?

A. If you forget the login name and password of the device, the only way you can do is do factory reset to the device, then the login name and password will be restored to their default values. There is a RESET button between the power port and the LAN port on the device. When the device is powered on, press the RESET button for about 7 seconds to reset the device successfully.

What if i can't open the administrator page of device in browser?

Why my laptop can't search out the signal of Wi-Fi SSID?

### **Statement**

Shenzhen Four Seas Global Link Network

Technology CO.,Ltd.Company

all rights reserved.

Without ours official writ permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book.

In any form or by any means(electronic, mechanical, printing, record ing or other possible means)or for the propagation of goods any commercial, profitable purposes.

COMFRST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co.,Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreed, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee.

Manufacturer: Shenzhen Four Seas Global Link Network

Technology Co.,Ltd.Company

Address: Room 607-610,Block B Tao JINDI Electronic

Business Incubation Base, Tenglong Road, Longhua District,

Shenzhen, China

Hotline: 0755 83790059/83790659

Website: [www.szcomfast.com](http://www.szcomfast.com)

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.


This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**RF Exposure Information**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

**Documents / Resources**

	<p><a href="#">COMFAST CF-WR631AX Wireless Router</a> [pdf] Installation Guide</p> <p>OYR-CF-WR631AX, OYRCFWR631AX, cf wr631ax, CF-WR631AX Wireless Router, CF-WR631AX, Wireless Router, Router</p>
---	---