

comfee'

Comfee
CRD12L1B1BPGCA
Multi Functional Rice
Cooker



Comfee CRD12L1B1BPGCA Multi Functional Rice Cooker User Manual

[Home](#) » [comfee](#) » Comfee CRD12L1B1BPGCA Multi Functional Rice Cooker User Manual 

Contents

- 1 Comfee CRD12L1B1BPGCA Multi Functional Rice Cooker
- 2 IMPORTANT SAFEGUARDS
- 3 PRODUCT OVERVIEW
- 4 SPECIFICATIONS
- 5 QUICK START GUIDE
- 6 OPERATION INSTRUCTIONS
- 7 INSTRUCTIONS FOR USE
- 8 CLEANING AND MAINTENANCE
- 9 TROUBLESHOOTING
- 10 SERVICE AND SUPPORT
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

comfee'

Comfee CRD12L1B1BPGCA Multi Functional Rice Cooker



Specifications

- **Product Model:** CRD12L1B1BPGCA
- **Voltage:** 120V~
- **Frequency:** 60Hz
- **Power:** 300W
- **Capacity:** 1.2L

Product Overview

- Inner pot
- Upper lid
- Removable lid
- Cooker body
- Socket

Quick Start Guide

1. Prepare rice and water: Place rinsed rice into the inner pot and choose the appropriate water level.
2. Close the cover of the rice pot and select functions, such as QUICK RICE.
3. Set the timer for cooking completion.
4. Start cooking by pressing the button and then the START/CANCEL button.

Operation Instructions

- Display Screen
- DELAY START Button

- START/CANCEL Button
- MENU Button

Instructions for Use

1. Use the measuring cup provided to measure the rice.
2. 1 cup of rice can cook about 2 bowls of rice (bowl rim diameter is about 11.5cm).
3. Rice should be level with the rim of the cup for accurate water level control.

Quick Rice Cooking Steps

1. Measure and wash rice using the provided cup.
2. Add water according to the rice water level indicator.
3. Cook by selecting QUICK RICE function and pressing START.
4. Cooking completes in about 30 minutes and enters keep-warm mode.

FAQ

Q: Can I use this rice cooker for other grains besides rice?

A: While primarily designed for cooking rice, you can experiment with other grains but may need to adjust water levels and cooking times accordingly.

IMPORTANT SAFEGUARDS

CAUTION

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Please allow the product to cool down before installing or removing components.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors. HOUSEHOLD USE ONLY.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. into the wall outlet.
- Do not use appliance for purposes other than its intended use.
- CAUTION: Risk of Electric Shock. Cook only in removable container (Inner pot provided with the product).
- Intended for countertop use only.
- A short power-cord is used to reduce the risk resulting from it being grabbed by children becoming entangled in,

or tripping over a longer cord.

- Do not use appliance for other than intended use.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Always attach plug to appliance first, then plug cord into the wall outlet . To disconnect, turn any control to “off”, then remove plug from wall outlet.


WARNING

WARNING: Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord. Cord: DO NOT IMMERSE IN WATER.


HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS

PRODUCT OVERVIEW

COMPONENT NAME

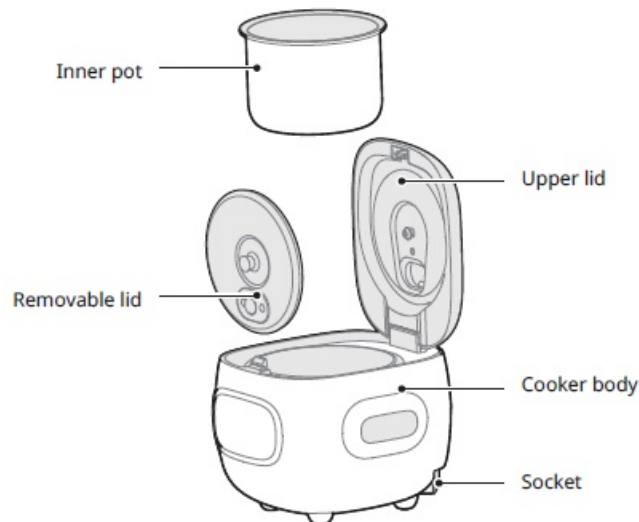

PARTS LIST

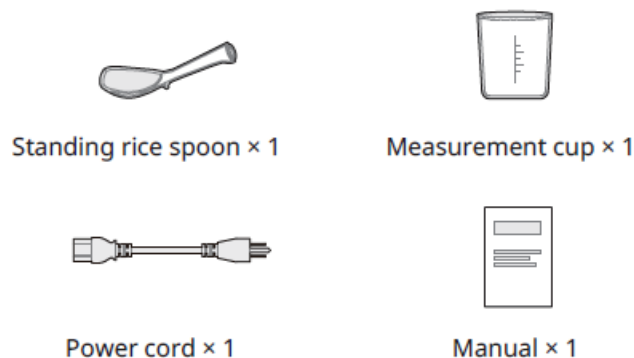 

SPECIFICATIONS

TECHNICAL DATA OF THE PRODUCT

Product Model	Voltage	Frequency	Power	Capacity
CRD12L1B1BPGCA	120V~	60Hz	300W	1.2L

NOTE

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

QUICK START GUIDE


Reservation

For example: Make an appointment to finish cooking in 8 hours.

1. Prepare rice and water Place the rinsed rice into the inner pot and choose the appropriate water level according to the rice amount.



2. Close the cover of the rice pot and select functions, such as “QUICKRICE”.

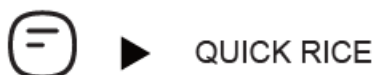

3. Set the timer for cooking completion Press the “⌚” button, the Time Display again to adjust the displayed reservation time.



4. Start cooking Press the “START/CANCEL” button, the time.



Gentle Reminder:

Display status refers to actual product.

5. Cancel cooking

Pressing the “START/CANCEL” button can cancel the selected cooking function.



Gentle Reminder

1. The time displayed under pre-set timer mode is the length of time from the start to the completion of cooking;
2. The pre-set time is suggested not for more than 12 hours, otherwise the rice may smell bad;
3. The pre-set time of the selected cooking function's should not be less than the cooking time. For example, if the

reservation time for “SOUP” is less than 2 hours then cooking will started immediately because the cooking time is pre-set as 2 hours.

OPERATION INSTRUCTIONS

OPERATION PART



INSTRUCTIONS FOR USE


- 1. Use the measuring cup provided with the product to measure the rice.



1 cup of rice can cook about 2 bowls of rice (the diameter of the bowl rim is about 11.5cm)


NOTE

- 1. A 1.2-liter conventional rice cooker can cook up to 2 cups of rice, otherwise it may cause
- 2. 11.5cm is the size of a regular household bowl.

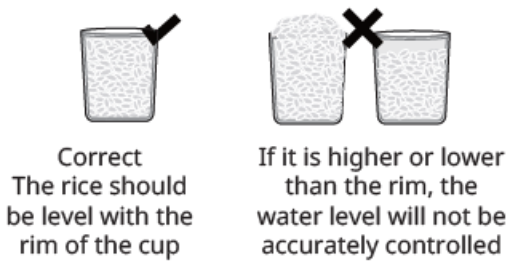


QUICK RICE COOKING STEPS

 - 1. Measure and wash rice
Use the measuring cup provided with the product to measure the rice and rinse the rice thoroughly.
- 2. Add water
Add water according to the rice water level in the picture on the right (taking long grain rice as an example)
- 3. Cook

Close the rice cooker lid and press the “” button.

Select the “QUICK RICE” function and press the “START” button to enter the cooking state. After about 30 minutes, the cooking is completed and it automatically enters the keep-warm mode.

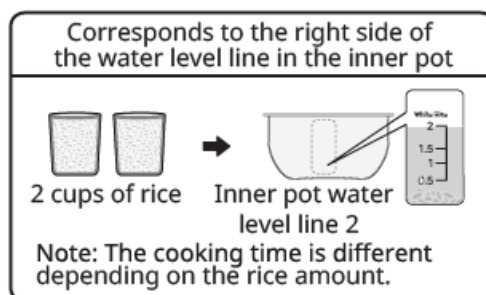

INSTRUCTIONS FOR USE

1. Rice-water Ratio 1. Rice measuring method 1 measuring cup of rice can be cooked into 2 bowls of steamed rice, and the diameter of the bowl is about 11.5 cm.

2. Put in the rice and water

Take cooking 2 cups of rice as an example, put the washed rice into the inner pot and add water to the corresponding scale line 2 (The water level line shall be subject to the actual object).




FUNCTION DESCRIPTION

(For specific functions, please refer to the actual panel for selective reference)

QUICK RICE

1. Put the washed rice into the inner pot, refer to the rice-water ratio and inject the water according to the Quick Rice and water level line, or increase or decrease the water quantity according to personal preference.
2. Close the cover and select the “QUICK RICE” cooking function (Cooking time is approximately 30 to 40 minutes, depending on the amount of rice and water used).

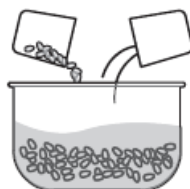

NOTE


1. The water shall not exceed the highest scale line.
2. For example, the rice-water ratio for bean or cereal quick rice can be adjusted according to the actual situation.

BROWN RICE

1. Measure and wash rice Measure the rice in the measuring cup supplied with the product and wash the rice

well.

2. Add water Add water referring to the rice- water ratio and water level line, the amount of water can be adjusted according to personal taste.

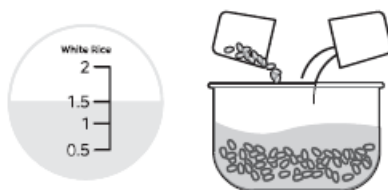

NOTE

The cooking time will vary depending on the amount of rice.

3. Cooking

Close the rice cooker lid and press the "⌚" button. Select the "BROWN RICE" function and press the "START/CANCEL" button to enter the cooking state. After about 1 hour and 20 minutes, you will hear a di-beep, which indicates that cooking is finished, and the cooker will automatically enter the KEEP WARM mode.


Tips

- "BROWN RICE" is cooked for approximately 1 hour and 20 minutes.
- Soak for two hours before using the function "BROWN RICE".

1. Measure Measure oats using the provided measuring cup and place them in the inner pot (Maximum quantity is 0.75 cup).

Add water

2. Measure the water using the provided measuring cup and add it to the inner pot (Reference, 0.75 cup of oats requires 1.8 cups of water).

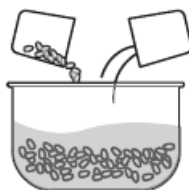

3. Cooking


Close the rice cooker lid and press the "⌚" button. Select the "OATMEAL" function and press the "START/CANCEL" button to enter the cooking state (Cooking time is approximately 35 minutes). After cooking, it automatically enters the keep-warm mode.

NOTE

The water shall not exceed the highest scale line.

SOUP

1. Prepare the ingredients Wash the ingredients, cut them into pieces and put in the inner pot.

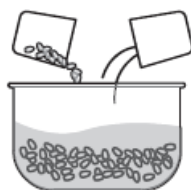

2. Add water


Add water according to personal preference, not exceeding the highest scale line.

3. Cooking

Close the rice cooker lid and press the "⌚" button. Select the "SOUP" function and press the "START/CANCEL" button to enter the cooking state (Cooking time is approximately 1 hour and 35 minutes). After cooking it automatically enters the keep-warm mode.

CAKE

1. Prepare ingredients Prepare the ingredients according to the figure on the right.

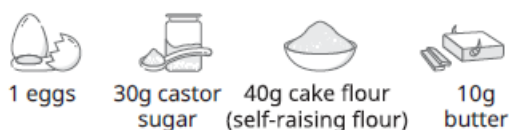

Preparation of materials

2. Mixing

Add the sugar, the eggs and mix with a whisk until frothy, then add the cake flour and mix quickly, followed by the butter and pour into the rice cooker before the froth disappears (Grease the bottom of the pot with a little butter to avoid sticking, Do not use the inner pot of the rice cooker for stirring).




Mix and stir

3. cooking

Close the lid, press the "⌚" key and select CAKE (50 minutes by default), and then press START/CANCEL. The cooking is finished when a di-beep sounds, and the cooker automatically enters the KEEP WARM mode.


STEW

1. Prepare the ingredients Wash the ingredients, cut them into pieces and put in the inner pot.

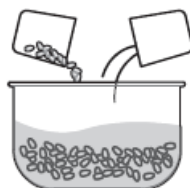

2. Add water Add water according to personal preference, not exceeding the highest scale line.

3. Press the "⌚" button to select the "STEW" function, and press the "START/CANCEL" button to enter the cooking state.

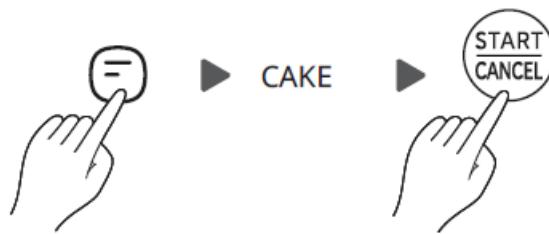


START/CANCEL

1. During the cooking process, press the START/CANCEL button to cancel the cooking process and enter standby mode.


Gentle Reminder

1. After cooking, it will automatically trigger the heat preservation function;
2. During the process of warm keeping, the product will be heated to maintain the temperature above 65 degrees Celsius;
3. The product can keep warm for as long as 24-hours;
4. In order to maintain the food taste and appearance, the heat preservation time is suggested within 5 hours.

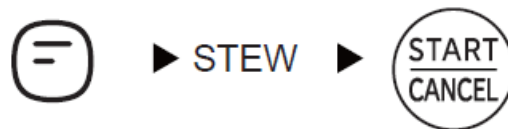

THE USE OF WATER LEVEL LINES

White Rice

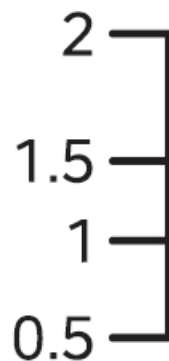

Rice: When adding water, for QUICK RICE, BROWN RICE, the water level line depends on the water level line scale of the rice.

Maximum rice amount	Minimum rice amount
2 cups	0.5 cup

Oatmeal: Add water according to personal preference. Refer to 0.75 cup of oats and 1.8 cups of water Cooking oatmeal. Refer to 0.5 cup of oats and 1.25 cups of water Cooking oatmeal.

Maximum rice amount	Minimum rice amount
0.75 cup	0.5 cup

CLEANING AND MAINTENANCE

Please disconnect the power supply before cleaning and maintenance

COVER DISASSEMBLY AND CLEANING

 
1. Pull the middle silicone gripper outward to remove the cover
2. Clean the cover and dry it
3. Install the cover back to its original position.



Note: When installing the cover, the flat surface of the cover sealing ring is on the outside.

COVER AND SEALING RING INSTALLATION

1. Pay attention to the direction of the cover before installation, and install the parts one by one in place.

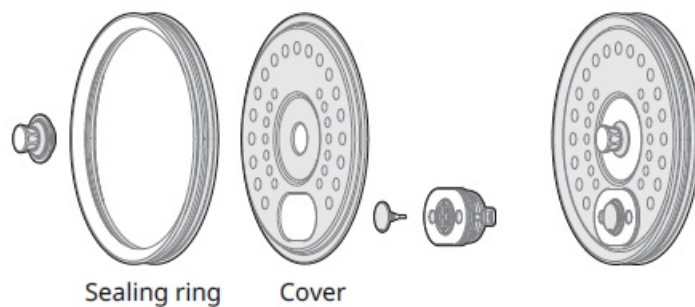

Note: Complete the installation as shown in the picture, and ensure that all seals on the the rice.

CLEANING COOKER BODY

Use a dry rag to clean the water, rice grains and other debris on the water channel and electric heating plate.



INNER POT CLEANING

Dry the bottom and outer surface of the inner pot with a rag.

Do not use steel wool to clean the inner pot to avoid scratching the coating.



TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the tables carefully below in order to save your time and money that may cost for calling to the service center.

Abnormal situation	Possible reasons	Solutions
Too soft, too hard, too thick, too thin, not cooked, burnt rice, rice soup overflowing and insufficient boiling	<ul style="list-style-type: none">• Not add water according to the water level line• Wrong selection of the function• There is foreign matter on heating plate• No proper installation of the steam valve• Deformation of inner pot	<ul style="list-style-type: none">• Add water according to the water level line• Select the corresponding function• Remove foreign matters on the heating plate and cook again• Steam valve is installed in place• Contact customer replace the inner pot
Peculiar smell, discolouration and dry during heat preservation	<ul style="list-style-type: none">• The sealing ring and the edge of the inner pot are mixed with foreign matters• Product air leakage• Too long warm preservation time	<ul style="list-style-type: none">• Remove the foreign objects• Contact customer service center to replace the sealing ring• It is recommended that the heat preservation shall be within 5 hours
Abnormal noise in the working process	<ul style="list-style-type: none">• Water on the inner pot has not been dried• The sound of the lid snapping shut when turning on or off the rice cooker.	<ul style="list-style-type: none">• Dry the water on the inner pot before using• Normal phenomenon

or state	Abnormal display	Possible Reason	Solutions
Light on	E1	Main thermistor (bottom sensor) open circuit	Pull out and re-connect the power cord, the display still shows same message, please send the cooker to your local after-sales service centre for maintenance.
Light on	E2	Main thermistor (bottom sensor) short circuit	
Light on	E5	Top lid sensor (handle thermistor) open circuit	
Light on	E6	Top lid sensor (handle thermistor) short circuit	
Light on	EU	Communication error	
Flash	EU	Communication error	

SERVICE AND SUPPORT

1 YEAR LIMITED WARRANTY

- This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.
- This warranty does not cover wear from normal use, and damages to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales
- This warranty is void if products is used for other than single-family household use or subjected to any voltage and waveform. We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchant-ability prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you. Please note that failure to complete and submit this form does not diminish your warranty

SERVICE AND SUPPORT

In the Event of a warranty period claim, question, comments or if service is required for this product, please contact us at the following:

 
Customer Service Management Office: Markham ON, L3R 5B4

Toll Free: 1-888-365-2230

Amazon Store: <https://www.feelcomfee.com/ca>

E-mail: Canadasupport@comfeeappliance.com Made in China

Documents / Resources

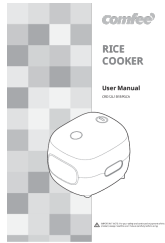

[Comfee CRD12L1B1BPGCA Multi Functional Rice Cooker](#) [pdf] User Manual
CRD12L1B1BPGCA, CRD12L1B1BPGCA Multi Functional Rice Cooker, CRD12L1B1BPGCA,
Multi Functional Rice Cooker, Functional Rice Cooker, Rice Cooker, Cooker

References

- [🇨🇦 Canada](#)
- [🇨🇦 Canada](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.