

COMISO X260 Wireless Speaker User Manual

Home » COMISO » COMISO X260 Wireless Speaker User Manual

Contents

- 1 COMISO X260 Wireless **Speaker**
- 2 Precaution
- 3 Accessories
- **4 Product Overview**
- **5 Functions**
- **6 Troubleshooting**
- **7 Warranty Service**
- **8 Specifications**
- 9 Warranty Card
- 10 Documents / Resources
- 11 Related Posts



COMISO X260 Wireless Speaker




Precaution

- 1. It is normal that the speaker will get hot in playing or charging.
- 2. Please tum off the speaker and disconnect ii with all audio devices before cleaning. Do not use alcohol, benzene or other chemicals to clean the speaker.
- 3. Do not throw or tread on the speaker. Please place it on a stable surface when in use.
- 4. Do not place the speaker close to extremely cold or hot objects.
- 5. Please use the original accessories provided by us.
- 6. Do not disassemble the speaker without authorization.

Accessories

- Charging Cabla x 1
- Instruction x 1
- Hookx 1

Product Overview

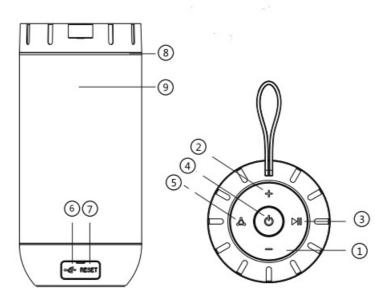

- 1. Vol-(Previous track)
- 2. Power ON/OFF
- 3. Vol+(Next track)
- 4. TWS pairing
- 5. Play/Pause
- 6. Charging port
- 7. Resat
- 8. Indicator Ilg ht
- 9. Mic

Functions

- 1. Charging: Please fully charge the speaker for about 5 -6 hours before first use. (The indicator light is red when charging. and It wlll turn to green after fully charged.) Use the original charging cable to connect to the power adapter (DC 5V /2A) to get charged.
- 2. Powar On/Off: Long press Iha power button• e»• until the blue indicator light flashes, then release the power button, the speaker turns on with a prompt tone.
- 3. Bluetooth Pairing: After turned on, the blue indicator lightkeeps flashing quickly. Then open your smartphone's Bluetooth function. search for and choose ·comlso-X26 •. After successful paring, you will hearthe"di-di" prompt tone. Now you can play music in your smartphone with this speaker.
- 4. Automatic Connection: If you already paired with phone, tablet or other bluetooth devices, when it turns on (not for the first time), the speaker will automatically pair with this smart phone.
- 5. After paired successfully, the blue IIg ht stays IIghtIng, and you can play music or video via it, and you can check the battery level on your phone.

- 6. When you are playing music via bluetooth, short press + to increase the volume, long press {, to listen nextsong
- 7. When you are playing music via bluetooth, short press :=- to decrease the volume, long press =- to llsten previous song.
- 8. When the speaker connected with IOS device, the volume control is synchronized.
- Aftar paired successfully, short press •l>□□ to play and pause.
- 10. After paired successfully, when there is a calling, short press• 1>□r button to pick up the call by this speaker, long press the l>□□• utton for 2 seconds to reject this call, and when answering the call, short press the• l>□□" button to end lt. Radlal: double press the l>10" button. your smartphone will redial your last dialed number.
- 11. Automatic Power Off: the speaker will turn off in 10 minutes in below situations to save battery power: A. the device is not connected B:the phone is out of transmission range. C:the bluetooth is turned off in your phone.
- 12. Pair to Another Smartphone: Method A: Turn off the smartphone I>:s Bluetooth function, you will hear the 'di-di' prompt tone and the blue Indicator lightwlll turn to flash quickly. Then the smartphone B can search for "comisoX26 and choose it to pair. Method B: Long press the "[>II" button for 3 seconds until you hear the 'di-di' prompt tone, the blue indicator light will turnto flash quickly, it means that the smartphone B could search for "comiso
 - -X26 and choose it to pair .
- 13. Clear Paired Information: The speaker can remember up to 8 device's pairing information, if you need to clear these information, turn on the speaker, and long press the "l>□r button for 6 seconds until you hear the 'di-di" prompt tone and the pairing information list is cleared.
- 14. True wireless stereo connection: Power on the two speakers ,do not pair it with your phone, first long press •A• button of one of the speakers to set the minto the True wireless stereo paring mode. After the two speakers are successfully paired, the blue light of the host will flash quickly and wait for the connection, and the blue light of the slave will be stay lighting. And then open the bluetooth In your phone to connect one of the comlso-X26 to play music. Under True wireless stereo mode, long press• A of either speaker to disconnect True wireless stereo function.
- 15. Low Battery Warning: When the speaker's battery is less than 20%, the red indicator light will flash, then please charge the speaker. When battery is less than 5%, it will turn off automatically.
- 16. If the speaker is not to be used for a long time, please fully charge It at least once a month to avoid decreasing the speaker battery life.
- 17. Note: When speakers are in True wireless stereo pairing mode, all the control functions are in sync, so please only operate one of them.

Troubleshooting

1. The 'comiso-X26" device is in smartphone's Bluetooth device list. but failed to connect. Reason A: The speaker Is not In pairing mode Solution: Long press the • I>□□ • button for about 3 seconds to set it to pairing mode, when the blue indicator light flashes fast, choose 'comiso-X26" to pair. Reason B: The speaker's paired information has been cleared. Solution: Delete the device •comiso-X26" in your phone, then search'comiso-X26' and choose it to pair again .

- 2. The smartphone could not search 'comiso-X26". Reason: The speaker is not in pairing mode. Solution: Long press the I>□□ button for about 3 seconds to set ii into paring mode, when the blue indicator light flashes fast. choose ·comiso-X26" to pair.
- 3. Toe charging time is too long. Reason: The adapter's power output is too low, and the charging cable's consumption is too high. Solution: Please choose the adapter with output not less than DC 5V/2A end use Iha orlglnal charging cable.

Warranty Service

We provide following warranty services:

- 1. 12-month warranty for quality-related issues: Within 12 months after the date of purchase, we take care of all quality -related issues with a replacement or full refund.
- 2. Within the warranty validity, we provide free after sale service, exceptforfollowing cases:
 - · No original warranty card or valid invoice.
 - The speaker's malfunction or damage is caused by force majeure, incorrect operation (not as this instruction manual directed) or any man-made factors.
 - The speaker is not purchased from authorized dealer and no authorized dealer's stamp on the warranty card.
 - The data of purchase on the warranty card has been changed.
 - The speaker's malfunction or damage appears during shipment.
 - The speaker's malfunction or damage is caused by disassembly or repairing without authorization.

Specifications

Bluetooth Solution	V5.0+TWS	
Waterproof level	IP65	
Voltage input	DC5V/2A	
Out Power	6W*2	
Speaker	Φ40*2 4Ω6W	
Battery	3.7V/4000 mAh	
Product Size	D70mm * H150.5mm	
Product Weight	390g	

Warranty Card

Please ask the dealer to fill the warranty card immediately after purchasing. We recommend to keep this card for future reference.

Name	Age	
Tel Num.	Postcode	
Gender	Product	
Date of Purchase	Product Code	
Part Num.	Sale Num.	
Postal Address		

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interference received, including Interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuantto Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there Is no guarantee that Interference wlll not occur In a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be deletr' lhe uset is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly
 approved by the party responsible for compliance could void the user's authority to operate the equipment.

To our valued customers,

We want you to be completely satisfied with your purchase. If you have any questions about this product, please a mall us via support@com110.com.cn, Our customer support team will handle it for you within 24hours.

Important Prompt

The J)product can be charged by 5V Chargers/USS po<ls only. Adapters over 5V such as quick charge are not allowed, which may cause fire or explode!ion.

Documents / Resources



COMISO X260 Wireless Speaker [pdf] User Manual X260, 2AEZG-X260, 2AEZGX260, X260 Wireless Speaker, Wireless Speaker