



COMISO X26M Wireless Speaker User Manual

[Home](#) » [COMISO](#) » COMISO X26M Wireless Speaker User Manual 

Comiso

Contents

- [1 COMISO X26M Wireless Speaker](#)
- [2 FUNCTION](#)
- [3 Precaution](#)
- [4 PRODUCT OVERVIEW](#)
- [5 Troubleshooting](#)
- [6 Specifications](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

COMISO X26M Wireless Speaker



FUNCTION

unit flashes slowly, accompanied by a “di-di” prompt sound. Then open the bluetooth in your phone to connect one of the “comisoX26M” to play music. Then if you want to disconnect the True wireless stereo, long press “A” of either speaker to disconnect True wireless stereo function.

Notice:

- When you first connect the True wireless stereo, please long press “I>tl” for 5 seconds to clear the pairing information list;
- When the speakers are in the True wireless stereo pairing state, all control functions are synchronized, so just operate any of them.
- Low Battery Warning: When the speaker’s battery is less than 20%, there will a low battery warning sound, then please charge the speaker. When the speaker’s battery is less than 5%, it will turn off automatically.
- Charging Time: Please use the Charging cable provided by us to charging . The adapter specification needs to select an adapter with an output capability of not less than DC 5V/1A for charging, otherwise it will increase the charging time. (The full charging time of DC 5V/1A is about 2 hours, and the indicator light is red when charging, the indicator light is off when charging is completed.)
- If the speaker is not to be used for a long time, please fully charge it at least once a month to avoid decreasing the speaker battery life.

Precaution

1. It is normal that the speaker will get hot in playing or charging.
2. Please turn off the speaker and disconnect it with all audio devices before cleaning.
3. Do not throw or tread on the speaker . Please place it on a stable surface when in use .
4. Do not use alcohol, benzene or other chemicals to clean the speaker.
5. Do not place the speaker close to extremely cold or hot objects.
6. Please use the original accessories provided by us.
7. Do not disassemble the speaker without authorization.

Accessories


Charging Cable x 1

Instruction x 1

Hook x 1

PRODUCT OVERVIEW

- | | |
|-------------------------|-------------------|
| ① Vol+ (Next Track) | ⑥ Mic |
| ② Play/Pause | ⑦ TF Port |
| ③ Vol- (Previous Track) | ⑧ Charging Port |
| ④ Pairing/MODE | ⑨ Indicator Light |
| ⑤ Power ON/OFF | ⑩ Reset |

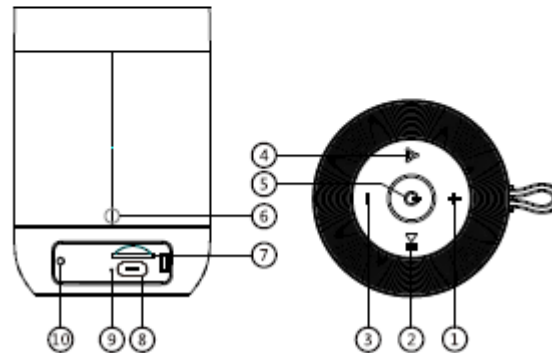

Troubleshooting

1. The “comiso-X26M” device is in smartphone’s Bluetooth device list, but fail to connect. Reason A: The speaker is not in pairing mode Solution: Long press the Play/Pause button for about 3 seconds to set it to pairing mode, when the blue indicator light flashes fast, choose “comiso-X26M” to pair. Reason B: The speaker’s paired information has been cleared. Solution: Delete the device “comiso-X26M” in your phone, then search “comiso-X26M” and choose it to pair again .
2. The smart phone could not search “comiso-X26M” Reason: The speaker is not in pairing mode. Solution: Long press the “Play/Pause” button for about 5 seconds to set it into pairing mode, when the blue indicator light flashes fast, choose “comiso-X26M” to pair.
3. The charging time is too long. Reason : The adapter’s power output is too low, and the charging cable’s consumption is too high. Solution: Please choose the adapter with output not less than DC 5V /1A and use the original charging cable.

FUNCTIONS

1. Charging: Please fully charge the speaker for about 2 hours before use (The indicator light is red when charging, and it will turn off after fully charged). Use the original charging cable to connect the power adaptor (DC 5V / 1A) to get charged.
2. Power On/Off: Long press the power button “” until the blue indicator light flashes, then release the power button, the speaker turns on with a prompt tone.
3. Bluetooth Pairing: After turned on, the blue indicator light keeps flashing quickly. Then open your smart phone’s bluetooth function, search for and choose “comiso-X26M” After successful pairing, you will hear the “di -di” promote tone. Now you can play music in your smart phone with this speaker.
4. Automatic Connection: If you are already paired with phone, tablet or other bluetooth devices, when it turns on (not for the first time), the speaker will automatically pair with this smart phone
5. After paired successfully, the blue light flashes slowly, and you can play music or video via it, and you can

check the battery level on your phone.

6. When you are playing music via bluetooth, short press " " to decrease the volume, long press "-" to listen previous song.
7. When you are playing music via bluetooth, short press " -||- " to increase the volume, long press " + " to listen next song.
8. When the speaker connected with IOS device, the volume control is synchronized.
9. After paired successfully, short press "t>||" to play or pause.
10. After paired successfully, when there is a calling , short press "l>||l" to pick up the call by this speaker, long press the " [>|| " for 2 seconds to reject this call, and when answering the call, short press the " l>||l " to end it. Redial: Double press the "l>t||", your smart phone will redial your last dialed number.
11. Power Off : Long press "O" for 3 seconds until you hear the prompt tone and the speaker will be turned off.
12. Automatic Power Off: The speaker will turn off in ten minutes below situations to save battery power: A. The device is not connected. B.The phone is out of transmission range. C. The bluetooth is turned off in your phone.
13. Paired Another Smart phone: Method A: Turn off the smart phone A's bluetooth function, you will hear the "di~ di" prompt tone and the blue indicator light will turn to flash quickly. Then the smart phone B can search for "comiso-X26M" and choose it to pair.Method B: Long press " l>||l "for 3 seconds until you hear the "di -di" prompt tone and the blue indicator light will turn to flash quickly, it means that the smart phone B can search for "comiso-X26M" and choose it to pair.
14. Clear Pairing Information: The speaker can remember up to 8 device's pairing information, if you need to clear these information , then turn on the speaker and long press " t>||l" for S seconds until you hear the "di -di" prompt tone and the paired information is cleared.
15. Mode switching: When you are playing music, short press "A ", then you can switch between Bluetooth mode and TF card mode.
16. True wireless stereo Connection:Power on the two speakers, first long press A button of one of the speakers to set them in to the True wireless stereo paring mode, then the blue indicator flashes quickly with "di-di" prompt tone. At this time, the two speakers are in the state of interconnection. After the speakers is successfully connected, the blue light of the main unit flashes quickly, and the blue light of the auxiliary This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device ma y not cause harmful interference.
 - (2) this device must accept any interference received, including interference that ma y cause undesired operation.

Specifications

| | |
|--------------------|---------------|
| Bluetooth Solution | JL 5.0 |
| Waterproof level | IPX4 |
| Voltage Input | DC5V/1A |
| Out Power | 5W |
| Battery | 3.7V 600mAh |
| Product Size | Φ56mm * H82mm |
| Product Weight | 154g |

Warranty Service


We provide the following warranty services:

- 12-month warranty for quality-related issues: Within 12 months after the date of purchase, we take care of all quality-related issues with a replacement or full refund.
- Within the warranty validity, we provide free after sale service, except for following cases:
 - No original warranty card or valid invoice.
 - B. The speaker's malfunction or damage is caused by force majeure, incorrect operation (not as this instruction manual directed) or any man-made factors.
 - C. The speaker is not purchased from authorized dealer and no authorized dealer's stamp on the warranty card.
 - D. The date of purchase on the warranty card has been changed.
 - The speaker's malfunction or damage appears during shipment.
 - The speaker's malfunction or damage is caused by disassembly or repairing without authorization.

Warranty Card

| | | | |
|------------------|--|--------------|--|
| Name | | Age | |
| Tel Num. | | Postcode | |
| Gender | | Product | |
| Date of Purchase | | Product Code | |
| Part Num. | | Sale Num. | |
| Postal Address | | | |

Documents / Resources

| | |
|---|--|
|  | COMISO X26M Wireless Speaker [pdf] User Manual X26M, 2AEZG-X26M, 2AEZGX26M, X26M Wireless Speaker, Wireless Speaker |
|---|--|

