



Command 17003ES Large Utility Hook Instruction Manual

Home » COMMAND » Command 17003ES Large Utility Hook Instruction Manual

Contents

- 1 Command 17003ES Large Utility
- **2 USING INSTRUCTION**
- **3 REMOVING INSTRUCTION**
- **4 WARRANTY**
- **5 CONTACT INFORMATION**
- 6 Documents / Resources
 - **6.1 References**




Command 17003ES Large Utility Hook




USING INSTRUCTION

APPLY

- 1. Clean surface with rubbing alcohol. Do not use household cleaners.
- 2. Remove red liner. Press adhesive to hook.
- 3. Remove black liner. Press to wall for 10 seconds.

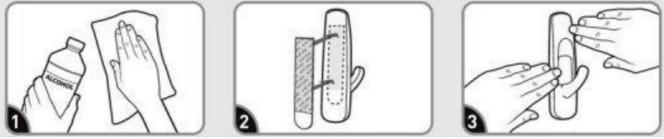


- 4. To ensure adhesive hold, slide the hook up and off.
- 5. Press the base firmly for 30 seconds.
- 6. Slide the hook back on. Wait 1 hour before use.

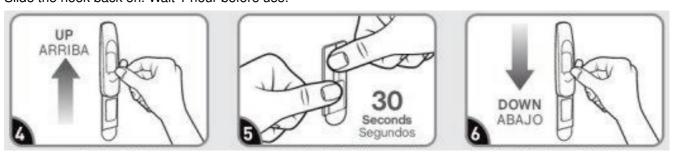

REMOVING INSTRUCTION

REMOVE

- 1. Slide hook up and off.
- 2. Gently hold mounting base in place.
- 3. Never pull the strip towards you! Always pull straight down.
- 4. Stretch the strip slowly against the wall at least 15 inches to release.

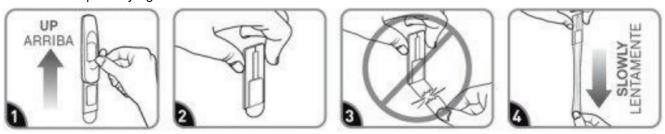

Hook can be reused with Command® Large Refill Strips.

CAUTION: Do not hang over beds or on wallpaper. Do not hang valuable or irreplaceable items or framed pictures. Use indoors 50°-105

WARRANTY

Limited Warranty and Limitation

of Liability for product sold in USA: This product will be free from manufacturing defects. If defective, your exclusive remedy shall be, at 3 M's option, product replacement or refund. 3M will not be liable for any loss or damage arising from this product, whether direct, indirect, special, incidental, or consequential.

CONTACT INFORMATION

- Failure to follow instructions carefully may cause damage.
- Save instructions or visit command.com

Documents / Resources



Command 17003ES Large Utility Hook [pdf] Instruction Manual 17003ES Large Utility Hook, 17003ES, Large Utility Hook, Utility Hook, Hook

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.