




COMPUSTAR PRO T11 2-Way LCD, 3-Mile Range Remote Kit User Manual

[Home](#) » [COMPUSTAR](#) » **COMPUSTAR PRO T11 2-Way LCD, 3-Mile Range Remote Kit User Manual** 

Contents

- [1 COMPUSTAR PRO T11 2-Way LCD, 3-Mile Range Remote Kit QUICK START CARD](#)
- [2 REMOTE OPTION MENU](#)
- [3 FCC COMPLIANCE](#)
- [4 IC COMPLIANCE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

COMPUSTAR
COMPUSTAR PRO T11 2-Way LCD, 3-Mile Range Remote Kit

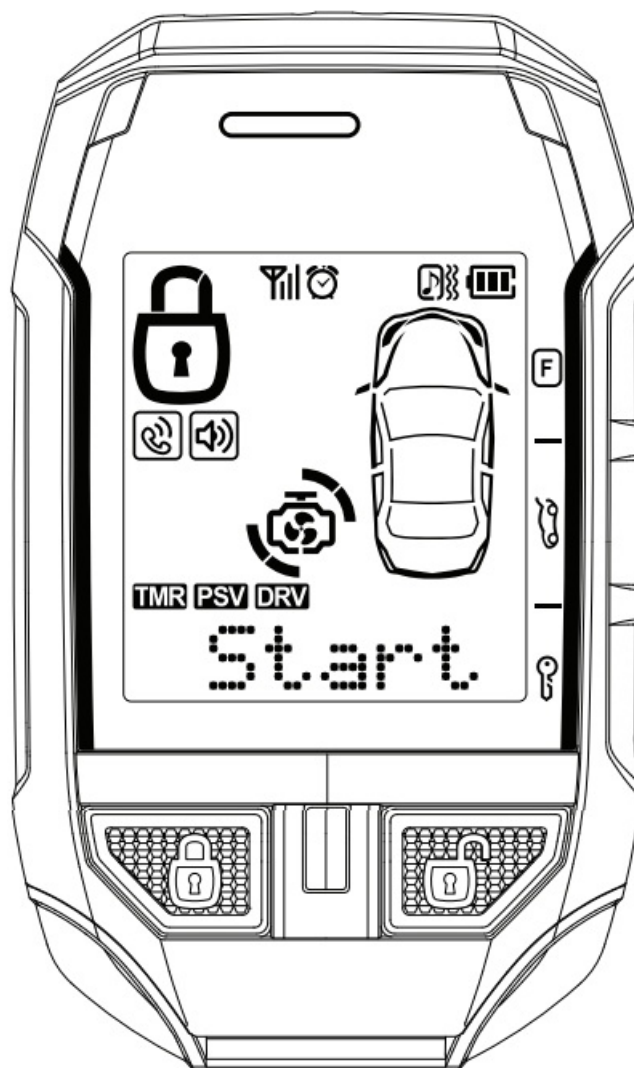

QUICK START CARD

Rechargeable Battery: Your 2WT11R-SS is equipped with a rechargeable battery. Use the included USB cable to charge your remote. We recommend charging your remote before first use. Charge time is approximately 2 hours.

Register online at www.compustar.com within 10 days of purchase to activate your new remote's warranty.



A tap of this button will lock your doors and/or arm your Compustar alarm.



 
A tap of this button will unlock your doors and/or disarm your Compustar alarm.



Holding this button for 2.5 seconds will pop your trunk, if equipped. If not, ask your Compustar Dealer for details on how to get it. Double tap to view the clock.



Holding this button for 2.5 seconds will start your vehicle. The 2WT11R-SS will receive a page back alert and run time countdown timer will start. Run Time Extension: If enabled, double tapping this button will reset your remote start run time or turbo timer.



Tapping these two buttons will mute and unmute the siren on your Compustar alarm. Holding them for 2.5 seconds will turn the Shock Sensor on or off.









Function Button: This button is used to access advanced remote functions. Please see the following table for more info.




Wake/Mute Button: Tap this button to wake the screen. Hold this button for 2 seconds to mute your remote. Hold for 2 seconds to unmute. If enabled, tap this button to enable sliding doors via Auxiliary 1 and 2 then double tap Lock or Unlock to activate.

	Then Press					2.5 Sec	2.5 Sec
1 x		Drive Lock On/Off	Turbo Timer On/Off	Auxiliary 1	Auxiliary 2	Auxiliary 3	Auxiliary 4
2 x		2nd Car On/Off	Timer Start On/Off	Auxiliary 5	Auxiliary 6	Auxiliary 7	
3 x		Valet Mode On/Off	Passive Mode On/Off	FUNCTION BUTTON TABLE			

REMOTE OPTION MENU

FEATURE	LCD READOUT			FUNCTION/ DESCRIPTION
Enter Remote Menu	( + ) 2.5 Seconds			Enter and Exit the Remote Option Menu
Move Through Menu				Moves down the Remote Option Menu
Move Up Menu				Moves back up the Remote Option Menu
Clock	12:00PM	Adjusts Hour	Adjusts Minute	Sets the time on your remote
Remote Start Time	7:10AM	Adjusts Hour	Adjusts Minute	Sets the time at which you want your vehicle to start every day. Check with your installer for additional info.
Alarm Clock Time	6:00AM	Adjusts Hour	Adjusts Minute	Sets the time in which you would like the remote's alarm clock to alert you.
Alarm On/Off	Alarm	On or Off		Turns the alarm clock on or off

FEATURE	LCD READOUT		FUNCTION/ DESCRIPTION
RPS Call On/Off	Call	On or Off	Turns your RPS Touch paging feature on or off.
Silent	Vibrate	On or Off	Turns the silent mode on or off.
Volume	VOL:	1 - 3	Adjust the volume of your remote. 1 is the lowest. 3 is the highest.
Temperature	Temp	F or C	Changes the temperature readout from Fahrenheit to Celsius.
Auxiliary	AUX	On or Off	Turns your Auxiliary Extender feature on or off.
Sliding Doors	Sliding Door	On or Off	Allows you to use the Lock and Unlock buttons for sliding doors via Aux 1 and 2.
2 Way Paging Display	Paging	Full or Half	Sets your remote for Alarm or Starter Only systems. Set to FULL for ALARM IT and MAX IT features. Set to HALF for START IT ONLY systems.
Screen Timeout	Screen	Adjusts screen off time	Adjusts the time your LCD will stay on after a button is pressed
Language	English / Francais / Espanol	Adjusts Language	Changes LCD display language from English to French or Spanish

To reprogram your remote, cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. Then tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your Compustar has exited remote programming mode and you must retry.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST.

WARNING

It is the responsibility of the vehicle operator to ensure that their vehicle is parked in a safe and responsible manner.

1. When leaving the vehicle, it is the user's responsibility to ensure that the gearshift lever is in "Park" in order to

- avoid accidents upon remote starting. (Note: Make sure that the automatic vehicle cannot start in "Drive".)
2. It is the user's responsibility to ensure that the remote starter is disabled or put into valet mode before servicing.

FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.


IC COMPLIANCE

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s).

Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Documents / Resources

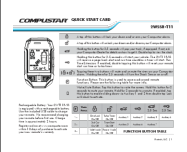	COMPUSTAR PRO T11 2-Way LCD, 3-Mile Range Remote Kit [pdf] User Manual PRO T11, 2-Way LCD, 3-Mile Range Remote Kit, Remote Kit
---	---

References

- [Compustar | Remote Starters | Security Systems | Car Alarms](#)
- [CompustarÂ | Remote Starters | Security Systems | Car Alarms](#)