


COMPUTER SK010 Soundbar User Manual

Home » COMPUTER » COMPUTER SK010 Soundbar User Manual

COMPUTER SK010 Soundbar

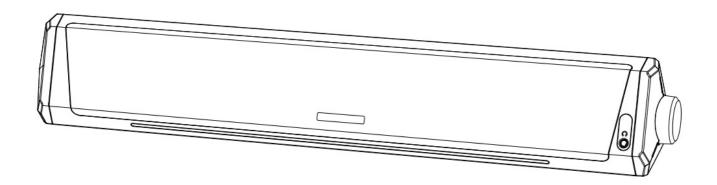

Contents

- 1 Specification
- **2 AUX Connection**
- **3 Bluetooth Connection**
- **4 Product Diagram**
- **5 Multifunctional Knob**
- **6 LED Light Mode**
- 7 Troubleshooting of Sound
- **8 Troubleshooting of Bluetooth**
- 9 Worry-Free Service

Guarantee

- 10 FCC Compliance
- 11 Documents / Resources
- **12 Related Posts**

Device Model	SK010
Two Connection Options	AUX Cable & Bluetooth
Power Supply	USB Plug (No built-in battery)
Power Input	DC5V=2AMax
Front Light	Breathing Light


AUX Connection

- 1. Power on: Plug the USB power cable into the power source (Computer USB port/USB power adapter/Power bank).
- 2. Connect with the audio source: Plug the 3.5mm audio cable into the audio jack.
- 3. Configure the sound output device on the computer: Windows: Windows Setting> System> Sound> Output> Choose your Output Device



Bluetooth Connection


- 1. Power on: Plug the USB power cable into the power source.
- 2. Enter Bluetooth mode: Press the knob for 3 seconds then release, and the lightbar will flash blue&red alternately.
- 3. Pair with your device: Tum on the Bluetooth of your device, find "SK010" in the search results and tap to connect.

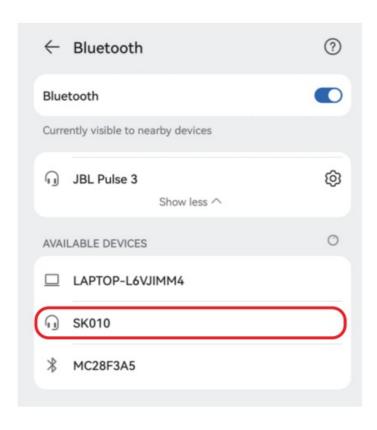

NOTE:

Switch to wired mode from Bluetooth mode: Press the knob for 3 seconds.

Product Diagram

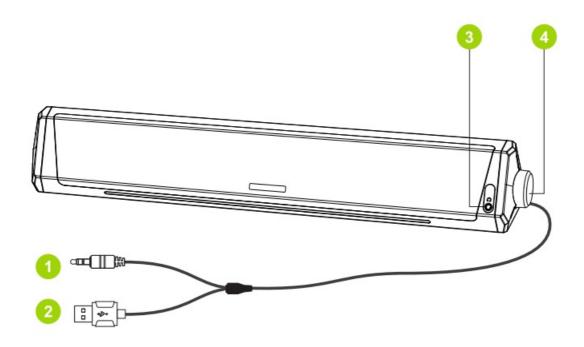

- 1. 3.5mmAudio Plug
- 2. USB Power Plug
- 3. 3.5mm Earphone Jack
- 4. Multi-function Knob

Multifunctional Knob

Pause/Play: Click.
Volume Control: Rotate.

Front Light on/off: Press twice quickly.

Bluetooth/Wired mode Switch: Press for 3 seconds.

Reset: Press for 7 seconds.

LED Light Mode

- 1. Front Lightbar: Gentle breathing light (Default mode), double-click the knob to turn the light off/on.
- 2. Side Lights: They are power indicator lights that are not available to be turned off, unless unplugging the USB power cable or shutting down the power source.

Troubleshooting of Sound

- **Step 1**. Adjust the volume: Make sure the volume is not mute on the soundbar, device (Laptop/Phone/PC), or App
- Step 2. Restart: Restart the computer, then replug the USBpower cable & 3.5mm audio cable of the soundbar.
- **Step 3**. Configure the sound output device on the computer: Windows Setting> System> Sound> Output> Choose your output device.
- Step 4. Test the soundbar with different devices to check whether the sound bar is faulted.

If the above does not work, please contact us.

Troubleshooting of Bluetooth

- 1. Reset the soundbar: Press the knob for 7 seconds until a "beep" is heard;
- 2. Delete the memorized "SK010" on your device, re-search "SK010", and re-pair with it.

Note: The connection between the soundbar and your device may be interfered with if there are a lot of Bluetooth or other 2.4GHz devi

Worry-Free Service Guarantee


- 30 days of free returns and exchanges: Amazon Platform Policy
- 60 days offree returns and exchanges: Our Brand Policy (Email us)
- 18 months warranty
- · Lifetime customer service

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must withstand any interference received including interference that may cause undesired operation.

Service mailbox: <u>support@bluedee-tech.com</u>

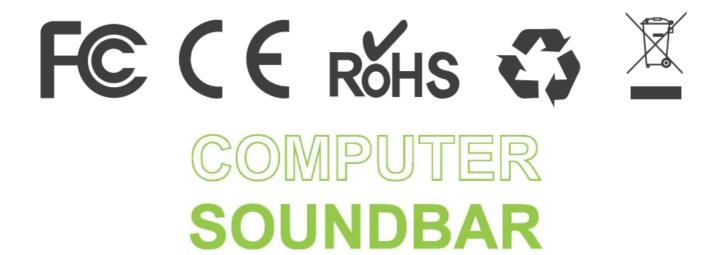



COMPUTER SK010 Soundbar [pdf] User Manual SK010 Soundbar, SK010, Soundbar

Manuals+,