



CON-SERV EB 046 Removing Flow Control User Guide

[Home](#) » [CON-SERV](#) » CON-SERV EB 046 Removing Flow Control User Guide 

Contents

- [1 CON-SERV EB 046 Removing Flow Control](#)
- [2 INSTALLATION INSTRUCTIONS](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)




CON-SERV EB 046 Removing Flow Control




INSTALLATION INSTRUCTIONS


1. Unscrew hose conical nut from Wall Outlet Elbow.

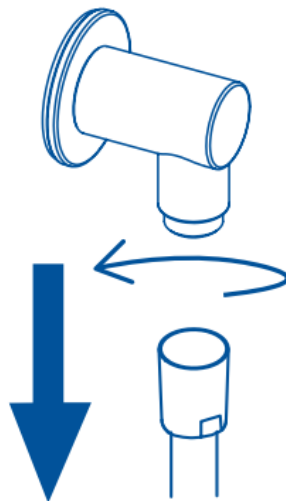


2. Use 2.5mm hex key to unscrew 5mm grub screw.

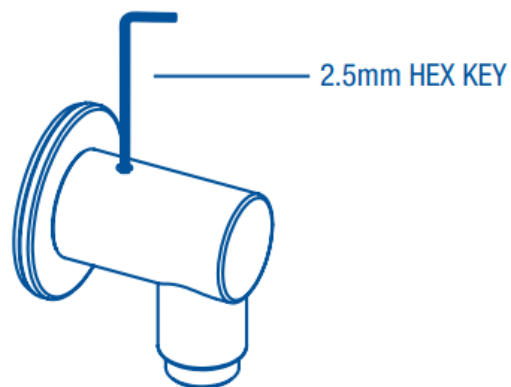


3. Ease the Wall Outlet Elbow off the spigot ensuring the grub screw does not come into contact with the o-ring seal.

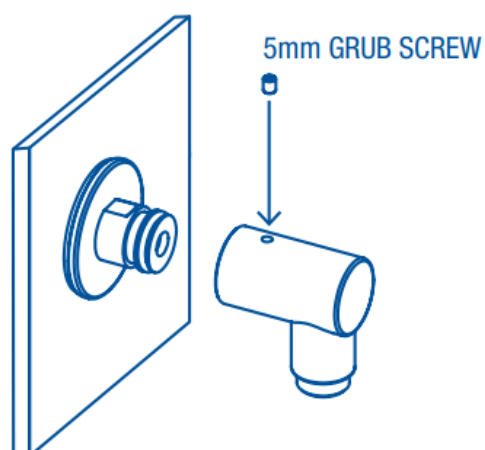

4. Once exposed, unscrew the spigot from the thread using a spanner.

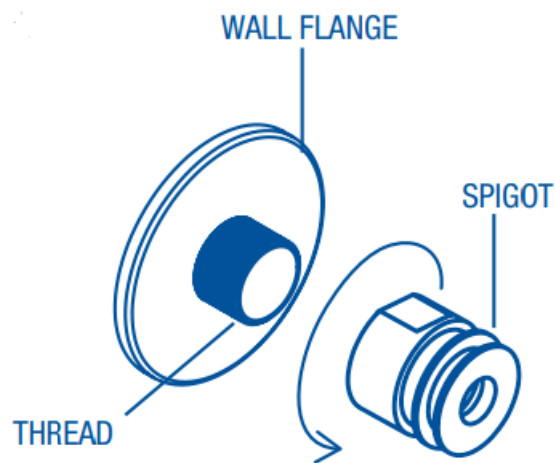


5. Once spigot has been removed from thread, use a hand tool to lever circlip from spigot and remove flow control.

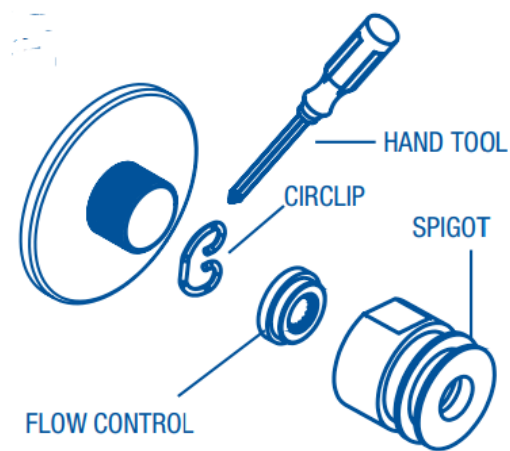

NOTE: Remove flow control from spigot for full flow shower.

Documents / Resources

	<p>CON-SERV EB 046 Removing Flow Control [pdf] User Guide EB 046 Removing Flow Control, EB 046, Removing Flow Control, Flow Control, Control</p>
---	--