


Concept SM4002 Smoothie Blender



# Concept SM4002 Smoothie Blender User Manual

[Home](#) » [concept](#) » **Concept SM4002 Smoothie Blender User Manual** 

## Contents

- [1 Concept SM4002 Smoothie Blender User Manual](#)
- [2 Technical specifications](#)
- [3 IMPORTANT SAFETY PRECAUTIONS](#)
- [4 PRODUCT DESCRIPTION](#)
- [5 OPERATING INSTRUCTIONS](#)
- [6 OPERATION](#)
- [7 CLEANING AND MAINTENANCE](#)
- [8 References](#)
- [9 Related Posts](#)

# CONCEPT

**Concept SM4002 Smoothie Blender User Manual**



### Acknowledgements

Thank you for purchasing a Concept product. We wish you much joy with your new appliance every day you use it. Please read the instruction manual carefully before initial use. To refer to this manual any time you need to, we recommend you keep it in a safe place. And please pass it on to any future owner of the appliance.

### Technical specifications

Technical specifications	
Voltage	5 V DC
Input	315 W
Sound performance level	80 dB(A)
Battery Specifications	6 000 mAh
Charging time	4 h
Operating time	40 cycles of 20 s

### IMPORTANT SAFETY PRECAUTIONS

- Do not use the appliance in any other way than as described in this manual.

- Remove all the covering and marketing materials from the appliance before the first use.
- Make sure the mains voltage corresponds to the values on the rating plate of the appliance.
- Do not leave the appliance unattended when it is switched on.
- Place the appliance on a stable, level surface, do not place it on any other appliance.
- Do not place the appliance near flammable substances, fire, heating elements or hot ovens.
- Do not cover the appliance, there is a risk of overheating.
- Do not place anything on the appliance during operation.
- Do not carry the appliance when it is switched on.
- Keep the appliance clean, and do not allow foreign objects to into the grid openings. It could cause a short circuit, damage to the appliance or cause fire.
- Do not use the charging adapter with a damaged power cord or plug, have the defect repaired immediately by an authorized service by an authorized service center.
- Do not allow children or unauthorized people to handle the appliance,
- use it out of their reach.
- Persons with reduced mobility, reduced sensory perception, mental disadvantage or persons not familiar with the operation must use the appliance only under the supervision of the responsible person, who is familiar with the instructions.
- Pay extra attention if the appliance is used near children.
- Do not use the appliance as a toy.
- Do not throw the appliance battery into a fire or expose it to temperatures above 40 °C.
- Do not use the appliance outdoors or on a wet surface, there is a risk of electric shock.
- Do not use any accessories other than those recommended by the manufacturer.
- Do not use the appliance with a damaged cord or plug and have it repaired immediately by an authorized service centre.
- Keep the appliance away from heat sources such as radiators, ovens, etc. Protect it from direct sunlight and humidity.
- When installing accessories, cleaning and maintenance or in the event of a malfunction, switch off the appliance and disconnect the plug from the electrical outlet.
- Do not touch moving parts while the appliance is in operation. Wait until it stops completely.
- The appliance is only suitable for home use and is not intended for commercial use.
- Check the appliance and the power cord for damage regularly. Never switch on a damaged appliance.
- Do not let hair and clothing hang loose near openings and moving parts of the appliance.
- Always exercise caution when handling blades and cutting discs. They are very sharp and can cause injury.
- Before cleaning and after use of the appliance, switch the appliance off, disconnect it from the mains and allow it to cool down.
- The appliance contains sharp parts. Exercise caution when cleaning.
- Do not use the appliance without properly fitted accessories.
- Do not let the appliance run idle.
- Do not repair the appliance yourself. Contact an authorized service centre.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Cleaning and maintenance performed by the user must not be carried out by children unless they are 8 years old and under supervision.

- Children under 8 years of age must be kept away from the appliance and its power cord. Do not let children play with the appliance.
- Damages from failure to follow the manufacturer's instructions are not covered by the warranty.

## PRODUCT DESCRIPTION

1. Blender container
2. Blender blades
3. Product base
4. Lid with opening
5. Lid
6. Appliance display
7. ON/OFF button
8. Charging cable

## OPERATING INSTRUCTIONS

### NOTICE

Before putting a new appliance into operation, you should wipe it thoroughly from the outside with a damp cloth and wash all removable parts in warm water for hygienic reasons. The appliance has a built-in safety fuse. The appliance motor can only be switched on if the accessories are properly fitted. Do not bypass the safety mechanism! Never leave the appliance unattended while in operation or switched off. Immediately after switching off the engine, some parts may still move for a while. Wait until the accessory has completely stopped before opening the lid.

## OPERATION

1. Place the food in the container and place the lid on the blender container (the recommended size of inserted food is 2 x 2 x 2 cm). Gently press on the lid so it is sealed perfectly.
2. Place the container on the blender and turn clockwise. Before putting the appliance into operation, check that the container is correctly seated in the display will show "88" on the base.
3. Remove the container from the motor base by turning the jar anticlockwise only if the motor is not running.  
**Note:** The appliance is equipped with a safety fuse. It will not work without a properly fitted jar. The appliance is equipped with protection against overheating.

## CLEANING AND MAINTENANCE

1. Do not use any sharp or abrasive cleaners.
2. Clean only the outside of the blender and use only a damp cloth.
3. Before reassembling, let all the parts dry thoroughly.

## SERVICE CENTRE

Extensive maintenance or repair, which requires access to internal parts of the product, has to be performed by a qualified specialist or the service centre.

## ENVIRONMENTAL CONCERNS

- Packaging materials and old appliances should be recycled.
- Packaging materials may be disposed of as sorted waste.
- Dispose of the plastic bags made of polyethylene (PE) as sorted waste.

### **Recycling of the appliance at the end of its lifespan**

This appliance is labelled by European Directive 2012/19/EU concerning used electrical and electronic appliances (Waste Electrical and Electronic Equipment – WEEE). The symbol on the product or its packaging indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of the product. The disposal of such material has to be done according to the recycling regulations.

For more detailed information about recycling this product, please contact your local council, your household waste disposal service or the shop where you purchased the appliance. The product meets all the requirements of the EU directives applicable to the specific product. Changes in text, design, and technical specifications are subject to change without prior notice and we reserve the right to change them.

**Download PDF:** [Concept SM4002 Smoothie Blender User Manual](#)

### **References**

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.