




## Concept DF2010 Aroma Diffuser User Guide

[Home](#) » [concept](#) » Concept DF2010 Aroma Diffuser User Guide 


### Concept DF2010 Aroma Diffuser User Guide



## Contents

- 1 PRODUCT DESCRIPTION
- 2 ACKNOWLEDGMENT
- 3 IMPORTANT SAFETY PRECAUTIONS
- 4 CONSUMER SAFETY INFORMATION
- 5 PRODUCT DESCRIPTION
- 6 DISPLAY AND CONTROL PANEL
- 7 CLEANING AND MAINTENANCE
- 8 DAILY MAINTENANCE
- 9 WEEKLY MAINTENANCE
- 10 MAINTENANCE WARNINGS
- 11 CLEANING OF CERAMIC FILTER BALLS
- 12 STORAGE
- 13 SERVICE
- 14 ENVIRONMENTAL CONCERNS
- 15 Documents / Resources
- 16 Related Posts


## PRODUCT DESCRIPTION

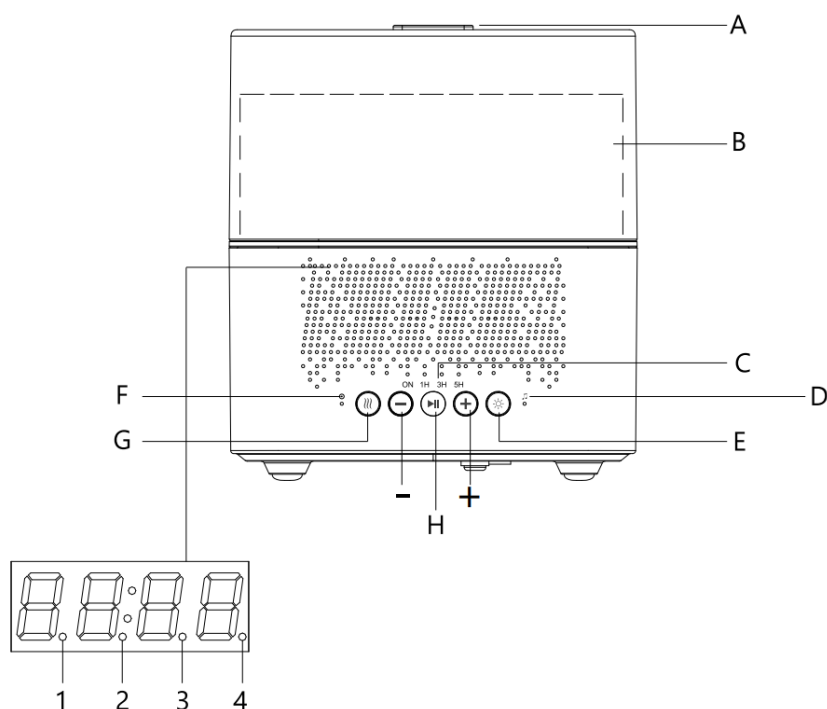

## ACKNOWLEDGMENT

Thank you for purchasing a Concept product. We wish you much joy with your new appliance every day you use it. Please read the instruction manual carefully before initial use. To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

Technical specifications	
Voltage	220–240 V, 50/60 H
Input	15 W
Water tank capacity	300 ml
Power	30 ml/h
Dimensions	13,2 x 10,3 x 14,6 cm
Frequency range	2402 – 2480 MHz
Transmitter power (max.)	4,47 dBm

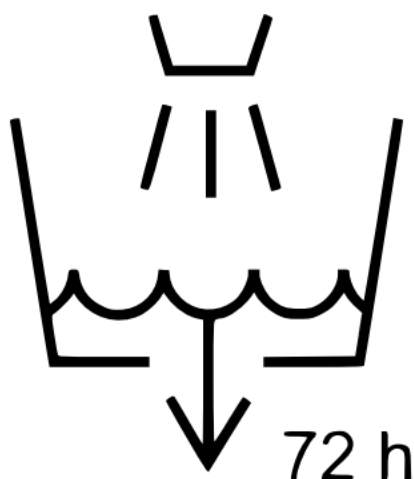

## IMPORTANT SAFETY PRECAUTIONS

- Do not use the appliance in any other way than as described in this manual.
- Remove all the covering and marketing materials from the appliance before the first use.
- Make sure the mains voltage corresponds to the values on the rating plate of the product.
- Place the appliance on a stable, flat surface away from other heat sources.
- Do not leave the appliance unattended when it is switched on or connected to the mains.
- When connecting and disconnecting the appliance from the mains, the on/off button must be turned off.
- When disconnecting the appliance from the wall outlet, never pull the power cord, grasp the plug end and disconnect it by removing it from the receptacle.
- Do not allow children or unauthorized people to handle the appliance, use it out of their reach.
- Persons with reduced mobility, reduced sensory perception, mental disadvantage or persons not familiar with the operation must use the appliance only under the supervision of responsible person, who is familiar with the instructions.
- Pay extra attention if the appliance is used near children.
- Do not use the appliance as a toy.
- Never put your fingers, pencils or other objects into the openings of the appliance.
- Never use the appliance without cover grids.
- Do not let small children and sick persons to be exposed to a direct air flow.
- Do not cover the appliance.
- Do not put anything on the appliance or place anything in front of it.

- The appliance must only be used in the upright position.
- Do not use the appliance near shower, bathtub, sink or pool.
- Do not use the appliance in a damp or dusty environment.
- Do not use the appliance in an environment where there are explosive gases and flammable substances (solvents, varnishes, adhesives, etc.).
- Place the humidifier to an inner wall near the electrical outlet. To achieve the highest possible efficiency, the humidifier should be positioned at least 10 cm from the wall.
- Do not pour water into the humidifier if it is plugged into the wall socket, always disconnect it from the mains first.
- Place the humidifier on a stable, flat surface, at least 60 cm above the floor level.
- Do not point the steam outlet directly against the wall.
- If the appliance is not in use, always disconnect it from the mains.
- NEVER tilt, empty or move the appliance while operating.
- Disconnect the appliance from the mains before manipulating with the appliance and the water tank.
- Do not pour water into any other openings of the appliance, pour water into the water tank only.
- Excessive room humidity may cause condensation of water on windows and furniture. If this happens, turn the humidifier off.
- Before assembly and disassembly, disconnect the power cord from the wall outlet.
- Before cleaning and after use of the appliance, switch the appliance off and disconnect it from the mains.
- Keep the appliance clean, do not allow foreign objects to into the grid openings. It could cause serious injury, short circuit, damage to the appliance or cause fire.
- Do not use coarse and chemically aggressive substances to clean the appliance.
- Do not use the appliance with a damaged cord or plug and have it repaired immediately by an authorized service centre.
- Do not use the appliance if it is not working properly, has been dropped, damaged or immersed in liquid. Have it checked and repaired by an authorized service centre.
- Do not use the appliance outdoors.
- The appliance is only suitable for home use and is not intended for commercial use.
- Do not touch the appliance with wet hands.
- Do not immerse the power cord, plug or appliance in water or any other liquid.
- Do not repair the appliance yourself. Contact an authorized service centre.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Cleaning and maintenance performed by the user must not be carried out by children unless they are at least 8 years old and under supervision. Children aged under 8 years of age must be kept away from the appliance and its power cord. Do not let children play with the appliance.
- Before using essential oils, check the harmful effects that the use of these products may have on your health.
- Always use quality essential oils that are clean, 100% natural and intended for diffusion. Use them with care and caution. Follow the instructions and precautions given on the packaging of the essential oil.
- Pregnant women, people with epilepsy and asthma, people suffering from allergies, patients with heart problems or serious illnesses should not use essential oils.
- Use essential oils for a maximum of 10 minutes. Do not use essential oils in the presence of a child under 3 years of age.

- Always fill the reservoir with water before adding the essential oil.

**Damages from failure to follow the manufacturer's instructions are not covered by the warranty.**

## **CONSUMER SAFETY INFORMATION**

**Note:** The humidifier, as an electrical appliance, requires supervision during operation.

**Note:** If moisture is formed on the walls or windows, switch the humidifier off. Excessive humidity in the room may cause damage. Do not block the air inlet or outlet.

## **PRODUCT DESCRIPTION**

- A** Steam outlet
- B** Water tank
- C** Timer
- D** Music indicator
- E** Light
- F** Power indicator
- G** Mist
- H** Play/Pause

## **DISPLAY AND CONTROL PANEL**

1. Timer setting indicator
2. Time format indicator
3. Alarm clock indicator
4. Alarm clock on indicator
5. USE

### **Timer:**

Press the Mist button to set ON-1H-3H-5H-OFF.

### **Music**

1. Press and hold the Play button for 2 seconds to turn on Bluetooth.
2. Search for Bluetooth of the Clock diffuser appliance and connect to it.
3. Once connected, you can play music.

**Note.:** Press + to change the music, press and hold + for 2 seconds to increase volume.

### **Alarm clock setting**

1. Press and hold the Light button for 2 seconds.
2. Use + and – to set the hours, press the Light button, then set the minutes and press the Light button.
3. If button 4 is lit, the alarm clock is on.

### **Time setting**

1. Press and hold the Steam button until 12/24 appears on the display. When lit, the PM displays the 12-hour clock
2. Press the “+” or “-” button to select between 12 h / 24 h clock.
3. Press and hold the Steam button until the digital number flashes.
4. Press the “+” or “-” button to set the hours, press the Steam button, then set the minutes and press the Steam button to confirm.

**Note.:** Press the Light button in the time setting mode to restore default settings.

**Note.:** Clean the water tank every three days.

## CLEANING AND MAINTENANCE

- Lack of moisture during winter can cause dry skin, nose irritation, frequent colds, sore throat, etc. Humidifiers produce relative humidity to protect our health. Use the following maintenance instructions in order to get the best out of the humidifier without damaging it. If you do not follow these guidelines, unwanted microorganisms can grow in water.

### DAILY MAINTENANCE

- Switch the appliance off and disconnect it from the mains prior to cleaning.
- Open the water tank and the top of the humidifier.
- Rinse the water tank thoroughly and remove all deposits and dirt. Clean and wipe the water tank with a clean, soft cloth or paper towel.
- Fill the water tank with fresh cold tap water as described in the water refill instructions.

### WEEKLY MAINTENANCE

- Repeat the three above mentioned daily maintenance steps.
- Pour about 200 ml of vinegar into the reservoir and leave it for 15 minutes. Then remove the lime scale in the tank, especially in the ultrasonic disk, with a soft brush.
- Wipe lime scale and vinegar residues with a clean, soft cloth.

## MAINTENANCE WARNINGS

- NEVER submerge the appliance main unit into water.
- Do not use any solvents or other aggressive substances to clean the humidifier.
- Clean the inside of the appliance with a soft cloth.
- Clean the ultrasonic disk only with a soft brush. Clean it at least once a week. You can add 2-5 drops of vinegar to the ultrasonic disk – leave it for about 5 minutes. Then clean with the brush provided.
- Use a brush with fine bristles.
- If water has remained in the water tank, replace it at least once a week.

## CLEANING OF CERAMIC FILTER BALLS

Use 1 litre of clean distilled water to clean the ball filter. If the balls are still dirty, you need to repeat the cleaning more often. For greater cleaning efficiency, immerse the ceramic balls in a glass of vinegar and leave it for 5 minutes. Then rinse the balls thoroughly and let them dry in a dry place for 4-6 hours.

## STORAGE

- Clean and dry the humidifier as described above.
- It is recommended to store the appliance in its original packaging.
- Do not expose it to high temperatures.

## SERVICE

Extensive maintenance or repair, which requires access to internal parts of the product, has to be performed by a qualified service centre.

## ENVIRONMENTAL CONCERNS

- Packaging materials and old appliances should be recycled.
- Packaging materials may be disposed of as sorted waste.
- Dispose the plastic bags made of polyethylene (PE) of as sorted waste.

### Recycling of the appliance at the end of its lifespan

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (Waste Electrical and Electronic Equipment – WEEE). The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The disposal of such material has to be done according to the recycling regulations. For more detailed information about recycling of this appliance see the authorized local office or service for household waste disposal or the shop, where you purchased the appliance.



The product meets all the necessary requirements of the EU directives applicable to the specific product.



Changes in text, design, and technical specifications are subject to change without notice and we reserve the right to change them.

**concept**

## Documents / Resources



[Concept DF2010 Aroma Diffuser](#) [pdf] User Guide  
DF2010 Aroma Diffuser, DF2010, Aroma Diffuser, Diffuser

DF2010 Aroma Diffuser, DF2010, Aroma Diffuser, Diffuser