



## concept KS3007 Convector Heater with Turbo Function Instruction Manual

[Home](#) » [concept](#) » concept KS3007 Convector Heater with Turbo Function Instruction Manual 

# concept



**KS3007**

## Contents

### 1 ACKNOWLEDGEMENT

### 2 IMPORTANT SAFETY

### PRECAUTIONS:

### 3 PRODUCT DESCRIPTION

### 4 ASSEMBLY

### 5 OPERATING INSTRUCTIONS

### 6 CLEANING AND MAINTENANCE

### 7 SERVICING

### 8 Documents / Resources

#### 8.1 References

### 9 Related Posts

## ACKNOWLEDGEMENT

Thank you for purchasing a Concept product. We hope you will be satisfied with our product throughout its service life.

Please study the entire Operating Manual carefully before you start using the product. Keep the manual in a safe place for future reference. Make sure other people using the product are familiar with these instructions.

Technical parameters	
Voltage	230 V ~ 50 Hz
Power input	2000 W
Noise level	55 dB(A)

## IMPORTANT SAFETY PRECAUTIONS:

- Make sure that the connected voltage corresponds with the information on the product's label. Do not connect the appliance to adapter plugs or extension cables.
- Do not use this unit with any programmable device, timer, or any other product that turns the unit on automatically; covering the unit up or improper installation may result in a fire.
- Place the appliance on a stable, heat-resistant surface, away from other heat sources.
- Do not leave the appliance unattended if it is turned on or, in some cases, if it is plugged into the mains socket.
- When plugging and unplugging the unit, the mode selector must be in the 0 (off ) position.
- Never pull the supply cable when disconnecting the appliance from the socket outlet, always pull the plug.
- The appliance must not be placed directly below an electric socket outlet.
- The appliance must always be placed in a way that makes the mains outlet freely accessible.
- Keep the minimum safe distance of at least 100 cm between the unit and flammable materials, such as furniture, curtains, drapery, blankets, paper or clothing.
- Keep the air inlet and outlet grilles unobstructed (at least 100 cm before and 50 cm behind the unit).  
WARNING! The outlet grille can reach a temperature of 80°C and higher when the appliance is in use. Do not touch it; there is a danger of scorching.
- Never transport the unit during operation or when it is hot.
- Do not touch the hot surface. Use the handles and buttons.
- Do not allow children or irresponsible persons to operate the appliance. Use the appliance out of the reach of

these persons.

- Persons with limited movement capacity, reduced sensory perception, insufficient mental capacity or those who are unaware of the proper handling should use the product only under the supervision of a responsible person acquainted with these instructions.
- Be especially careful when there are children near the appliance.
- Do not allow the appliance to be used as a toy.
- Do not cover the appliance. There is a risk of overheating. Do not use the appliance for drying clothes.
- Do not hang anything above or in front of the unit.
- Do not use this appliance in a way different from this manual.
- The appliance can only be used in an upright position.
- Do not use the unit near a shower, bathtub, sink, or swimming pool.
- Do not use the appliance in an environment with explosive gases or flammable substances (solvents, varnishes, adhesives, etc.).
- Turn off the appliance, disconnect it from the electric socket outlet and let it cool down before cleaning and after use.
- Keep the appliance clean; prevent foreign matter from entering the grille openings. It might damage the appliance, cause a short circuit, or fire.
- Do not use abrasive or chemically aggressive substances to clean the appliance.
- Do not use the appliance if the power supply cable or the mains socket plug is damaged; have the defect repaired immediately by an authorized service center.
- Do not use the unit if it does not operate properly if it has been dropped, damaged, or submerged into the liquid. Have the appliance tested and repaired by an authorized service center?
- Do not use the appliance outdoors.
- The appliance is intended for household use only, not for commercial use.
- Do not touch the appliance with wet hands.
- Do not submerge the supply cable, main socket plug or the appliance in water or other liquids.
- The unit must not be used in any means of transport.
- Never repair the appliance yourself. Contact an authorized service center.

**Failure to follow the manufacturer's instructions may cause refusal of warranty repair.**

## **PRODUCT DESCRIPTION**

1. Air outlet grille
2. Carrying handle
3. Thermostat regulator
4. Mode selector
5. Ventilator switch
6. Air inlet grille
7. Legs (according to assembly type)




## ASSEMBLY

The unit must not be used without properly installed legs.

a) Usage as a free-standing appliance

Before you start using the unit, attach the legs which increase its stability and enable the air to flow into the inlet grille.

1. Place the unit on a stable surface (e.g. table).
2. Attach the legs on the body.
3. Screw the legs firmly into the body (Fig. 1).

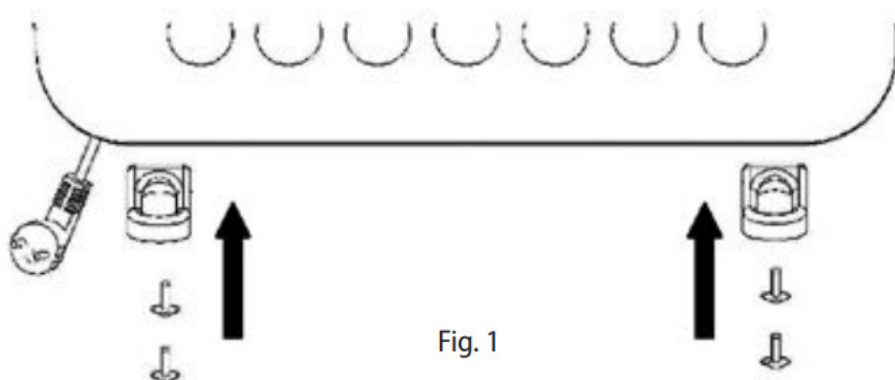

## CAUTION

When turning the appliance on for the first time or after a prolonged downtime, it may produce a slight smell. This smell will vanish after a short time.

## OPERATING INSTRUCTIONS

1. Place the appliance on a stable surface or floor to prevent it from overturning.
2. Uncoil the supply cable completely.
3. Connect the power cord plug to the main socket outlet.

4. Use the mode selector (4) to choose the power output of 750, 1250 or 2000 W.
5. Use the thermostat regulator (3) to adjust the required room temperature. When 750, 1250, or 2000 W power outputs are selected, the unit will alternately switch on and off, thus keeping the required temperature. You can activate a fan with a switch (5) to rapidly reach the required room temperature.

**Note:** You can set a more accurate temperature in the following way:

Set the thermostat to a maximum value, then switch the unit to the heating mode (750, 1250 or 2000 W). When the required room temperature is reached, turn the thermostat (3) slowly to a lower temperature until the unit switches off.

6. After use, switch off the unit and unplug it from the main outlet.

## CLEANING AND MAINTENANCE

### Warning!

Always disconnect the power supply cable from the main outlet before cleaning the appliance.

Make sure the appliance has cooled down before handling it.

Only use a wet cloth for cleaning the surface; never use detergents or hard objects, as they may damage it.

Clean and inspect the inlet and outlet grilles frequently to ensure the proper operation of the unit and prevent overheating.

Dust accumulated in the unit can be blown out or removed by a vacuum cleaner.

Never clean the unit under running water, do not rinse it or submerge it in water.

## SERVICING

Any extensive maintenance or repair requiring access to the internal parts of the product shall be performed by an authorized service center.

## ENVIRONMENTAL PROTECTION

- Packaging materials and obsolete appliances should be recycled.
- The transport box may be disposed of as sorted waste.
- Polyethylene bags shall be handed over for recycling.



■ Appliance recycling at the end of its service life: A symbol on the product or its packaging indicates that this product should not go into household waste. It must be taken to the collection point of an electric and electronic equipment recycling facility. By making sure this product is disposed of properly, you will help prevent the negative effects on the environment and human health that would otherwise result from the inappropriate disposal of this product. You can learn more about recycling this product from your local authorities, a household waste disposal service, or in the shop where you bought this product.

Jindřich Valenta – ELKO Valenta Czech Republic, Vysokomýtská 1800,  
565 01 Choceň, Tel. +420 465 322 895, Fax: +420 465 473 304, [www.my-concept.cz](http://www.my-concept.cz)

ELKO Valenta – Slovakia, s.r.o., Hurbanova 1563/23, 911 01 Trenčín  
Tel.: +421 326 583 465, Fax: +421 326 583 466, [www.my-concept.sk](http://www.my-concept.sk)

Elko Valenta Polska Sp. Z. o. o., Ostrowskiego 30, 53-238 Wrocław  
Tel.: +48 71 339 04 44, Fax: 71 339 04 14, [www.my-concept.pl](http://www.my-concept.pl)

