




Concept LO 706x Juice Extractor User Manual

[Home](#) » [concept](#) » Concept LO 706x Juice Extractor User Manual 

concept

User Manual



Contents

1 ACKNOWLEDGMENT

2 IMPORTANT SAFETY

INSTRUCTIONS:

3 PRODUCT DESCRIPTION

4 OPERATING INSTRUCTIONS

5 Smoothie maker

6 CLEANING AND MAINTENANCE

7 TROUBLESHOOTING

8 Product data

9 Documents / Resources

9.1 References

10 Related Posts

ACKNOWLEDGMENT

Thank you for purchasing a Concept product. We hope you will be satisfied with our product throughout its service life.

Please study the entire Operating Manual carefully before you start using the product. Keep the manual in a safe place for future reference. Make sure other people using the product are familiar with these instructions.

TECHNICAL PARAMETERS	
Voltage	220 – 240V ~ 50 Hz
Power input	240 W
Noise level	57 dB (A)
Time of continuous operation (KB)	max. 30 min

IMPORTANT SAFETY INSTRUCTIONS:

- Use the unit only as described in this operating manual.
- Remove all the packaging and marketing materials from the unit before the first use.
- Make sure the mains voltage corresponds to the values on the rating plate. Use grounded wall outlets only.
- Do not leave the unit unattended while it is turned on or even only plugged into the wall outlet.
- Before plugging in or unplugging the unit from the wall outlet, make sure the switch is OFF.
- When disconnecting the unit from the wall outlet, never pull the power cord. Grasp the plug and disconnect it by pulling.
- Do not allow children or unskilled people to handle the unit. Use the unit out of the reach of these individuals.
- Persons with limited movement capacities, reduced sensory perception, insufficient mental capacity, or those who are unaware of the proper handling should use the product only under the supervision of a responsible, aware person.
- Take extra care when using the unit near children.
- Don't let anyone use the unit as a toy.
- Turn the unit off, unplug the power cord from the wall outlet, and let the unit cool before cleaning and after use.
- Do not let the power cord hang loosely over the edge of the work area. Make sure the power cord does not touch hot surfaces.

- Do not let the unit hang loosely on the power cord.
- Do not use the unit if the rotating sieve is damaged.
- Do not use the unit without a correctly mounted pulp container.
- The unit contains sharp parts. Extra care should be taken when cleaning the unit.
- Never remove the upper cover until the rotating sieve has stopped completely.
- Always use the tamper to push food through the opening. Never push in food using your fingers, a fork, spoon, knife, or any other object.
- Do not use abrasive or chemically aggressive substances to clean the unit.
- Do not use the unit if it does not operate properly, or if it has been dropped, damaged, or exposed to any liquids. Refer the unit to an authorized service center for testing and repair.
- Never use an appliance with a damaged power cord or plug. Contact an authorized service center immediately to have defective components repaired or replaced.
- The unit is not designed for outdoor use.
- The unit is suitable for domestic use only. It is not designed for commercial operation.
- Do not immerse the power cord, plug, or appliance in water or any other liquid.
- Use only accessories recommended by the manufacturer.
- Put the appliance on a flat, steady surface.
- Do not repair the appliance yourself. Contact an authorized service center.
- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers. Children must not play with the appliance. This appliance may be cleaned by children 8 years of age and older if they are properly supervised. Keep this appliance and the power cord out of reach of children younger than 8 years of age.

Failure to follow the manufacturer's instructions may lead to refusal of warranty repair

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance

PRODUCT DESCRIPTION



1. **Tamper**
 2. **Feeder**
 3. **Upper cover**
 4. **Rotating sieve**
 5. **Juice drain cover**
 6. **Juice drain**
 7. **Body of the unit**
 8. **Speed controller**
 9. **Anti-slip feet**
- Accessories**
- A **Cleaning brush**
 - B **Pulp bin**
 - C **Juice container**

OPERATING INSTRUCTIONS

NOTE

Prior to using a new unit, wipe the surface with a wet cloth and wash the removable accessories in warm water for hygienic reasons.

The unit contains sharp parts. Extra care should be taken while cleaning the unit.

The unit and its accessories are not suitable for use in a microwave oven.

The maximum time of continuous operation (KB) is 30 minutes or 15 kg of food processing. Let the unit cool down for at least 30 minutes afterward.

Juicing tips

- Buy only the freshest fruits and vegetables
- Fruits and vegetables contain valuable vitamins and minerals that degrade when exposed to oxygen and light. Drink the juice immediately after extraction.



If the juice must be stored for several hours, put it in a fridge in crockery or glass kitchenware. You may improve the preservation features by adding lemon juice

- You can use the pulp for the preparation of other food (jam, fruit salad, etc.).
- If the fruit is very watery (melons, etc.), insert it slowly in order to extract as much juice as possible.
- If you use very ripe fruits, there can be very little juice. In such a case, it is necessary to process the fruit very slowly, so that the juice drains easily, and the rotating sieve does not clog.
- It is common that when processing apples and bananas no juice is extracted.

Extraction

Note: The unit can be turned on only if the upper cover and locking clip are assembled correctly.

1. Put the unit on a stable surface.
2. Attach the pulp container to the side of the unit.
3. Attach the juice drain cover to the upper part of the body (Fig. 1).
4. Put the rotating sieve on the juice drain cover by pressing on the upper edge of the sieve and pushing it down (Fig. 2, 3).
5. Insert an auger.

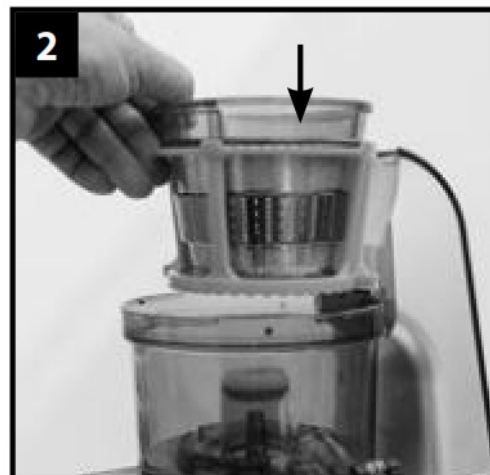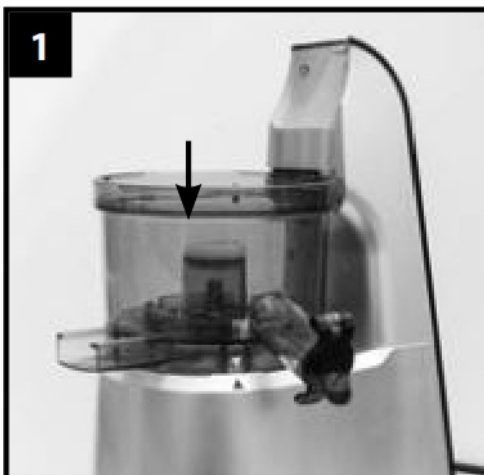

6. Put on the upper lid, and fix it. Place the juice collection container under the juice drain.
7. Select the required speed according to the processed food using the speed switch. Speed 1 is the normal mode for juicing. Speed 2 is the reverse. (in case if some piece of fruit stone stops the juicing assembly)



8. Insert washed pieces of food into the feeder slowly.

You can put in whole apples and pears, or you may cut them into pieces. You don't have to peel them or remove the cores. Peel oranges first; feed in grapes only individually. You may put it in whole bunches when juicing currants. It is difficult to extract juice from bananas, avocados, blackberries, figs, strawberries, etc.

NOTE: Always use the tamper to push food through the stuffing opening. **Never push in food using your fingers, a fork, spoon, knife, or any other object.**

9. Continuously check the volume of pulp in the container, or stuck to the upper lid, and the clearness of the juice drain. The juke drain cannot be clogged. Before you open the upper lid, wait until the rotating sieve stops.

WARNING! If the noise level becomes considerably higher, or there are stronger vibrations, clean the unit immediately!

10. Turn the unit off after use, disconnect from the power socket, remove the pulp and clean the individual parts (see Cleaning and maintenance).

NOTE: Extracted juice is designed for immediate consumption, as it oxidizes very fast in the open air, which can worsen the taste, change the color and, most importantly, decrease the nutritional value. Apple or pear juice turns brown fast; you can slow down this process by adding a few drops of lemon juice.

A squeaky sound that can come from the housing of the auger blade in the lid, eliminate with a drop of oil on the shaft of the auger blade.

The juice container is not designed for keeping juice or other food!

When juicing fruits that contain little water (the older apples, kiwi, etc.), we recommend inserting tougher fruits and vegetables, eg. carrots to clear a container, strainer, and drain hole.

Smoothie maker


1. Place the appliance on a stable surface.
2. Prepare glass for the finished smoothie under the drain plug.
3. Place the processing bowl on the upper body of the appliance and cover the drain plug with a smoothie cover.
4. Insert the rotating holder, together with the smoothie stainer (labeled smoothie maker) into the processing bowl.



5. Insert an auger.
6. Assemble the top cover and secure it by rotating.
7. Switch ON the appliance. Speed 1 is normal. Speed 2 is the reverse.
8. Mix the recommended raw materials with milk in the prepared bowl.
Note: the maximum capacity of the container is 250 ml.
9. Put the mix into the processing bowl slowly.
10. After filling the processing bowl allow the unit to run for 2-3 minutes.
11. After the time has elapsed, open the latch and let the drain smoothie run off into the prepared glass.

WARNING!

Only load properly washed and remove-seed fruit. If the noise level becomes considerably higher, or there are stronger vibrations, clean the unit immediately!

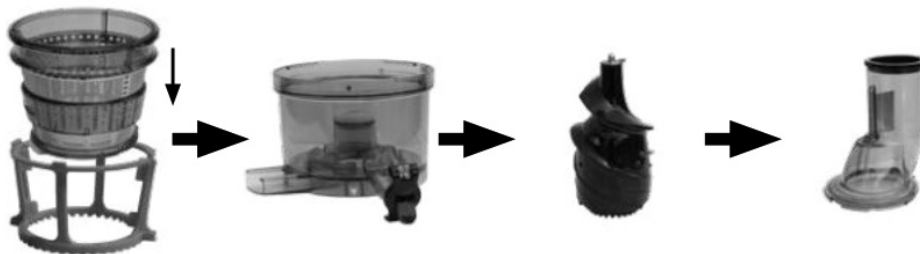

Fruits with hard seeds and peel, peel, and remove seeds first. Fruits like: Strawberries, Raspberries, and Blueberries, you can insert a whole.

Do not use nub or ice cubes

Chilled desserts

1. Place the appliance on a stable surface.
2. Prepare a bowl for dessert under the drain in front of the body of the appliance.
3. Place the processing bowl on the upper body of the appliance.
4. Put the stainer for the preparation of chilled desserts (marked Ice Cream Maker) into the container.



5. Insert an auger.
6. Assemble the top cover and secure it by rotating.
7. Mix the recommended raw materials (frozen fruit) with cottage cheese or yogurt In the prepared bowl.
8. Switch ON the appliance. Speed 1 is normal. Speed 2 is the reverse.
9. Put the mix into the processing bowl slowly.

WARNING I

Only load properly washed and remove-seed fruit. If the noise level becomes considerably higher, or there are stronger vibrations, clean the unit immediately!

Use frozen fruits such as strawberries, raspberries, blueberries, bananas

Do not seed fruit, nuts, or ice cubes.



WASH PROGRAM



To facilitate cleaning, we recommend that after the completion of the process of juicing conclude the Anti Drip cap, fill the container to the mark Wash Program with water up and about 3 minutes appliance switch on. Then open the cap and let the water drain into the prepared pan. If necessary, repeat the procedure. More in a video on

www.my-concept.cz

Note: If the container is not a guideline, pour into a container of about 400 ml of water. The missing guideline is not a reason for the complaint.

CLEANING AND MAINTENANCE

Before cleaning the unit, always disconnect the power cord from the wall outlet!

The surface of the unit may only be cleaned using a wet cloth. Do not use any detergents or hard objects, as they may damage the unit's surface!

Wash the removable parts in warm water. Use the supplied brush.

Never clean the unit under running water, do not rinse it, and do not submerge it in the water!

1. Open the upper cover.
2. Release the juice drain cover upwards together with the rotating sieve.
3. Remove and clean the pulp container.
4. After you finish cleaning the removable parts, follow the reverse steps to reassemble the unit.

TROUBLESHOOTING

Problem	Cause	Solution
The motor does not run.	Plug inserted into the mains outlet incorrectly or insufficiently.	Check the plug connection.
	The mains outlet is not live.	Check for voltage, e.g. by connecting another appliance.
	Wrongly assembled upper cover or closing clip.	Check assembly of the unit.
	The supply cable is damaged.	Refer the unit to an authorized service center for testing and repair.
The motor is noisy.	Incorrectly mounted rotating sieve.	Check the assembly of the unit.
	Clogged rotation sieve.	Disconnect the cable from the socket. Release the upper lid, empty the pulp container and clean the rotating sieve.

ACCESSORIES

The following accessories can be bought with the unit:
 Rotating sieve Ord. No.: 42391469 Price: See price list

REPAIR & MAINTENANCE

Any extensive maintenance or repair that requires access to the inner parts of the product must be performed by an expert service center.

ENVIRONMENTAL PROTECTION

- Packaging materials and obsolete appliances should be recycled.
- The transport box may be disposed of as sorted waste.
- Polyethylene bags shall be handed over for recycling.

Appliance recycling at the end of its service life:



■ A symbol on the product or its packaging indicates that this product should not go into household waste. It must be taken to the collection point of an electric and electronic equipment recycling facility. By making sure this product is disposed of properly, you will help prevent the negative effects on the environment and human health that would otherwise result from the inappropriate disposal of this product. You can learn more about recycling this product from your local authorities, a household waste disposal service, or in the shop where you bought this product.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design, and technical specifications may occur without prior notice and we reserve the right to make these changes.

WARRANTY TERMS

Warranty The manufacturer (or importer) is responsible for ensuring the product complies with the requirements of applicable legal regulations as well as those of the relevant technical standards. Moreover, they are responsible for ensuring the product has the properties the manufacturer described in documents related to the goods or those reasonably expected by the customer with regard to the nature of the goods or based on advertising produced by the manufacturer, and further, they are responsible for ensuring the product is fit for the purpose proposed by the manufacturer or that a product of the same type is normally used for.

The quality warranty term is 24 months from product takeover by the customer.

The warranty does not apply to wear and tear caused by regular use. The customer shall not be entitled to any warranty claims if, prior to taking the product over, they knew the product contained a defect or if the defect is attributable to the customer.

The warranty specifically does not apply:

- if the product installation, operation, and service conditions stipulated in the product operating manual have not been adhered to,
- to malfunctions caused due to mechanical, heat, or chemical damage, short circuit, over-voltage, or incorrect installation,
- to malfunctions caused by an inexperienced third-party intervention,
- to malfunctions caused by natural disasters,
- to malfunctions caused by insufficient or inappropriate maintenance in violation of the operating manual, including malfunctions caused by water and other sediments,
- to changes in the color of the heating surface or to scratching of the surface caused as a result of using the products in an unusual manner,
- to appearance and functional changes caused by exposure to sunlight, thermal radiation of water and other sediments,
- if the service life of certain product parts expires, e.g. for accumulators, bulbs, etc.

The warranty does not apply to any products and services provided along with the product (gifts, promotional articles, etc.).

Filing a complaint

A complaint against a product defect must be filed as soon as identified, yet no later than before the end of the warranty term.

The customer must file a product complaint with the dealer from which they have purchased the product, or with any authorized service center, a list of which is included in the product package, or available at www.my-concept.com.

While filing a product complaint, the product must be duly cleaned and securely packed so as to prevent any damage during its transport to an authorized service center, where relevant, unless the product is delivered in person.

The customer must submit proof of having concluded a purchase contract for the product by producing the receipt. While filing their complaint, the customer must indicate the noted defect and identify the preferred complaint application method.

Complaints processing

As long as the noted defect may be removed, the user has the right to have the defect duly removed free of

charge on a timely basis.

Where such a procedure is not reasonable with regard to the nature of the defect, the user may require to be supplied a new defect-free product (replacement), or, where the defect applies to a part of the product only, replacement of the part concerned. However, if replacement of the product or any part thereof is not proportionate with regard to the nature of the defect, especially if the effect can be removed without undue delay, the customer has the right to have the defect removed free of charge.

If the noted defect is not removable, or if the customer becomes entitled to the replacement of the product or a part thereof, yet the replacement is not possible, for example, due to the product having been sold out, the customer has the right to return the product (withdrawal from the contract).

The customer shall have the right to a new product (replacement) or to replacement of a part of the product even if the defect can be removed, provided they cannot properly use the product due to repeated occurrence of the defect or due to a high number of such defects. In such a case, the customer also has the right to return the product (by withdrawing from the contract).

If the product is not returned (the customer does not withdraw from the contract), or if the customer does not apply the right to a new defect-free product (replacement), to replacement of a part thereof, or to repair the product, they may request a reasonable discount. The customer also has a right to a reasonable discount if a new defect-free product cannot be supplied to them, or if a product part cannot be replaced or the product repaired unless the situation is remedied within a reasonable time limit, or if remedying the situation would create major discomfort on the part of the customer.

The seller-authorized service center or a staff member authorized by them must decide about each complaint immediately or within three business days in complicated cases. This term does not include a reasonable period of time, depending on the type of product concerned, required for the defect to be assessed by an expert. A complaint, including defect removal, must be dealt with without any undue delay, no later than within 30 calendar days of the complaint filing date, unless the seller and the customer agree on a later deadline. On returning the product (withdrawing from the contract) the customer must return any accessories and documents supplied along with the product.

The customer does not have the right to keep the defective parts and components of the product replaced as part of a repair of the product. This shall be without prejudice to any other rights the customer may have in relation to the purchase of the product.

Remark: Complaints against products damaged in transport are governed by the carrier's complaints procedure


Manufacturer

Jindřich Valenta – Concept
Vysokomýtská 1800, 565 01 Choceň
Czech Republic
tel.: +420 465 471 433
fax +420 465 473 304
Company ID No. 13216660
email: servis@my-concept.cz
[www: www.my-concept.com](http://www.my-concept.com)

Product data

Model:	
Production number:	
Date of purchase:	Deal and signature of vendor:

concept

	<p>Concept LO 706x Juice Extractor [pdf] User Manual LO 706x, Juice Extractor, Extractor</p>
---	--

References

-  [Concept – chytře vymyšleno pro život](#)
-  [Domena Concept.pl jest na sprzedaż - SklepDomeny.pl](#)
-  [Luxury Architecture, Concept Architects, Bratislava](#)
-  [Concept](#)
-  [Online software pre autoservis | servis.sk](#)
-  [Tech.sk | Všetko o informačných technológiáchTech.sk | Magazín o internete a technológiách](#)
-  [Concept](#)
-  [Concept – chytře vymyšleno pro život](#)
-  [Concept innowacje w Twoim życiu!](#)
-  [www.my-concept.sk | vymyslené pre život](#)
-  [Verners](#)