



## concept RM3300 Food Processor User Guide

[Home](#) » [concept](#) » concept RM3300 Food Processor User Guide 

# concept

RM3300 Food Processor  
User Guide



## Contents

- [1 ACKNOWLEDGEMENTS](#)
- [2 Technical specifications](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 OPERATING INSTRUCTIONS](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 WARRANTY TERMS](#)
- [7 Complaints processing](#)
- [8 Product data](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

## ACKNOWLEDGEMENTS

Thank you for purchasing a Concept product. We wish you much joy with your new appliance every day you use it. Please read the instruction manual carefully before initial use. To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

## Technical specifications

Voltage	220-240 V ~ 50-60 Hz
Input	350 W
Sound level	85 dB (A)
Continuous operating time	1 min

## IMPORTANT SAFETY PRECAUTIONS

- Do not use the appliance in any other way than as described in this manual.
- Remove all the covering and marketing materials from the appliance before the first use.
- Make sure the mains voltage corresponds to the values on the rating plate of the appliance.
- Do not leave the appliance unattended when it is switched on or connected to the mains.
- Disconnect the appliance from the electrical outlet if it is not being used.
- When disconnecting the appliance from the wall outlet, never pull the power cord, grasp the plug end and disconnect it by removing it from the receptacle.
- Do not allow children or unauthorized people to handle the appliance, use it out of their reach.
- Persons with reduced mobility, reduced sensory perception, mental disadvantage or persons not familiar with the operation must use the appliance only under the supervision of responsible person, who is familiar with the instructions.
- Pay extra attention if the appliance is used near children.
- Do not use the appliance as a toy.
- Do not allow the power cord to hang freely over the edge of the worktop where children might reach it.
- Do not use the appliance outdoors or on a wet surface, there is a risk of electric shock.
- Do not use any accessories other than those recommended by the manufacturer.
- Do not use the appliance with a damaged cord or plug and have it repaired immediately by an authorized

service centre.

- Do not use the power cord to move or handle the appliance.
- Keep the appliance away from heat sources such as radiators, ovens, etc. Protect it from direct sunlight and humidity.
- Do not touch the appliance with wet hands.
- When installing accessories, cleaning and maintenance or in the event of a malfunction, switch off the appliance and disconnect the plug from the electrical outlet.
- The appliance is only suitable for home use and is not intended for commercial use.
- Do not immerse the power cord, plug or appliance in water or any other liquid.
- Check the appliance and the power cord for damage regularly. Never switch on a damaged appliance.
- Do not touch moving parts when using the appliance.
- Keep your hair, fingers and cloth away from the moving parts of the appliance.
- Pay extra attention when handling the attachments, the blades are very sharp and can cause injury.
- The appliance accessories must not be used in a microwave oven.
- Immediately after switching off the motor and unplugging the power cord, some parts may be still moving for a while. Wait until they stop completely.
- Use the appliance for food processing only.
- The temperature difference of the processed food should not exceed 60 °C. Do not use the appliance to process boiling food!
- Do not repair the appliance yourself. Contact an authorized service centre.
- Do not leave the appliance switched on unattended.
- Never bypass the safety switches.
- Place the appliance on a smooth, flat and stable work surface.
- Do not insert the plug into the wall outlet without installing all the necessary accessories.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Cleaning and maintenance performed by the user must not be carried out by children unless they are 8 years old and under supervision. Children aged under 8 years of age must be kept away from the appliance and its power cord. Do not let children play with the appliance.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Do not let children play with the appliance.

**Damages from failure to follow the manufacturer's instructions are not covered by the warranty.**

## **PRODUCT DESCRIPTION**



1. Glass bowl
2. Pusher
3. Blade holder
4. Sealing under top lid
5. Spindle extension
6. Chopping blade
7. Top lid
8. Shredding blade (fine)
9. Shredding blade (coarse)
10. Slicing blade
11. Egg beater

## OPERATING INSTRUCTIONS

**Note:** Do not exceed the maximum continuous operating time (KB max), see the table of technical parameters.  
Shredding blade

1. Insert the blade shaft into the glass bowl.
2. Insert the fine shredding blade, coarse shredding blade or slicing blade into the blade holder (disc).
3. Fit the blade holder (disc) onto the blade shaft (it must fit between the latches).
4. Place the top lid on the glass bowl (the locking parts must fit into the two handles on the glass bowl).
5. Insert the motor part into the top lid.
6. Insert the plug into the wall outlet.
7. Use the + and – buttons to adjust the speed level.
8. Press the ON/OFF button to switch the motor on or off.
9. Place the food into the feeding funnel of the lid using the pusher only.

10. When you have finished shredding, switch off the appliance with the ON/OFF button and unplug the appliance.
11. The lid can now be removed, to remove, pull apart the two locking parts on the top lid.

## Chopping

1. Insert the chopping blade into the glass bowl.
2. Place the top lid on the glass bowl (the locking parts must fit into the two handles on the glass bowl).
3. Insert the motor part into the top lid (it must fit between the latches).
4. Insert the plug into the wall outlet.
5. Use the + and – buttons to adjust the speed level (1- 4).
6. Press the ON/OFF button to switch the motor on or off.
7. Place the food in the feeding funnel using the pusher only.
8. When you have finished shredding, switch off the appliance with the ON/OFF button and unplug it.
9. The lid can now be removed, to remove, pull apart the two locking parts on the top lid.

## CLEANING AND MAINTENANCE

- Unplug the power cord from the wall outlet before cleaning.
- Never immerse the base of the blender with a motor into the water!
- Do not use any sharp or abrasive cleaners.
- Only a damp cloth should be used to clean the outside of the cover.
- The work bowl and the top lid must not be washed in a dishwasher!

## SERVICE

Extensive maintenance or repair, which requires access to internal parts of the product, has to be performed by a qualified specialist or the service centre.

## ENVIRONMENTAL CONCERNS

- Packaging materials and old appliances should be recycled.
- Packaging materials may be disposed of as sorted waste.
- Dispose the plastic bags made of polyethylene (PE) of as sorted waste.

## Recycling of the appliance at the end of its lifespan:



■ This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (Waste Electrical and Electronic Equipment – WEEE). The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The disposal of such material has to be done according to the recycling regulations. For more detailed information about recycling of this appliance see the authorized local office or service for household waste disposal or the shop, where you purchased the appliance.



The product meets all the necessary requirements of the EU directives applicable to the specific product. Changes in text, design, and technical specifications are subject to change without prior notice and we reserve the right to change them.

## WARRANTY TERMS

**Warranty** The manufacturer (or importer) is responsible for ensuring the product complies with the requirements of applicable legal regulations as well as those of the relevant technical standards. Moreover, they are responsible for ensuring the product has the properties the manufacturer described in documents related to the goods or those reasonably expected by the customer with regard to the nature of the goods or based on advertising produced by the manufacturer, and further they are responsible for ensuring the product is fit for the purpose proposed by the manufacturer or that a product of the same type is normally used for.

The quality warranty term is 24 months from product takeover by the customer. The warranty does not apply to wear and tear caused by regular use. The customer shall not be entitled to any warranty claims if, prior to taking the product over, they knew the product contained a defect or if the defect is attributable to the customer.

**The warranty specifically does not apply:**

- if the product installation, operation and service conditions stipulated in the product operating manual have not been adhered to,
- to malfunctions caused due to mechanical, heat or chemical damage, short circuit, over voltage or incorrect installation,
- to malfunctions caused by an inexperienced third-party intervention,
- to malfunctions caused by natural disaster,
- to malfunctions caused by insufficient or inappropriate maintenance in violation of the operating manual, including malfunctions caused by water and other sediments, to changes in colour of the heating surface or to scratching of the surface caused as a result of using the products in an unusual manner,
- to appearance and functional changes caused by exposure to sunlight, thermal radiation of water and other sediments,
- if the service life of certain product parts expires, e.g. for accumulators, bulbs, etc.

The warranty does not apply to any products and services provided along with the product (gifts, promotional articles, etc.).

### **Filing a complaint**

A complaint against a product defect must be filed as soon as identified, yet no later than before the end of the warranty term.

The customer must file a product complaint with the dealer from which they have purchased the product, or with any authorised service centre, a list of which is included in the product package, or available at [www.my-concept.com](http://www.my-concept.com). While filing a product complaint, the product must be duly cleaned and securely packed so as to prevent any damage during its transport to an authorised service centre, where relevant, unless the product is delivered in person.

The customer must submit proof of having concluded a purchase contract for the product by producing the receipt. While filing their complaint, the customer must indicate the noted defect and identify the preferred complaint application method.

### **Complaints processing**

As long as the noted defect may be removed, the user has the right to have the defect duly removed free of charge on a timely basis.

Where such a procedure is not reasonable with regard to the nature of the defect, the user may require to be supplied a new defect-free product (replacement), or, where the defect applies to a part of the product only, replacement of the part concerned. However, if replacement of the product or any part thereof is not proportionate with regard to the nature of the defect, especially if the defect can be removed without undue delay, the customer has the right to have the defect removed free of charge.

If the noted defect is not removable, or if the customer becomes entitled to replacement of the product or a part thereof, yet the replacement is not possible, for example due to the product having been sold out, the customer has the right to return the product (withdrawal from the contract).

The customer shall have the right to a new product (replacement) or to replacement of a part of the product even if the defect can be removed, provided they cannot properly use the product due to repeated occurrence of the defect or due to a high number of such defects. In such a case, the customer also has the right to return the product (by withdrawing from the contract).

If the product is not returned (the customer does not withdraw from the contract), or if the customer does not apply the right to a new defect-free product (replacement), to replacement of a part thereof or to repair of the product, they may request a reasonable discount. The customer also has a right to a reasonable discount if a new defect-free product cannot be supplied to them, or if a product part cannot be replaced or the product repaired unless the situation is remedied within a reasonable time limit, or if remedying the situation would create major discomfort on the part of the customer.

The seller, authorised service centre or a staff member authorised by them must decide about each complaint immediately or within three business days in complicated cases. This term does not include a reasonable period of time, depending on the type of product concerned, required for the defect to be assessed by an expert. A complaint, including defect removal, must be dealt with without any undue delay, yet no later than within 30 calendar days of the complaint filing date, unless the seller and the customer agree on a later deadline. On returning the product (withdrawing from the contract) the customer must return any accessories and documents supplied along with the product. The customer does not have the right to keep the defective parts and components of the product replaced as part of a repair of the product.

This shall be without prejudice to any other rights the customer may have in relation to the purchase of the product.

**Remark:** Complaints against products damaged in transport are governed by the carrier's complaints procedure.

## Product data

**Model:**

**Production number:**

**Date of purchase:**

**Seal and signature of vendor:**

# concept

**Manufacturer**

Czech Republic

tel.: +420 465 471 400

fax +420 465 473 304

Company ID No. 13216660

email: [servis@my-concept.cz](mailto:servis@my-concept.cz)

[www: www.my-concept.com](http://www.my-concept.com)

## Documents / Resources

	<p><a href="#">concept RM3300 Food Processor</a> [pdf] User Guide RM3300 Food Processor, RM3300, RM3300 Processor, Food Processor, Processor</p>
---	--

## References

- [concept.com](http://concept.com)

-  [Concept – chytře vymyšleno pro život](#)
-  [Domena Concept.pl jest na sprzedaż - SklepDomeny.pl](#)
-  [Luxury Architecture, Concept Architects, Bratislava](#)
-  [Elektronika Banjan d.o.o.](#)
-  [Concept](#)
-  [Concept – chytře vymyšleno pro život](#)
-  [my](#)
-  [Concept](#)
-  [Concept innowacje w Twoim życiu!](#)
-  [www.my-concept.sk | vymyslené pre život](#)
-  [Verners](#)

Manuals+.