



concept RM7000 Food Processor/Mixer Instruction Manual

[Home](#) » [concept](#) » concept RM7000 Food Processor/Mixer Instruction Manual 

concept RM7000 Food Processor/Mixer Instruction Manual

Contents

- [1 Acknowledgements](#)
- [2 IMPORTANT SAFETY PRECAUTIONS](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 OPERATING INSTRUCTIONS](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 SERVICE CENTRE](#)
- [7 ENVIRONMENTAL CONCERNS](#)
- [8 Warranty](#)
- [9 Filing a complaint](#)
- [10 Complaints processing](#)
- [11 Product data](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)

concept

Food processor



Acknowledgements

Thank you for purchasing a Concept product. We wish you much joy with your new appliance every day you use it. Please read the instruction manual carefully before initial use. To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

Technical specifications	
Voltage	220-240 V ~ 50-60 Hz
Input	1200 W
Sound level	85 dB (A)
Continuous operating time	Kneading (KB max) 10 min.
	Grinding (KB max) 5 min.
	Whipping (KB max) 5 min.
	Blending (KB max) 2 min.

IMPORTANT SAFETY PRECAUTIONS

- Do not use the appliance in any other way than as described in this manual.
- Remove all the covering and marketing materials from the appliance before the first use.
- Make sure the mains voltage corresponds to the values on the rating plate of the appliance.
- Do not leave the appliance unattended when it is switched on or connected to the mains.
- Disconnect the appliance from the electrical outlet if it is not being used.
- When disconnecting the unit from the wall outlet, never pull the power cord, grasp the plug end and disconnect it by removing it from the receptacle.
- Do not allow children or unauthorized people to handle the appliance, use it out of their reach.
- Persons with reduced mobility, reduced sensory perception, mental disadvantage or persons not familiar with the operation must use the appliance only under the supervision of responsible person, who is familiar with the instructions.
- Pay extra attention if the appliance is used near children.
- Do not use the appliance as a toy
- Do not allow the power cord to hang freely over the edge of the worktop where children might reach it.
- Do not use the appliance outdoors or on a wet surface, there is a risk of electric shock.
- Do not use any accessories other than those recommended by the manufacturer.
- Do not use the appliance with a damaged cord or plug and have it repaired immediately by an authorized service centre.
- Do not use the power cord to move or handle the appliance.
- Keep the appliance away from heat sources such as radiators, ovens, etc. Protect it from direct sunlight and humidity.
- Do not touch the appliance with wet hands.
- When installing accessories, cleaning and maintenance or in the event of a malfunction, switch off the appliance and disconnect the plug from the electrical outlet.
- The appliance is only suitable for home use and is not intended for commercial use.
- Do not immerse the power cord, plug or appliance in water or any other liquid.
- Check the appliance and the power cord for damage regularly. Never switch on a damaged appliance.

- Do not touch moving parts when using the appliance.
- Keep your hair, fingers and cloth away from the moving parts of the appliance.
- Pay extra attention when handling the adapters, the blades are very sharp and can cause injury.
- The appliance accessories must not be used in a microwave oven.
- Immediately after switching off the motor and unplugging the power cord, some parts may be still moving for a while. Wait until they stop completely.
- Use the appliance for food processing only.
- The maximum allowable temperature of processed food is 80 °C. Do not use the appliance for boiling food!
- Do not repair the appliance yourself. Contact an authorized service centre.
- Do not leave the appliance switched on unattended.
- Never bypass the safety switches.
- Do not put food in the rotating hooks while the appliance is working.
- Place the appliance on a smooth, flat and stable work surface.
- Do not insert the plug into the wall outlet without installing all the necessary accessories.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Cleaning and maintenance performed by the user must not be carried out by children unless they are 8 years old and under supervision. Children aged under 8 years of age must be kept away from the appliance and its power cord. Do not let children play with the appliance.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Do not let children play with the appliance.

Damages from failure to follow the manufacturer's instructions are not covered by the warranty.

PRODUCT DESCRIPTION

1. Front cover
2. Arm
3. Back cover
4. Speed control
5. The upper part of the appliance
6. Container lid
7. Whisk
8. Release button
9. The lower part of the appliance
10. Container
11. Dough hook
12. Mixing whisk
13. Grater
14. Grinder
15. Blender



OPERATING INSTRUCTIONS

Whipping, kneading and blending

IMPORTANT

IMPORTANT

- If the back cover of the appliance is not in place, the appliance will not work.
- DO NOT attempt to use this function while grinding or blending.

1. Place the mixing container in the base and turn it clockwise until it clicks into place.
2. To raise the arm, press the release button (8) and at the same time lift the arm by gently pulling it up.

3. Place the lid (6) on the container and turn it clockwise until it clicks into place.
4. Place the desired whisk on the output shaft, push the whisk against the spring gently and turn it until it locks into the lock.
5. Now put the ingredients in the container. Do not exceed the maximum allowable amount of ingredients, which is 1.1 kg.
6. Release the arm with the release button (8) while lowering it with a slight pressure.
7. Insert the plug into the wall outlet.
8. Switch on the appliance and turn the speed control button (4) to select a speed between 1 and 5 (depending on the type of dough being prepared).
9. Pulse operation (kneading at short intervals): turn the speed control button to the "PULSE" position. When the switch is released, it automatically returns to the "OFF" position.
10. After mixing is complete, turn the speed control button (4) to the "OFF" position. Then remove the plug from the wall outlet.
11. Press the release button (8) and at the same time lift the arm by gently pulling it up.
12. The container can now be removed.
13. Remove the mixture from the container with a spatula.
14. Cleaning is described in the "Cleaning" chapter.

Setting the speed and using the whisks. The maximum quantity of the mixture must not exceed 1.1 kg

Speed	Use	Type of mixture
1-2	Dough hook	Dense mixtures (e.g. bread dough, pizza, yeast dough)
3-4	Mixing whisk	Medium dense mixtures (e.g. pancake mixture, rubbed dough, butter creams)
5	Whisk	Light mixtures (e.g. cream, egg white, pudding)
Pulse	Whisk	Short-term whipping (e.g. whipped cream)

NOTE:

Do not exceed the maximum continuous operating time (KB max), see the table of technical parameters. Leave the motor off for at least 20 minutes before using the appliance again.

Blender

IMPORTANT

DO NOT attempt to use this function while grinding or mixing.

1. Do not connect the appliance to the mains until the blender container is in the correct position.
2. Remove the plug from the wall outlet before removing the container from the blender.
3. Blended food in the container must not exceed 80 °C.
4. To avoid spillage, do not exceed 1.5 litres of liquid in the blender container.
5. Warning: Never remove the lid from the blender container while blending.

6. Do not use the blender for more than 2 minutes.

Function

The blender can be used for both blending and mixing. It can be used for example for preparing soup, sauce, milk shake, baby food, blending vegetables, fruit, purée, etc. For easier operation, cut the food into small pieces before placing it in the container.

Blender instruction manual



Fig. 1



Fig. 2

- Remove the back cover (Fig. 1).
- Place the food in the glass container.
- Place the lid on the glass container.
- Insert the measuring cup into the lid opening and turn it clockwise.
- Place the blender container on the appliance and turn it counter-clockwise (Fig. 2).
- Insert the plug into the wall outlet.
- Set the speed control button to the desired position 5 / P.
- Switch off the appliance and unplug it.
- Remove the measuring cup with the lid.
- Remove stuck food from the inside of the container with a soft spatula.
Keep the spatula away from the blades.
- To remove the blender container, turn it clockwise.
- To remove the measuring cup, turn it counter-clockwise.

Grinder

IMPORTANT

DO NOT attempt to use this function while blending or chopping.

1. Cut boneless meat into pieces. Approximately to the size of 20 × 20 × 60 mm so as to be easily inserted in the opening of the container.
2. Inserted food should not contain bones and other hard parts. Bones could cause the motor to stop. If the motor stops, stop the appliance immediately and unplug it. Remove the entire meat grinder assembly. If the motor stops automatically, eliminate the cause of the stop. After the motor has cooled down, it is possible to continue.
3. Switch the appliance on by pressing the speed control button (4) to the speed 5.
4. Place the food in the container exclusively using the stamper.
5. After grinding is completed, turn the speed control button (4) to the "OFF" position and remove the plug from the wall outlet.
6. Maximum grinding time is 5 min. in continuous operation.

Assembly instructions for grinder



Fig. 1



Fig. 2



Fig. 3

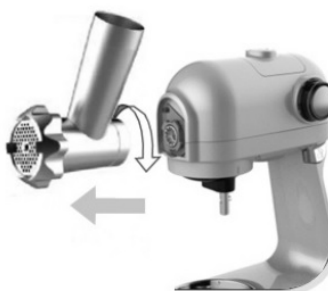


Fig. 4

- Remove the front cover (Fig. 1).
- Place and turn the grinder body counter-clockwise so that it clicks firmly into place (Fig. 2). Place the container on the grinder body.
- Place the meat container under the grinder.
- Place the container on the grinder body (Fig. 3).
- Insert the plug into the wall outlet.

- Set the speed control button to position 5. Then place the food in the container and push it into the container with the stamper.
- After use, switch off the appliance and unplug it.
- Press the grinder locking button (see Fig. 1). Turn the grinder clockwise and remove the entire grinder assembly (Fig. 4).
- Place back the front cover.

Filling sausages



Fig. 1

1. Insert the auger into the grinder body. Attach the extruder disc and the adapter for filling sausage onto the auger axis. Tighten the grinder nut by hand (Fig. 1).
2. Place and turn the grinder body counter-clockwise so that it clicks firmly into place.
3. Place the container on the grinder body.
4. Tie up a casing at one end. Put the loose end on the adapter.
5. Press the controller button (4) and turn on the appliance. Select speed as needed.
6. Put the filling mixture into the inlet and gradually fill the casing. Do not push too hard, otherwise the appliance may get clogged.
7. There must not be any air bubbles in sausages. The recommended length of each sausage is 10-15 cm. When the sausage is filled, tie up the loose end with a string.
8. When you are done with processing, you can push out any residues from the adapter by inserting and processing a few pieces of bread.

Filling meat balls



Fig. 1

1. Insert the auger into the grinder body. Attach the extruder disc and the cap for preparation of meat balls onto the auger axis. Tighten the grinder nut (Fig. 1).
2. Place and turn the grinder body counter-clockwise so that it clicks firmly into place.
3. Place the container on the grinder body.
4. Press the controller button (4) and turn on the appliance. Select speed as needed.
5. Put the mixture gradually into the inlet of the appliance. Do not push too hard, otherwise the appliance may get clogged.
6. Shape the extruded mixture to your liking.
7. When you are done with processing, you can push out any residues from the adapter by inserting and processing a few pieces of bread.

Preparing cookies



Fig. 1

1. Insert the auger into the grinder body. Attach the extruder disc and the cap for preparation of cookies onto the auger axis. Tighten the grinder nut (Fig. 1).
2. Place and turn the grinder body counter-clockwise so that it clicks firmly into place.
3. Place the container on the grinder body.
4. Slide the cookie maker with different profile shapes into the nut.
5. Press the controller button (4) and turn on the appliance. Select speed as needed.
6. Put the dough gradually into the inlet of the appliance. Do not push too hard, otherwise the appliance may get clogged.

Note: We recommend holding the extruded dough in the desired shape by hand so that it does not tear

Grater

IMPORTANT

DO NOT attempt to use this function while grinding, blending or chopping.

1. Cut the food into pieces. Approximately to the size of 20 × 20 × 60 mm so as to be easily inserted in the opening of the container. Inserted food should not contain hard parts. Hard parts could cause the motor to stop. If the motor stops, stop the appliance immediately and unplug it. Remove the entire grater assembly. If the motor stops automatically, eliminate the cause of the stop. After the motor has cooled down, it is possible to

continue.

2. Switch the appliance on by pressing the speed control button (4) to the speed 5.
3. Place the food in the container exclusively using the stamper.
4. After grinding is completed, turn the speed control button (4) to the "OFF" position and remove the plug from the wall outlet.
5. Maximum grating time is 5 min. in continuous operation.

Assembly instructions for grater



Fig. 1



Fig. 2



Fig. 3

- Remove the front cover (Fig. 1).
- Place and turn the grater body counter-clockwise so that it clicks firmly into place (Fig. 2).
- Place the grated food container under the grater.

- Insert the plug into the wall outlet.
- Set the speed control button to position 5. Then place the food in the container and push it into the container with the stamper.
- After use, switch off the appliance and unplug it.
- Press the grater locking button (see Fig. 1). Turn the grater clockwise and remove the entire grater assembly (Fig. 3).
- Place back the front cover.

1. Fine vegetable grater
2. Coarse vegetable grater
3. Grater for thick slices
4. Grater for thin slices
5. Potato grater



CLEANING AND MAINTENANCE

- Unplug the power cord from the wall outlet before cleaning.
- Never immerse the base of the blender with a motor into the water!
- Do not use any sharp or abrasive cleaners.
- Only a damp cloth should be used to clean the outside of the cover.

Container and accessories

NOTICE

- The whisks and the container can be washed in the dishwasher.
- Other parts are not suitable for washing in a dishwasher.
- The parts that come into contact with food can be washed in soapy water.
- Before reassembling, let all the parts dry thoroughly.
- After drying, apply a small amount of vegetable oil to the surface of the container and the replaceable adapters of the grinder.

SERVICE CENTRE

Extensive maintenance or repair, which requires access to internal parts of the product, has to be performed by a qualified service centre.

ENVIRONMENTAL CONCERNS

- Packaging materials and old appliances should be recycled.
- Packaging materials may be disposed of as sorted waste.
- Dispose the plastic bags made of polyethylene (PE) of as sorted waste.

Recycling of the appliance at the end of its lifespan



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. It is necessary to take it to a container park for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the appliance.



The product meets all the necessary requirements of the EU directives applicable to the specific product.

Changes in text, design, and technical specifications are subject to change without notice and we reserve the right to change them.

Warranty

The manufacturer (or importer) is responsible for ensuring the product complies with the requirements of applicable legal regulations as well as those of the relevant technical standards. Moreover, they are responsible for ensuring the product has the properties the manufacturer described in documents related to the goods or those reasonably expected by the customer with regard to the nature of the goods or based on advertising produced by the manufacturer, and further they are responsible for ensuring the product is fit for the purpose proposed by the manufacturer or that a product of the same type is normally used for.

The quality warranty term is 24 months from product takeover by the customer.

The warranty does not apply to wear and tear caused by regular use. The customer shall not be entitled to any warranty claims if, prior to taking the product over, they knew the product contained a defect or if the defect is attributable to the customer.

The warranty specifically does not apply:

- if the product installation, operation and service conditions stipulated in the product operating manual have not been adhered to,
- to malfunctions caused due to mechanical, heat or chemical damage, short circuit, over voltage or incorrect installation,
- to malfunctions caused by an inexperienced third-party intervention,
- to malfunctions caused by natural disaster,
- to malfunctions caused by insufficient or inappropriate maintenance in violation of the operating manual,

including malfunctions caused by water and other sediments,

- to changes in colour of the heating surface or to scratching of the surface caused as a result of using the products in an unusual manner,
- to appearance and functional changes caused by exposure to sunlight, thermal radiation of water and other sediments,
- if the service life of certain product parts expires, e.g. for accumulators, bulbs, etc.

The warranty does not apply to any products and services provided along with the product (gifts, promotional articles, etc.).

Filing a complaint

A complaint against a product defect must be filed as soon as identified, yet no later than before the end of the warranty term.

The customer must file a product complaint with the dealer from which they have purchased the product, or with any authorised service centre, a list of which is included in the product package, or available at [www. my-concept.com](http://www.my-concept.com).

While filing a product complaint, the product must be duly cleaned and securely packed so as to prevent any damage during its transport to an authorised service centre, where relevant, unless the product is delivered in person.

The customer must submit proof of having concluded a purchase contract for the product by producing the receipt.

While filing their complaint, the customer must indicate the noted defect and identify the preferred complaint application method.

Complaints processing

As long as the noted defect may be removed, the user has the right to have the defect duly removed free of charge on a timely basis.

Where such a procedure is not reasonable with regard to the nature of the defect, the user may require to be supplied a new defect-free product (replacement), or, where the defect applies to a part of the product only, replacement of the part concerned. However, if replacement of the product or any part thereof is not proportionate with regard to the nature of the defect, especially if the defect can be removed without undue delay, the customer has the right to have the defect removed free of charge.

If the noted defect is not removable, or if the customer becomes entitled to replacement of the product or a part thereof, yet the replacement is not possible, for example due to the product having been sold out, the customer has the right to return the product (withdrawal from the contract).

The customer shall have the right to a new product (replacement) or to replacement of a part of the product even if the defect can be removed, provided they cannot properly use the product due to repeated occurrence of the defect or due to a high number of such defects. In such a case, the customer also has the right to return the product (by withdrawing from the contract).

If the product is not returned (the customer does not withdraw from the contract), or if the customer does not apply the right to a new defect-free product (replacement), to replacement of a part thereof or to repair of the product, they may request a reasonable discount. The customer also has a right to a reasonable discount if a new defect-

free product cannot be supplied to them, or if a product part cannot be replaced or the product repaired unless the situation is remedied within a reasonable time limit, or if remedying the situation would create major discomfort on the part of the customer.

The seller, authorised service centre or a staff member authorised by them must decide about each complaint immediately or within three business days in complicated cases. This term does not include a reasonable period of time, depending on the type of product concerned, required for the defect to be assessed by an expert. A complaint, including defect removal, must be dealt with without any undue delay, yet no later than within 30 calendar days of the complaint filing date, unless the seller and the customer agree on a later deadline.

On returning the product (withdrawing from the contract) the customer must return any accessories and documents supplied along with the product.

The customer does not have the right to keep the defective parts and components of the product replaced as part of a repair of the product.

This shall be without prejudice to any other rights the customer may have in relation to the purchase of the product.

Remark: Complaints against products damaged in transport are governed by the carrier's complaints procedure.


Manufacturer

Concept
1800, 565 01 Choceň
Czech Republic
tel.: +420 465 471 400
fax +420 465 473 304
Company ID No. 13216660
email: servis@my-concept.cz
www: [www: www.my-concept.com](http://www.my-concept.com)

Product data

Model:	
Production number:	
Date of purchase:	Seal and signature of vendor:

Documents / Resources

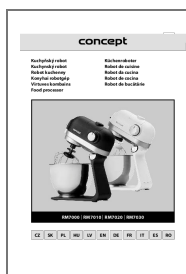[concept RM7000 Food Processor/Mixer](#) [pdf] Instruction Manual

RM7000, Food Processor Mixer, RM7000 Food Processor Mixer, RM7010, RM7020, RM7030