



## concept SM-3370 Tabletop Blender Instruction Manual

[Home](#) » [concept](#) » concept SM-3370 Tabletop Blender Instruction Manual 

### Contents

- [1 concept SM-3370 Tabletop Blender](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS:](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 OPERATING INSTRUCTIONS](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 SERVICING](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

The Concept logo is displayed in a bold, lowercase, sans-serif font. The letters are black and set against a light gray rectangular background.

**concept SM-3370 Tabletop Blender**



### ACKNOWLEDGMENT

Thank you for purchasing a Concept product. We hope you will be satisfied with our product throughout its service life.

Please study the entire Operating Manual carefully before you start using the product. Keep the manual in a safe place for future reference. Make sure other people using the product are familiar with these instructions.

Technical parameters	
Voltage	220 – 240 V~ 50/60 Hz
Input	300 W
Noise level depending on accessories connected	max. 80 dB(A)
Time of continuous operation (KB)	max. 20 sec.

### IMPORTANT SAFETY INSTRUCTIONS:

- Use the unit only as described in this operating manual.
- Remove all the covering and marketing materials from the unit before the first use.
- Make sure the mains voltage matches the value marked on the rating plate.
- Close supervision is necessary when the unit is on or plugged into the socket.
- Put the appliance on a flat, steady surface; do not put it on other appliances.
- Do not place the appliance close to flammable substances, fire, heating bodies or a hot oven.
- Do not cover the appliance. There is a risk of overheating.

- Do not put anything on the unit during operation.
  - Never carry the unit during operation.
  - Keep the unit clean; prevent debris or other foreign bodies from entering the openings of the unit body .  
Contaminants may short out the unit, causing damage or fire.
  - Never pull the cord to disconnect the plug from the socket; hold the plug instead.
  - Do not allow children or unskilled people to handle the unit. Use the unit out of the reach of these individuals.
  - The appliance is not intended for use by people with reduced physical, sensory or mental capabilities or lack of knowledge, unless under the supervision of an acquainted person responsible for their safety.
  - Pay the utmost attention when using the unit close to children.
  - Do not use the appliance as a toy.
  - Make sure the power cord does not hang over the working area, to prevent children from reaching it.
  - The appliance is intended for interior use only; do not expose it to moisture. Otherwise, a risk of electrical shock may occur.
  - Use manufacturer-recommended accessories only.
  - Never use the appliance if the supply cord or plug is damaged. Immediately refer to an authorised service centre for repair.
  - Never pull the supply cord or use it to carry the unit.
  - Keep the appliance away from any other heat sources such as radiators, ovens etc. Do not expose the unit to direct sunlight or moisture.
  - Never operate the appliance with wet hands.
  - Turn off the product and disconnect the plug from the mains outlet before installing accessories, performing maintenance, or in the case of any failure.
  - Do not touch the moving parts during operation of the unit. Wait until it stops completely.
  - The appliance is intended for domestic use only, not for commercial use.
  - Do not immerse the power cord, plug, or appliance in water or any other liquid.
  - Check the appliance and power cord for damage regularly. Never switch on a damaged appliance.
  - Prevent loose hair and garments from hanging close to the openings and moving parts of the appliance.
  - Before plugging the unit in or unplugging it from the wall outlet, make sure the switch is OFF.
  - Always take extra care when handling the blades and slicers. They are very sharp and could cause an injury.
  - Turn the unit off, disconnect the power cord from the wall outlet, and allow the unit to cool before cleaning.
  - The unit contains sharp parts. Extra care should be taken while cleaning the unit.
  - Do not let the power cord hang loosely over the edge of the work area. Make sure the power cord does not touch hot surfaces.
  - Do not let the unit hang loosely on the power cord.
  - Do not use the unit without correctly mounted accessories.
  - Do not let the appliance run when empty.
  - Do not repair the appliance yourself. Refer to an authorized service centre instead.
  - This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. This appliance may be cleaned by children 8 years of age and older if they are properly supervised. Keep this appliance and the power cord out of reach of children younger than 8 years of age.
- Failure to follow the manufacturer's instructions may lead to refusal of warranty repair.

## PRODUCT DESCRIPTION



1. Body of the unit
2. Mixer container
3. Mixer lid
4. A rotary switch
5. Blade assembly

## OPERATING INSTRUCTIONS

### CAUTION

Prior to using a new unit, wipe the surface with a wet cloth and wash the removable accessories in warm water due to hygienic reasons.

The unit has a built-in safety catch. The motor can be switched on only if the accessories are properly mounted. Do not bypass the safety mechanism!

- • Never leave the appliance unattended while it is running or connected to the mains.
- Some parts may keep moving for a while immediately after the motor has been switched off and the power cord disconnected from the socket. Wait until the accessories stop completely and only then open the lid.

### THE BLENDER IS USED TO CHOP FRUITS AND VEGETABLES

1. Put the ingredients into the mixing jar (2) and screw in the blade assembly (5) to close the jar.
2. Put the mixing jar (2) onto the blender unit (1), so that the pins on the mixing jar (2) slip into the holes on the blender body (1).
3. Rotate the mixing jar (2) counterclockwise, until you hear a click.

Uncoil the entire cord and plug into the outlet.

You can blend briefly and repeatedly by rotating the switch (4) to the P position; this is the pulse mode, or by rotating the switch (4) to the 1 position to use low speed and to the 2 position to use high speed; this mode enables continuous operation. To finish blending, turn the switch (4) to the 0 position.

4. When you finish blending, unplug the cord from the outlet.

- 5. Rotate the mixing jar clockwise to dismount the mixing jar (2) from the blender body (1).
- 6. Unscrew the blade assembly (5) and replace it with the jar cover (3). If you open the cap, you can drink directly from the jar.

CLEANING AND MAINTENANCE

Prior to any cleaning or change of the extensions, make sure the a rotary switch is in the 0 position and the power cord is disconnected from the socket.

- Never immerse the motor part (1) or the power cord in water.
- Wipe the body of the unit (1) using a wet cloth only.
- Wash the replaceable parts in tepid water with detergent and rinse in clean water. Do not use pot scourers, abrasive agents or solvents to clean the appliance.

SERVICING

Any extensive maintenance or repair that requires access to the inner parts of the product must be performed by an expert service centre.


ENVIRONMENTAL PROTECTION

- Packaging materials and obsolete appliances should be recycled.
- The transport box may be disposed of as sorted waste.
- Polyethylene bags shall be handed over for recycling.

APPLIANCE RECYCLING AT THE END OF ITS SERVICE LIFE:

A symbol on the product or its packaging indicates that this product should not go into household waste. It must be taken to the collection point of an electric and electronic equipment recycling facility. By making sure this product is disposed of properly, you will help prevent the negative effects on the environment and human health that would otherwise result from the inappropriate disposal of this product. You can learn more about recycling this product from your local authorities, a household waste disposal service or in the shop where you bought this product. This product meets all the basic EU regulation requirements that relate to it. Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Documents / Resources

<div><div><div>concept</div><div><div>Tabletop blender</div><div>Blender</div><div>Accessories</div></div><div><div>Blender</div><div>Accessories</div><div>Blender</div><div>Accessories</div></div></div><div></div><div><div>CE</div><div>UK</div><div>PL</div><div>US</div><div>DE</div><div>FR</div></div></div>	<div><div><a href="#">concept SM-3370 Tabletop Blender</a> [pdf] Instruction Manual</div><div>SM-3370, Tabletop Blender, SM-3370 Tabletop Blender, Blender</div></div>
--	--

References

-  [Concept – chytře vymyšleno pro život](#)
-  [Domena Concept.pl jest na sprzedaż - SklepDomeny.pl](#)
-  [Luxury Architecture, Concept Architects, Bratislava](#)
-  [Elektronika Banjan d.o.o.](#)
-  [Concept](#)
-  [Online software pre autoservis | servis.sk](#)
-  [Tech.sk | Všetko o informačných technológiáchTech.sk | Magazín o internete a technológiách](#)
-  [Concept](#)
-  [Concept – chytře vymyšleno pro život](#)
-  [Concept innowacje w Twoim życiu!](#)
-  [www.my-concept.sk | vymyslené pre život](#)
-  [Verners](#)

Manuals+.