



concept SM 8000 Smoothie Blender 1600 W Instruction Manual

[Home](#) » [concept](#) » concept SM 8000 Smoothie Blender 1600 W Instruction Manual 

Contents

- [1 concept SM 8000 Smoothie Blender 1600 W](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 CONTROL PANEL](#)
- [5 OPERATING INSTRUCTIONS](#)
- [6 CLEANING AND MAINTENANCE](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

concept


concept SM 8000 Smoothie Blender 1600 W



ACKNOWLEDGMENT

Thank you for purchasing a Concept product. We hope you will be satisfied with our product throughout its service life.

Please study the entire Operating Manual carefully before you start using the product. Keep the manual in a safe place for future reference. Make sure other people using the product are familiar with these instructions.

Technical parameters	
Voltage	220 – 240 V~ 50/60 Hz
Input	1600 W
Noise level	max. 90 dB(A)
Time of continuous operation (KB)	max. 120 sec.
	Double or reinforced insulation

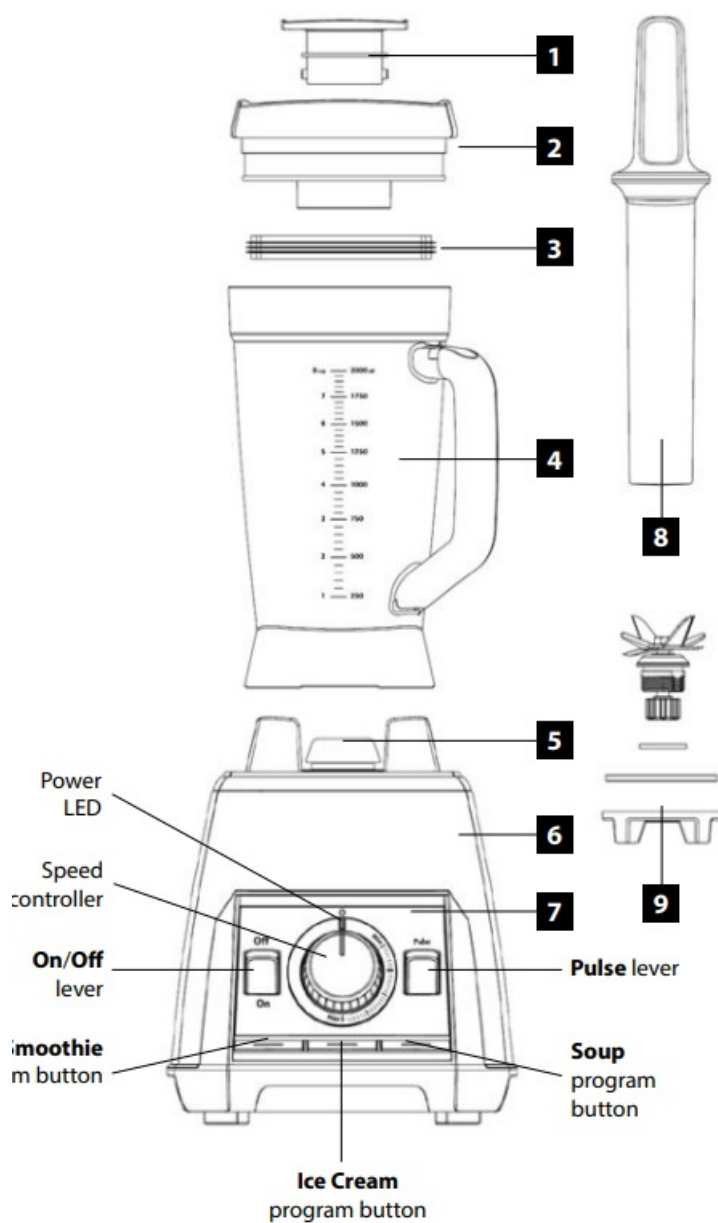
IMPORTANT SAFETY INSTRUCTIONS

- Use the unit only as described in this operating manual.
- Remove all the covering and marketing materials from the unit before the first use.
- Make sure the mains voltage matches the value marked on the rating plate.
- Close supervision is necessary when the unit is on or plugged into the socket.
- Put the appliance on a flat, steady surface; do not put it on other appliances.
- Do not place the appliance close to flammable substances, fire, heating bodies or a hot oven.
- Do not cover the appliance. There is a risk of overheating.
- Do not put anything on the unit during operation.
- Never carry the unit during operation.
- Keep the unit clean; prevent debris or other foreign bodies from entering the openings of the unit body .

Contaminants may short out the unit, causing damage or fire.

- Never pull the cord to disconnect the plug from the socket; hold the plug instead.
- Do not allow children or unskilled people to handle the unit. Use the unit out of the reach of these individuals.
- The appliance is not intended for use by people with reduced physical, sensory or mental capabilities or lack of knowledge, unless under the supervision of an acquainted person responsible for their safety.
- Pay the utmost attention when using the unit close to children.
- Do not use the appliance as a toy.
- Make sure the power cord does not hang over the working area, to prevent children from reaching it.
- The appliance is intended for interior use only; do not expose it to moisture. Otherwise, a risk of electrical shock may occur.
- Use manufacturer-recommended accessories only.
- Never use the appliance if the supply cord or plug is damaged. Immediately refer to an authorised service centre for repair.
- Never pull the supply cord or use it to carry the unit.
- Keep the appliance away from any other heat sources such as radiators, ovens etc. Do not expose the unit to direct sunlight or moisture.
- Never operate the appliance with wet hands.
- Turn off the product and disconnect the plug from the mains outlet before installing accessories, performing maintenance, or in the case of any failure.
- Do not touch the moving parts during operation of the unit. Wait until it stops completely.
- The appliance is intended for domestic use only, not for commercial use.
- Do not immerse the power cord, plug, or appliance in water or any other liquid.
- Check the appliance and power cord for damage regularly. Never switch on a damaged appliance.
- Prevent loose hair and garments from hanging close to the openings and moving parts of the appliance.
- Before plugging the unit in or unplugging it from the wall outlet, make sure the switch is Off.
- Always take extra care when handling the blades and slicers. They are very sharp and could cause an injury.
- Turn the unit off, disconnect the power cord from the wall outlet, and allow the unit to cool before cleaning.
- The unit contains sharp parts. Extra care should be taken while cleaning the unit.
- Do not let the power cord hang loosely over the edge of the work area. Make sure the power cord does not touch hot surfaces.
- Do not let the unit hang loosely on the power cord.
- Do not use the unit without correctly mounted accessories.
- Do not let the appliance run when empty.
- Do not repair the appliance yourself. Refer to an authorised service centre instead.
- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. This appliance may be cleaned by children 8 years of age and older if they are properly supervised. Keep this appliance and the power cord out of reach of children younger than 8 years of age

PRODUCT DESCRIPTION



1. Measure
2. Lid
3. Lid sealing
4. Vessel
5. Motor shaft
6. Base
7. Control panel
8. Tamper
9. Knives

CONTROL PANEL

On/Off lever

This lever switches the blender into the operating (On position) or off (Off position) state. After putting the blender into the operating state (On position), the power LED and the Smoothie, Ice Cream, and Soup button indicators will light up.

Important: To make your blender work, the On/Off lever must be in the On position. “Pulse” lever – Pulse function

After pressing the Pulse lever downwards, the blender works in the pulse mode.

The pulse function is interrupted by releasing the lever.

Rotary speed controller

This controller has two basic positions: O and Continuous Speed Control.

Use this controller to control the speed continuously as needed.

To switch the blender at low speed, turn the controller to the Min position.

To switch the blender at high speed, turn the controller continuously as needed up to the Max position.

Preset programs

The control panel of the blender contains three buttons with preset automatic functions Smoothie, Ice Cream, and Soup.

Smoothie button – Preparation of smoothies and cocktails

The blender works automatically in this program; the speed increases and decreases gradually.

The On/Off lever must be in the On position and the speed controller in the O position. After pressing the Smoothie button, the blender starts working: first it blends the ingredients three times in pulses and then it slowly increases and decreases the speed to achieve perfect mixing. After 30 seconds, the blender switches off automatically.

This program can be cancelled anytime during the operation by pressing the Smoothie button.

In case of insufficient mixing, repeat this function as described above.

Ice Cream button – Preparation of ice cream or crushed ice

The blender works automatically in this program; the speed increases gradually up to the maximum.

The On/Off lever must be in the On position and the speed controller in the O position. After pressing the Ice Cream button, the blender starts working: first it blends the ingredients three times in pulses and then it slowly increases the speed up to the maximum. After 30 seconds, the blender switches off automatically. This program can be cancelled anytime during the operation by pressing the Ice Cream button.

To achieve perfect mixing of the ingredients, use the enclosed tamper to keep blending the ingredients throughout the preparation of ice cream.

In case of insufficient mixing, repeat this function as described above.

Soup button – Preparation of Soups

The blender works automatically in this program; the speed increases and decreases gradually.

The On/Off lever must be in the On position and the speed controller in the O position. After pressing

the Soup button, the blender starts working: first it blends the ingredients six times in pulses and then it increases and decreases the speed to achieve perfect mixing. After 30 seconds, the blender switches off automatically.

This program can be cancelled anytime during the operation by pressing the Soup button.

In case of insufficient mixing, repeat this function as described above.

PLEASE NOTE:

By turning the rotary speed controller while an automatic Smoothie, Ice Cream or Soup program is running, the selected program is cancelled and the blender switches to the Continuous Speed Control mode.

OPERATING INSTRUCTIONS

CAUTION

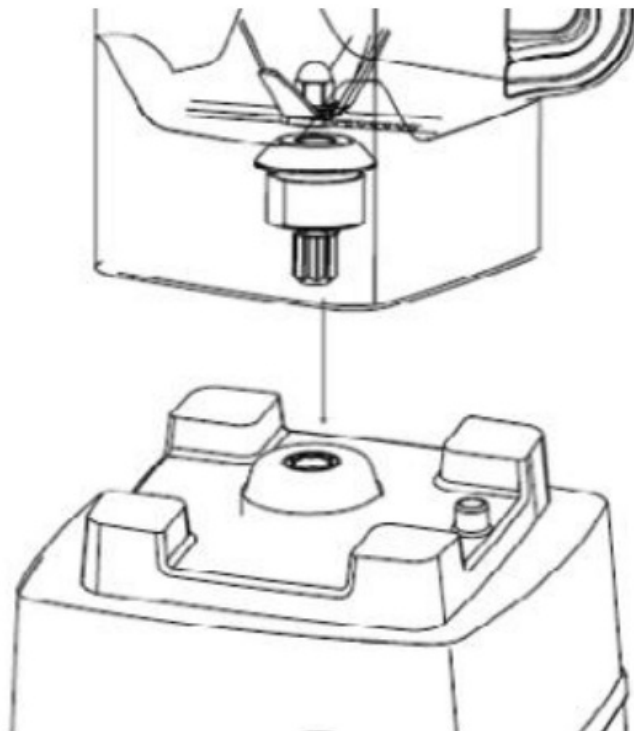
Prior to using a new unit, wipe the surface with a wet cloth and wash the removable accessories in warm water due to hygienic reasons.

The unit has a built-in safety catch. The motor can be switched on only if the accessories are properly mounted. Do not bypass the safety mechanism!

Never leave the appliance unattended while it is running or connected to the mains.

Some parts may keep moving for a while immediately after the motor has been switched off and the power cord disconnected from the socket. Wait until the accessories stop completely and only then open the lid.

Using your blender



1. Place the Jar onto Blender Motor Base. Before operation, recheck the Jar base is fixed well on the blender Motor Base or not. If not, adjust a little bit direction of driving shaft of Blade under Jar base for a easy insert into Motor Driver Gear of Blender Motor Base.

2. Put the ingredient into Jar and then cover the lid back
3. Plug into the power source
4. Settle Mode or Stepless Speed SWITCH controls to start the processing.
Note: Blender only works when the switch knob is started from O/off position. If blender could not work, please turn the knob back to O/off position.
5. Ingredient could be added into Jar through Small cup in the lid
6. Take away the Jar from Blender Motor Base only when the motor is stop.

WARNING

Hot food mixes at the lowest speed, if necessary, add speed. Do not use smoothie, there is a risk of splashing hot liquid from the container and scalding.

NOTICE

This smoothie blender is equipped with overload protection to ensure longer service life of the motor. If the blender shuts down during the operation, do the following:




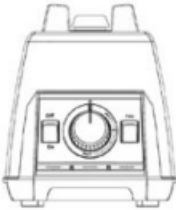











- Switch off the blender using the On/Off lever and let it cool down for approximately 15-20 minutes.
- Remove the vessel from the base and place it out of the base.
- Disconnect the power supply cable from the wall outlet.
- Turn the base upside down and press the PRESS TO RESET button located near the power supply cable output (see Fig. 1).
- If the PRESS TO RESET button cannot be pressed in, let the blender cool down for approximately 20 more minutes and then try to press the button again.
- Turn the base back into the original position, plug the power supply cable in the wall outlet, place the vessel back onto the base, and continue blending.

 CLEANING AND MAINTENANCE




Figure 1

1. Before cleaning remove the power cord from the socket.
2. Never immerse the housing with motor in water!
3. Do not use any sharp or abrasive detergents.
4. Only a damp rinsing cloth should be used to clean the outside of the housing.
5. Components that have come into contact with food can be cleaned in soapy water.
6. Allow the parts to dry thoroughly before reassembling the device.









			
			✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓

Documents / Resources

<p>concept</p> <p> Stavba domu Stavba domu Blender Blender Blender Blender </p>  <p>CE SK PL DE FR EN SE</p>	<p>concept SM 8000 Smoothie Blender 1600 W [pdf] Instruction Manual SM 8000, Smoothie Blender 1600 W, Blender 1600 W, SM 8000, Blender</p>
---	---

References

- [Concept – chytré vymyšleno pro život](#)

-  [Domena Concept.pl jest na sprzedaż - SklepDomeny.pl](#)
-  [Luxury Architecture, Concept Architects, Bratislava](#)
-  [Concept](#)
-  [Concept](#)
-  [Concept – chytré vymyšleno pro život](#)
-  [Concept innowacje w Twoim życiu!](#)
-  [www.my-concept.sk | vymyslené pre život](#)
-  [Verners](#)

Manuals+.