

concept SM4000 Smoothie Mixer



## concept SM4000 Smoothie Mixer Instruction Manual

[Home](#) » [concept](#) » concept SM4000 Smoothie Mixer Instruction Manual 

### Contents

- 1 [concept SM4000 Smoothie Mixer](#)
- 2 [Product Specifications](#)
- 3 [Product Usage Instructions](#)
- 4 [IMPORTANT SAFETY PRECAUTIONS](#)
- 5 [PRODUCT DESCRIPTION](#)
- 6 [OPERATING INSTRUCTIONS](#)
- 7 [OPERATION](#)
- 8 [Frequently Asked Questions](#)
- 9 [Documents / Resources](#)
  - 9.1 [References](#)

# concept!

concept SM4000 Smoothie Mixer



## Product Specifications

- Input: 5V DC
- Power: 315W
- Noise Level: 80dB(A)
- Battery: 6,000mAh
- Charging Time: 4 hours
- Operating Time: 40 cycles of 20 seconds each

## Product Usage Instructions

1. Ensure the blender jar is properly placed; the display will show "88" at the base.
2. Double press the power on/off button to turn on the device. It will automatically turn off after 20 seconds if the engine is not running.
3. Remember: The device has a safety lock. It will not operate without the jar properly placed.

4. The device is equipped with overheat protection.

Thank you for purchasing a Concept product. We wish you much joy with your new appliance every day you use it. Please read the instruction manual carefully before initial use. To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

## **IMPORTANT SAFETY PRECAUTIONS**

- Do not use the appliance in any other way than as described in this manual.
- Remove all the covering and marketing materials from the appliance before the first use.
- Make sure the mains voltage corresponds to the values on the rating plate of the appliance.
- Do not leave the appliance unattended when it is switched on.
- Place the appliance on a stable, level surface, do not place it on any other appliance.
- Do not place the appliance near flammable substances, fire, heating elements or hot oven.
- Do not cover the appliance, there is a risk of overheating.
- Do not place anything on the appliance during operation.
- Do not carry the appliance when it is switched on.
- Keep the appliance clean, do not allow foreign objects to enter the grid openings. It could cause short circuit, damage to the appliance or cause fire.
- Do not use the charging adapter with a damaged power cord or plug, have the defect repaired immediately by an authorized service by an authorized service center.
- Do not allow children or unauthorized people to handle the appliance, use it out of their reach. Persons with reduced mobility, reduced sensory perception, mental disadvantage or persons not familiar with the operation must use the appliance only under the supervision of responsible person, who is familiar with the instructions.
- Pay extra attention if the appliance is used near children.
- Do not use the appliance as a toy.
- Do not throw the appliance battery into a fire or expose it to temperatures above 40 °C.
- Do not use the appliance outdoors or on a wet surface, there is a risk of electric shock.
- Do not use any accessories other than those recommended by the manufacturer.
- Do not use the appliance with a damaged cord or plug and have it repaired immediately by an authorized service centre.
- Keep the appliance away from heat sources such as radiators, ovens, etc. Protect it from direct sunlight and humidity.
- When installing accessories, cleaning and maintenance or in the event of a malfunction, switch off the appliance and disconnect the plug from the electrical outlet.
- Do not touch moving parts while the appliance is in operation. Wait until it stops completely.
- The appliance is only suitable for home use and is not intended for commercial use.
- Check the appliance and the power cord for damage regularly. Never switch on a damaged appliance.
- Do not let hair and clothing hang loose near openings and moving parts of the appliance.
- Always exercise caution when handling blades and cutting discs. They are very sharp and can cause injury.
- Before cleaning and after use of the appliance, switch the appliance off, disconnect it from the mains and allow it to cool down.
- The appliance contains sharp parts. Exercise caution when cleaning.
- Do not use the appliance without properly fitted accessories.

- Do not let the appliance run idle.
- Do not repair the appliance yourself. Contact an authorized service centre.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Cleaning and maintenance performed by the user must not be carried out by children unless they are 8 years old and under supervision. Children aged under 8 years of age must be kept away from the appliance and its power cord. Do not let children play with the appliance. Damages from failure to follow the manufacturer's instructions are not covered by the warranty.

## PRODUCT DESCRIPTION



1. Blender container
2. Blender blades
3. Product base
4. Lid with opening
5. Lid
6. Appliance display
7. ON/OFF button
8. Charging cable

## OPERATING INSTRUCTIONS

### NOTICE

Before putting a new appliance into operation, you should wipe it thoroughly from the outside with a damp cloth and wash all removable parts in warm water for hygienic reasons. The appliance has a built-in safety fuse. The appliance motor can only be switched on if the accessories are properly fitted. Do not bypass the safety

mechanism! Never leave the appliance unattended while in operation or switched off. Immediately after switching off the engine, some parts may still move for a while. Wait until the accessory has completely stopped before opening the lid.

## **OPERATION**

1. Place the food in the container and place the lid on the blender container (the recommended size of inserted food is 2 x 2 x 2 cm). Gently press on the lid so it is sealed perfectly.
2. Place the container on the blender and turn clockwise. Before putting the appliance into operation, check that the container is correctly seated in display will show "88" on the base.
3. Remove the container from the motor base by turning the jar anticlockwise only if the motor is not running

**Note:** The appliance is equipped with a safety fuse. It will not work without properly fitted jar. The appliance is equipped with protection against overheating.

## **CLEANING AND MAINTENANCE**

1. Do not use any sharp or abrasive cleaners.
2. Clean only the outside of the blender and use only a damp cloth.
3. Before reassembling, let all the parts dry thoroughly.

## **SERVICE CENTRE**

Extensive maintenance or repair, which requires access to internal parts of the product, has to be performed by a qualified specialist or the service centre.

## **ENVIRONMENTAL CONCERNS**

1. Packaging materials and old appliances should be recycled.
2. Packaging materials may be disposed of as sorted waste.
3. Dispose the plastic bags made of polyethylene (PE) of as sorted waste

## **Recycling of the appliance at the end of its lifespan**

This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (Waste Electrical and Electronic Equipment – WEEE). The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The disposal of such material has to be done according to the recycling regulations. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the appliance. The product meets all the necessary requirements of the EU directives applicable to the specific product.

Changes in text, design, and technical specifications are subject to change without prior notice and we reserve the right to change them.

## **Frequently Asked Questions**

### **Q: How should I clean and maintain the product?**

A: More complex maintenance or repairs requiring internal intervention should be performed by a qualified specialist or service center.


**Q: Does the product comply with environmental regulations?**

A: The product meets all relevant basic requirements imposed by EU directives. Text, appearance, and technical specifications are subject to change without prior notice.

**Q: What safety precautions should I follow while using the product?**

A: Before using the new device, clean the surface and removable parts thoroughly. The device has a safety mechanism; only start the motor if it is correctly set up. Do not tamper with the safety mechanism and never leave the device unattended while in operation or when it is turned on.

**Documents / Resources**

	<p><a href="#">concept SM4000 Smoothie Mixer</a> [pdf] Instruction Manual</p> <p>SM4000, SM4001, SM4002, SM4003, SM4000 Smoothie Mixer, SM4000, Smoothie Mixer, Mixer</p>
---	---

**References**

- [User Manual](#)

**Manuals+, Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.