



concept SR3140 Hand Whisk Instruction Manual

[Home](#) » [concept](#) » **concept SR3140 Hand Whisk Instruction Manual** 

Contents

- [1 concept SR3140 Hand Whisk Instruction Manual](#)
- [2 ACKNOWLEDGMENT](#)
- [3 IMPORTANT SAFETY PRECAUTIONS](#)
- [4 • Do not immerse the supply cable, the plug or the appliance itself into water or any other liquid.](#)
- [5 Failure to follow the manufacturer's instructions may lead to refusal of warranty repair.](#)
- [6 PRODUCT DESCRIPTION](#)
- [7 OPERATING INSTRUCTIONS](#)
- [8 CAUTION](#)
- [9 Whipping whisks and mixing hooks](#)
- [10 Warning! Insert the whisk or mixing hook with the ring into the marked hole \(Fig. 1\).](#)
- [11 CLEANING AND MAINTENANCE](#)
- [12 TROUBLESHOOTING](#)
- [13 SERVICING](#)
- [14 ENVIRONMENTAL PROTECTION](#)
- [15 Appliance recycling at the end of its service life:](#)
- [16 Read More About This Manual & Download PDF:](#)
- [17 Documents / Resources](#)
 - [17.1 References](#)
- [18 Related Posts](#)

concept SR3140 Hand Whisk Instruction Manual



ACKNOWLEDGMENT

Thank you for purchasing a Concept product. We hope you will be satisfied with our product throughout its service life.

Please study the entire Operating Manual carefully before you start using the product. Keep the manual in a safe place for future reference. Make sure other people using the product are familiar with these instructions.

Technical parameters	
Voltage	220–240V ~ 50/60 Hz
Power input	300 W
Noise level	< 85 dB(A)
Maximum operation time	whipping/mixing (speed 1–5) – maximum 5 min.

IMPORTANT SAFETY PRECAUTIONS

- Do not use this appliance in a way that differs from the instructions in this
- Remove all packaging and marketing materials from the appliance before you use it for the first
- Make sure that the connecting voltage corresponds to the values on the appliance type
- Do not leave the appliance unattended when turned on or plugged into the electric

- When the appliance is not being used, disconnect the appliance from the electrical
- Never pull the supply cable when disconnecting the appliance from the electrical socket; pull the plug
- Do not allow children or irresponsible people to handle the Use the appliance out of the reach of these people
- People with limited movement capacity, reduced sensory perception, insufficient mental capacity or those who are unaware of the proper handling should use the product only under the supervision of a responsible person acquainted with these
- Pay the utmost attention when using the unit close to
- Do not let anyone use the appliance as a
- To prevent children from reaching the power cord, make sure it does not hang over the edge of the working
- Do not use the appliance outdoors or on wet surfaces as there is a threat of electric shock in these
- Do not use any other accessories except those recommended by the
- Never use the appliance if the supply cable or plug has been damaged; have the defect repaired immediately by an authorised service
- Never pull the supply power cord or use it to carry the
- Keep the appliance away from heat sources (such as radiators, ovens,). Protect the appliance from direct sunlight and moisture.
- Do not touch the appliance with moist or wet
- Before fixing any accessories, cleaning or in the case of a defect, turn off the appliance and pull the plug out of the electrical
- The appliance is intended for household use only (not for commercial use).

• Do not immerse the supply cable, the plug or the appliance itself into water or any other liquid.

- Regularly check the appliance and the supply cable for any Never turn the appliance on if it is damaged.
- Do not touch the moving parts of the appliance during operation.
- Keep your hair, fingers and clothing out of reach of the moving parts during operation.
- Be careful when handling the extensions, as the blades are very sharp and may cause injury.
- The accessories shall not be used in a microwave oven.
- Some parts may keep moving for a while immediately after the motor has been switched off and the power cord has
- been disconnected from the socket. Wait until the movement stops completely.
- Use the unit solely for food processing.
- The maximum allowed temperature of the processed food is 80°C. Do not use the beater for very hot food!
- Never repair the appliance by yourself. Contact an authorised service centre.
- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Children must not play with the appliance. This appliance may be cleaned by children 8 years of age and older if they are properly supervised. Keep this appliance and the power cord out of reach of children younger than 8 years of age.

Failure to follow the manufacturer's instructions may lead to refusal of warranty repair.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental

capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

1

2. Children should be supervised to ensure that they do not play with the appliance.




Accessories

- A Whipping whisks
- B Mixing hooks

PRODUCT DESCRIPTION

1. Extension release button
2. Speed selector
3. TURBO button
4. Unit body
5. Lock button of whipper
6. rotating bowl
7. Locking button of stand
8. Body of stand

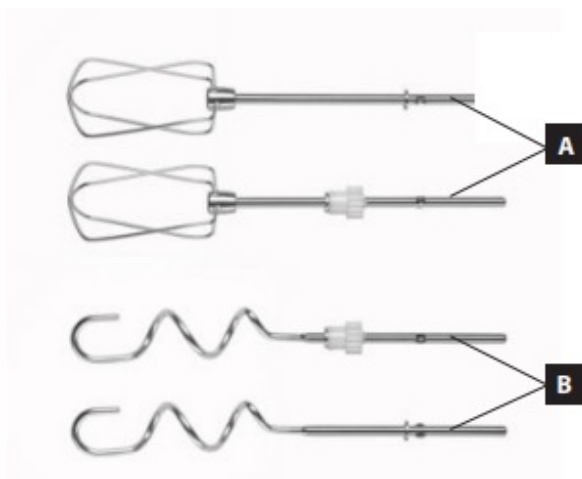

OPERATING INSTRUCTIONS

CAUTION

Before fixing or removing accessories, always pull the plug out of the electrical socket!

Prior to using a new unit, wipe the surface with a wet cloth and wash the removable accessories in warm water for hygienic reasons.

Never use different extensions simultaneously!

Whipping whisks and mixing hooks

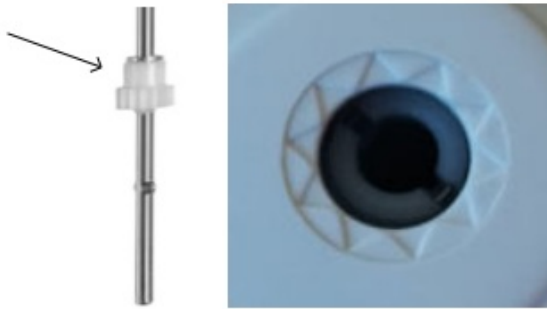


Fig. 1

The whipping whisks are designed to whip mousse, cream, and egg yolks, and prepare toppings or thin batter for omelettes and pancakes. The mixing hooks are designed for thicker batter, gingerbread or yeast dough, etc.

The maximum time of continuous operation (KB) is 5 minutes for speeds 1–5. Let the unit cool down for at least 15 minutes afterwards.

- Insert the whipping whisks or mixing hooks into the holes in the lower part of the unit and turn them slightly to fix them

Warning! Insert the whisk or mixing hook with the ring into the marked hole (Fig. 1).

2. Unwind the entire supply. Make sure it does not touch any nearby sources of heat. Insert the plug into the electric voltage outlet.
3. Hold the appliance body with one hand and the whipping/mixing container with the other.
4. Insert the whisks/mixing hooks into the container with the food and select the required speed.
5. Switch off the unit after whipping/mixing. Disconnect the cable from the power outlet.
6. Release the whipping whisks or mixing hooks using the extension release button and rinse them immediately with warm water.

Stand with rotating bowl

FPS XIJQQFE BOE NJYJOH XJUI TUBOE BOE SPUBUJOH CPXM BQQMJBODF ZPV DPVME OPU FWFS
IPME JO ZPVS IBOE. 1MBDF UIF TUBOE CPEZ (8) PO B GMBU XPSL TVSGBDF.

6OJU CPEZ (4) BUUBDI BU UIF CPEZ PG TUBOE (8), (ZPV XJMM IFBS BO BVEJCMF DMJDL EFUFOU
CVUUPU PG XIJQQFS (5))

4UBOE XJUI VOJU CPEZ (4) PQFO CZ LPDLJOH CVUUPU PG TUBOE (7). 1MBDF UIF BDDFTTPSJFT
TFMFDUFE A PS B JO UIF PQFOJOH PG UIF BQQMJBODF BOE QFEFTUBM XJUI MPDLJOH CVUUPU PG

TUBOE (7) UP SFUVSO UIF BQQMJBODF CPEZ JO JUT PSJHJOBM QPTJUIPO.
Now you can set the desired speed 1 to 5. AGUFS NJYJOH UIF BQQMJBODF PGG. 6OQMVH UIF QPXFS
DPSE BOE BDDFTTPSJFT VOEFS XBSN SVOOJOH XBUFS JNNFEJBUFMZ SJOTF (TFF QBSBHSBQI
DMFBOJOH BOE NBJOUFOBODF).

CLEANING AND MAINTENANCE

Turn off the unit and disconnect the power cord from the wall outlet before cleaning and after use. Clean the appliance body with a wet cloth.
Do not use steel wool, abrasive agents or solvents to clean the unit.
Wash the whisks and hooks in tepid water with detergent and rinse in clean water; you may use a dishwasher.

TROUBLESHOOTING

	Problem	Cause	Solution
The motor is not running.		The plug is inserted into the socket incorrectly or insufficiently.	Check the plug connection.
		The socket is not receiving electricity.	Check for voltage, e.g. by connecting a different appliance.
The motor has stopped working.		The motor is overloaded, the heat fuse has been activated.	Disconnect the power supply cable from the socket. Check and clear the air passage at the inlet/outlet grills. Let the unit cool.

SERVICING

Any extensive maintenance or repair requiring access to the inner parts of the product must be performed by an expert service centre.

ENVIRONMENTAL PROTECTION

- Packaging materials and obsolete appliances should be
- The transport box may be disposed of as sorted
- Polyethylene bags shall be handed over for

Appliance recycling at the end of its service life:



A symbol on the product or its packaging indicates that this product should not go into household waste. It must be taken to the collection point of an electric and electronic equipment recycling facility. By making sure this product is disposed of properly, you will help prevent the negative effects on the environment and human health that would otherwise result from inappropriate disposal of this product. You can learn more about recycling this product from your local authorities, a household waste disposal service or in the shop where you bought this product.

Read More About This Manual & Download PDF:

Documents / Resources

	concept SR3140 Hand Whisk [pdf] Instruction Manual SR3140 Hand Whisk, Hand Whisk, SR3140 Whisk, Whisk, SR3140
--	----------------------------------------------------------------------------------------------------------------------------------

References

- [concept.com](#)
- [Concept – chytré vymyšleno pro život](#)
- [Domena Concept.pl jest na sprzedaż - SklepDomeny.pl](#)
- [Luxury Architecture, Concept Architects, Bratislava](#)
- [Concept](#)
- [Online software pre autoservis | servis.sk](#)
- [Tech.sk | Všetko o informačných technológiáchTech.sk | Magazín o internete a technológiách](#)
- [my](#)
- [Concept](#)
- [Concept – chytré vymyšleno pro život](#)
- [Concept innowacje w Twoim życiu!](#)
- [www.my-concept.sk | vymyslené pre život](#)
- [Verners](#)