



CONLAN C1000LP Low Power Keypad User Manual

[Home](#) » [CONLAN](#) » CONLAN C1000LP Low Power Keypad User Manual 

CONLAN

C1000LP

Art. No.: 480005 (black), 480006 (white)

User Manual



C1000LP_usermanual_ENGmar20

Contents

- 1 Introduction
- 2 Installation
- 3 Programming users
- 4 Battery management
- 5 Configuration of C1000LP
- 6 Blocking
- 7 Manual reset
- 8 Technical specifications
- 9 One time-, day- and period codes
- 10 Free locker
- 11 Documents / Resources
 - 11.1 References

Introduction

C1000LP is a low power keypad that works on electronic locks with open collector or H-Bridge mode.

In standby mode is the yellow LED is lit (● ○ ○)

By correct code lights yellow and green LED (● ● ○)

By incorrect code lights the red LED (○ ○ ●)


C1000LP has a buzzer for indicating while keying, correct code, incorrect etc. and 2 transistor outputs, independent from each other, so the C1000LP can give access by code.

The C1000LP is a stand alone unit, the can be programmed directly by Master code and Service code.

Installation

Mount the reader on a even surface.

Connect the wires to power supply, door strike etc. (use supplied diode)

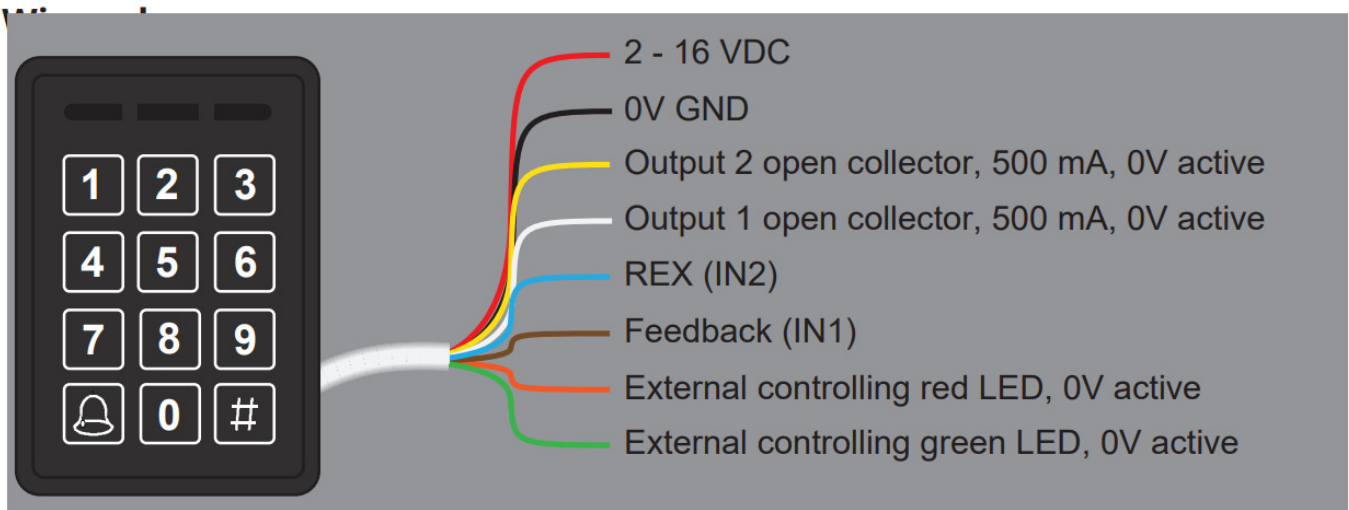

Note: Right after applying the voltage all LED's lights and the buzzer sounds **do not** touch the reader until the yellow LED lights and the buzzer is silent.

Programming users

Programming the C1000LP is simple and easy to understand.

3.1 User positions

C1000LP has 200 user positions, which can contain a code. The positions are divided as following:


User position 1 – 100	Function
101 – 150	Activates output 2 (The code
151 – 190	Activates output 1
191 – 200	Activates output 1 and 2
	Reserved for special function

3.2 Programming user codes

The Master code is used to program/change/delete the users. By default the Master code is 4711.

LED indication: No light: ○ Lit: ● Flash: ✱ Clear buffer: *

New users

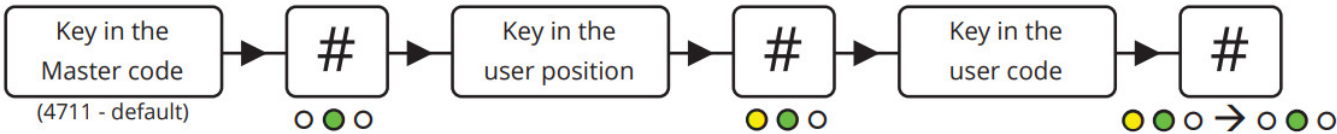


To program more users, continue from “Key in the user position” or press to exit.


Changing codes

It's the same procedure as programming new users, just overwrite the user position.

Delete specific users

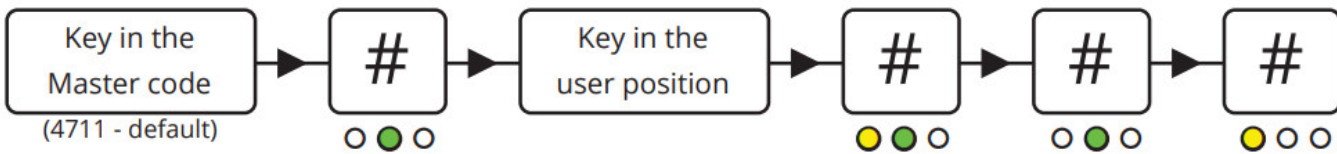

Delete all users

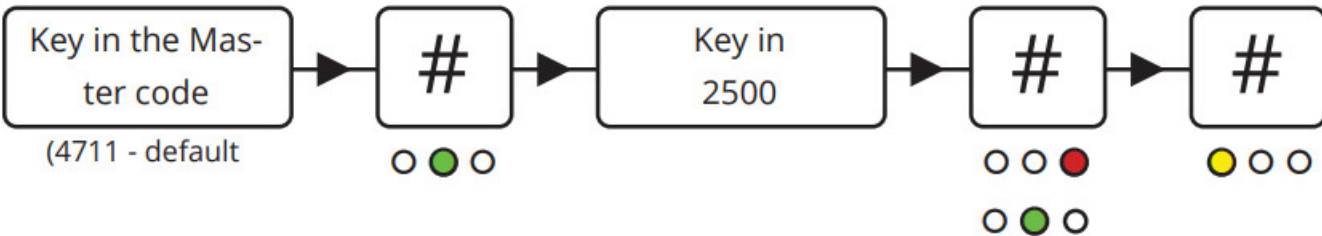

3.3 Programming codes for special functions

Programming the codes is described in 3.2 and 3.3. This entry activates the output(s) for 5 seconds (factory setting). Only 1 user can enter at the time.

Programming the same user twice

By programming the same code on the same position twice toggles the output. (I.e.. the code is entered to unlock the door and entered to lock it again).

Programming the same user 3 times


By programming the same code on the same position 3 times, the output is designated as switch on only. (I.e.. the door is permanently unlocked when the code is entered).

Programming the same user 4 times

By programming the same code on the same position 4 times, the output is designated as switch off only. (I.e.. the door is only locked when the code is entered).

3.4 Smart enrolling

This position makes it possible to program codes quicker without entering new positions. Key in a position and it counts automatically to the next position. Codes can be programmed alternatively as you see fit.

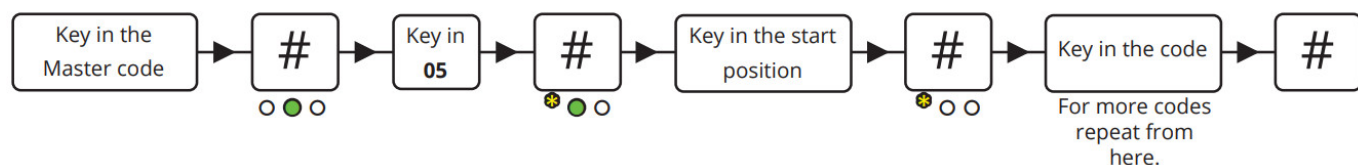


Note: This programming mode overwrites existing positions.


Battery management

Gives a warning before opening the door, when the battery is at approx. 10% charge. Preset Battery low warning (1#):

Position	Select chemistry	Series cell count
0 1	Disable	(0,95V) 3-10 cells
2	Alkaline 1,5V	(2,3V) 1-5 cells
3	Lithium 3V	(3,37V) 1-4 cells
4	Li-poly/Li-ion 3, 7V	(1,95V) 2-7 cells
	Lead Acid 2, 1V	

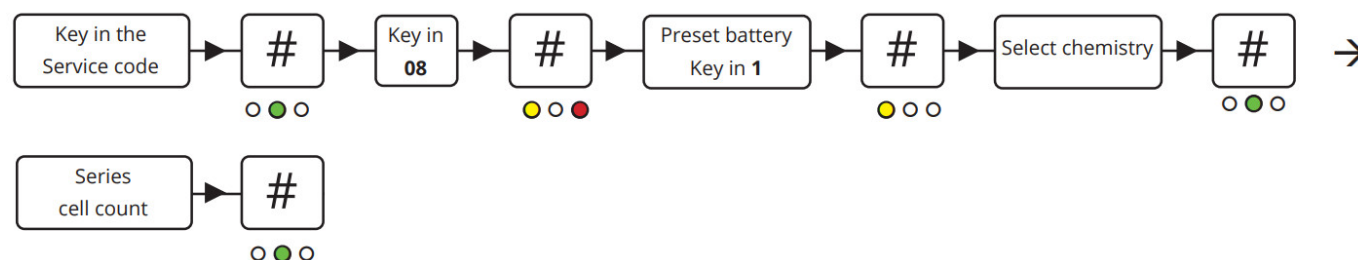


Here is an example of how you preset the battery when having a 12V Lead Acid with 6 cells. See following instructions.

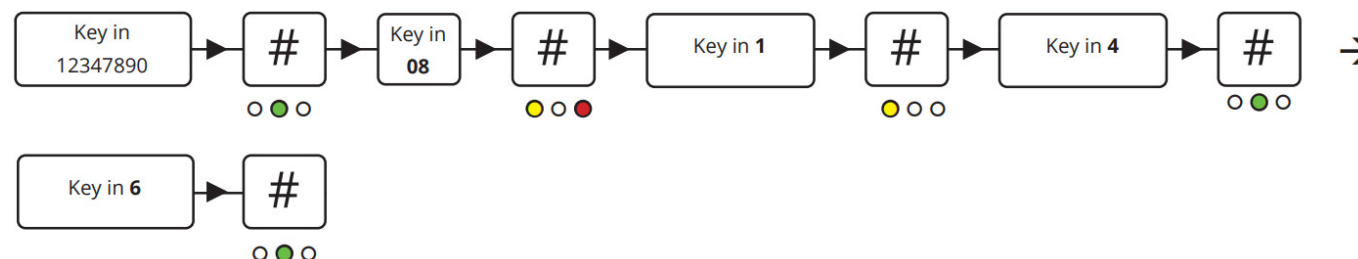


Custom battery low warning (2#):

If you do not have any of the mentioned battery types, you can customize your battery size. See following instructions.

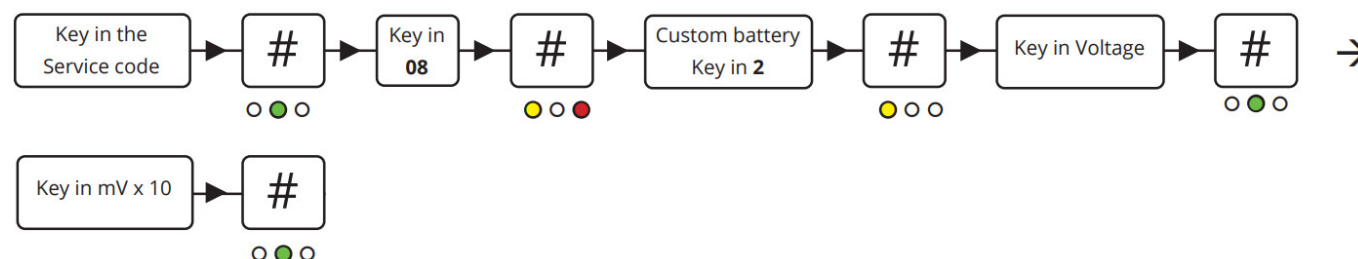

Here is an example of how you preset the customized battery low warning. In this example we want the battery to send a warning at 10,8V.

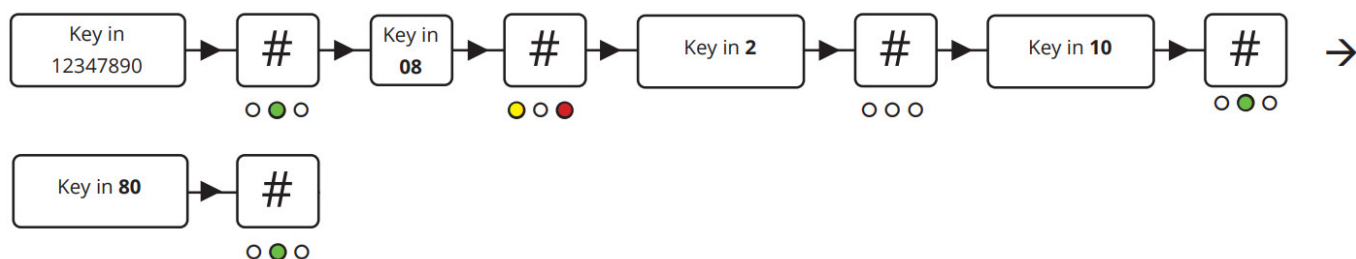

When the battery is running low it will give you a warning when you type in your user code. The red LED will flash while the buzzer beeps for about 3 seconds. The output is hereafter activated.

Configuration of C1000LP

5.1 The Service code

The Service code is used for C1000LP's advanced settings such as changing the Master code and Service code, LED indications and much more. The overview of the settings and the factory settings can be seen in 4.2 Configuration overview.

The Service code is 12347890 (factory setting).

Note: Before the Service code can be used must the voltage be turned OFF and ON (the Service code can now be entered within 10 seconds).

After entering the Service code the reader is in programming mode (the green LED lights). Each time a setting is made the C1000LP goes back to the previous point and the next setting can be made.


The navigation is by entering the position/ value followed by #.

5.2 Configuration overview

Position	Setting	
00	Master code (1 to 8 digits)	
01	Service code (1 to 8 digits)	
02	LED indications	
03	Output setup	
04	Special functions	
05	Smart enrolling	
06	Input setup	
07	Time	
08	Battery management	
09	Locker reserve time	
2500	All codes on the user positions are deleted	
0250	Reset to factory default	
		Factory d
		4711
		12347890
		Normal = `
		Output tim

5.3 Changing the Master code

 
By default the Master code is **4711** and can only be used to program, change or delete users on the C1000LP. To change the Master code, enter the following:



5.4 Changing the Service code

The Service code is used to configure the C1000LP's settings.

 To change the Service code, enter the following within 10 seconds after power on:



5.5 LED indications

The C1000LP's 3 LED's can be adjusted at will.

To adjust the LED indications enter the following:

	adjust the LED's for standby indication (normal).
	adjust the LED's for correct code indication (active).
	adjust the keying indication (how the LED will react while keying).

To adjust the LED's press on the following:

1 = yellow LED (toggle by press)

2 = green LED (toggle by press)

3 = red LED (toggle by press)

0 = buzzer (works only on active and keying indication (toggle by press))


= save and go one step back

To save the settings press or press to go back to the previous point (not saving).

5.6 Output setup

The C1000LP has 2 outputs that can be set to H-Bridge output or open collector output. By default is the C1000LP set to H-Bridge output with Lock delay in 5 seconds.

To configure the output settings use the following steps:

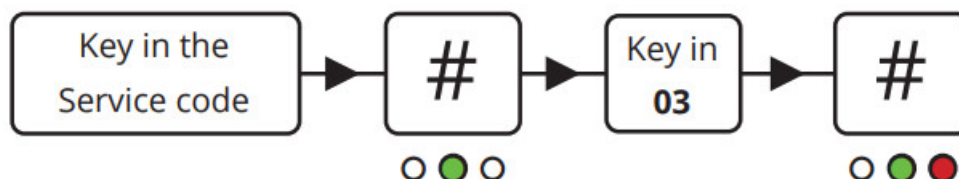

1	sets the output 1 time in Pulse mode or Lock delay
2	sets the output 2 time in Pulse mode or H-Bridge time
3	sets the output 1 active position
4	sets the output 2 active position
5	sets the output functions
6	select the outputs for Decode/onetime code

Please use the configuration scheme under "03" section for correct navigation for OC setup

Note: In time setting for Pulse mode it is in Molise x 10 instead of hours.

5.7 Special settings

These settings is used to change the C1000LP's special functions such as turning the buzzer on/off etc.

To change these settings, key in:

1 = Service code without timeout (● = inactive / ● = active)

2 = Master code be changed by Master code (● = inactive / ● = active)

3 = Mute reader (● = Off / ● = On)

4 = Bell on OC1 (● = Off / ● = On)

5 = Onetime code (● = Off / ● = On)

6 = Day code (● = Off / ● = On)

7 = Locker mode (● = Off / ● = On)

8 = Free locker mode (● = Off / ● = On)

Special positions

User position 191 to 197 can activate special setting 3 to 6 with a code. The programming is the same procedure as programming a user code just use the positions mentioned below:

191 = Toggle buzzer

193 = Reset of free locker

194 = Toggling the star key to activate output 1 (white wire)

195 = Toggle onetime code mode

196 = Toggle Daycode mode

197 = Deactivate the user codes

198 = Seed code

199 = Digit count for one/day code

To save the settings press or press to go back to the previous step (no saving).

Note: In case of power disruption the special functions will go back to the setup made by service code.

Blocking

The C1000LP is blocked for 1 minute after 4 incorrect codes.

LED indication: ○ ○ ●

Manual reset

The C1000LP can be reset to factory default manually.

- Turn the voltage off.
- Connect the yellow and brown wire.
- Turn the voltage on (2 – 16 V DC) the readers LED's lights and the buzzer sounds.
- Turn the voltage off and disconnect the yellow and brown wire.

The C1000LP is now reset to factory default and the user codes are deleted.

Technical specifications

Voltage range:	2 – 16V DC
Mifare reading:	Max. 50 mm
Output:	2x open collector, max. 500mA
Input:	External buzzer/Feedback (brown) and REX
Protection rate:	IP67
Color:	Black or white
Cable:	2,5 meter white, 8 cores
Dimensions (HxWxD):	130x50x8 mm

One time-, day- and period codes


The C1000LP offers 3 advanced code types that can be used either once, for a day or for a specific period. First, the codes must be generated either via the Conlang Code Generator (download available at conlan.eu), via the Conlang Day Code app (available for both Android and iOS), or the website www.conlan.app

First, enter a seed number. This number can be any number between 1 and 99999999.

Then the code length must be indicated. Here it is best to avoid 4 or 8 digits, so that the codes does not intervene with the service- or mastercode. Default code length is set to 6 digits.



Conlang Code Generator for Windows

This is for administration of one time and day codes. After you have pressed enter, a number of one time codes will be shown on the left, the day code at the top, and future day codes via the calendar. All codes can be exported to a file if needed.

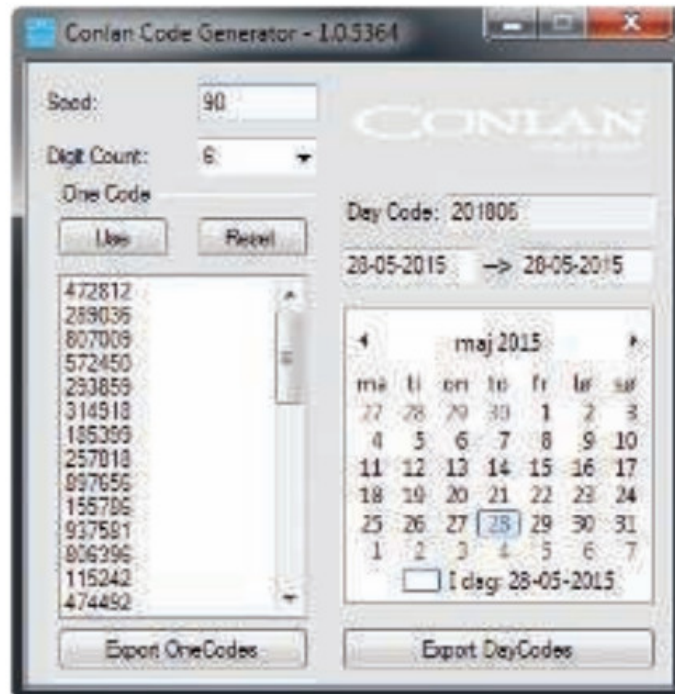

Conlan Day Code app


For administration of day codes. The codes can also be sent out either via SMS or email.

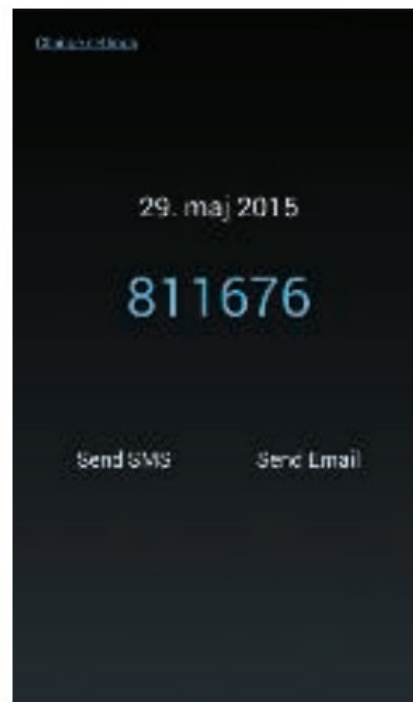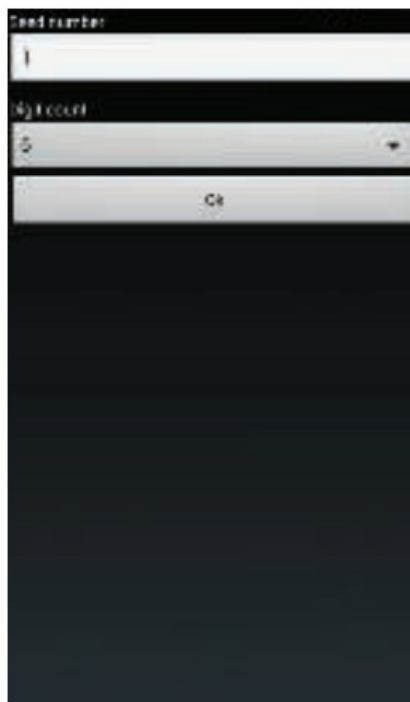


www.conlan.app

Through this website you can administrate both day codes and period codes. Period codes can be set to between 1-28 days. The codes can via the website be sent directly to an email address.

When the information is specified, the C1000LP can be set:

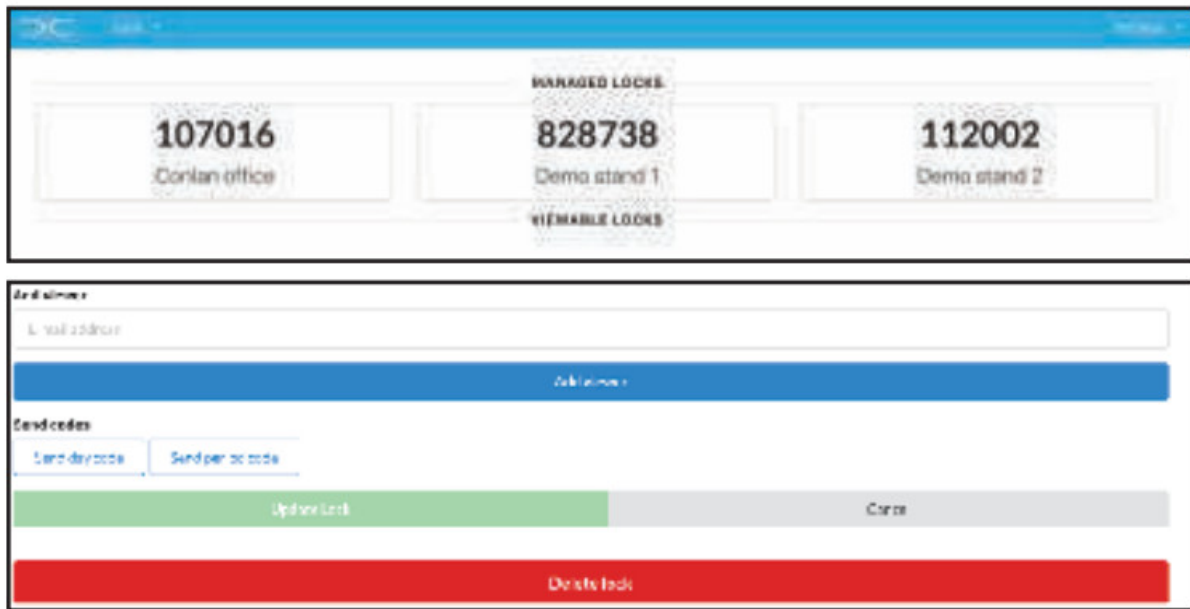


Setting the time

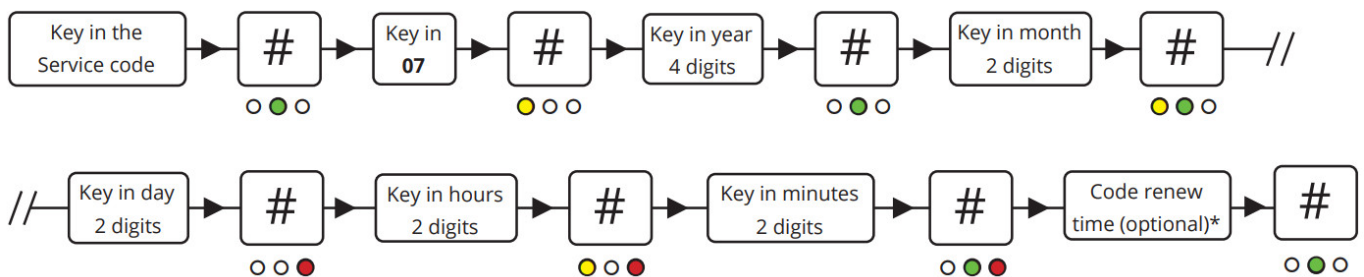

*Code renew time = This is the time on which the one time, day or period codes change to the next day. Default is 00:00. If you don't want to change the default time, simply press #.

Activation of One-time-/day code

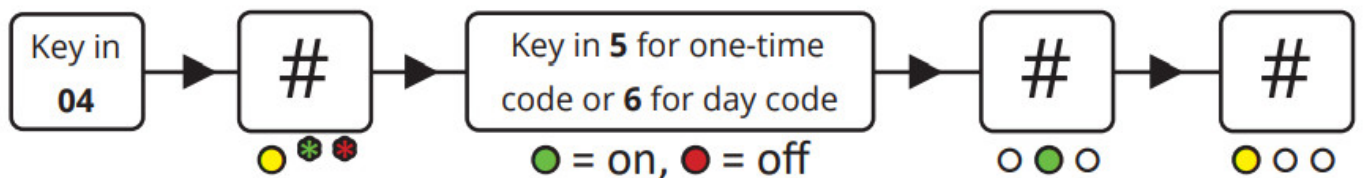

Finally, the reader must know how many digits the one-time-/day codes have and the seed number. This is done in the same way as programming a user code: Position 198 is for seed and position 199 is for digits.

Please note: It is important that the seed number in position 198 is the last to be keyed in. This way all the codes will be generated correctly.

Free locker

The Free locker function can be used for access control, especially for access control where the user often switches.

Function: Key in a code, and if the cabinet is free, it will lock and can only be unlocked with the same code.

The locker reserve time function can be set to between 1-255 minutes. This means that the locker automatically will unlock after a given time. To access this function, please see the provided configuration scheme for the reader under position 09.


Free locker reset

The user position 193 will make a reset of the free locker function. Please see section 5.7 "special positions" in this manual to see line of procedure.

CONLAN

Conlang ApS
Amalienborgvej 15
DK-9400 Nørresundby
Tel: +45 72 40 60 03
www.conlan.dk
info@conlan.dk

Documents / Resources

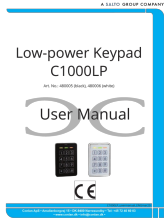	<p>CONLAN C1000LP Low Power Keypad [pdf] User Manual 480005 black, 480006 white, C1000LP, C1000LP Low Power Keypad, Low Power Keypad, Power Keypad, Keypad</p>
---	--

References

- [Digital Access Control Solutions - Conlan Access Security Systems](#)
- [Conlan Digital Adgangskontrol - Adgangskontrolsystemer](#)

Manuals+