



# CONNECT TECH Rogue-X NVIDIA Computer on Module User Guide

[Home](#) » [Connect Tech](#) » **CONNECT TECH Rogue-X NVIDIA Computer on Module User Guide** 

## Contents

- [1 CONNECT TECH Rogue-X NVIDIA Computer on Module](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PREFACE](#)
- [5 Limited Product Warranty](#)
- [6 INTRODUCTION](#)
- [7 Product Features and Specifications](#)
- [8 Part Numbers / Ordering Information](#)
- [9 PRODUCT OVERVIEW](#)
- [10 Connector Summary & Locations](#)
- [11 DETAILED FEATURE DESCRIPTION](#)
- [12 TYPICAL INSTALLATION](#)
- [13 FORCE RECOVERY MODE](#)
- [14 CABLES](#)
- [15 Documents / Resources](#)
  - [15.1 References](#)
- [16 Related Posts](#)

# CONNECT

**CONNECT TECH Rogue-X NVIDIA Computer on Module**



## Product Information

### Specifications

- Model Number: CTIM-00082
- Revision: 0.04
- Date: 2022-12-01
- Manufacturer: Connect Tech

### Product Features and Specifications

The product offers the following features and specifications:

- LED Locations
- Connector and Switch Locations – Module Side
- Push Button Switches
- Typical Installation
- Software
- Force Recovery Mode
- Power Consumption
- Cables
- Mechanical Drawings & Models
- Thermal Options

- Passive Heatsink (XHG305)
- Active Heatsink (XHG306)
- Assembly drawings

## **Product Overview**

The product is a versatile module designed for various applications. It offers a range of features and specifications to meet different requirements.

## **Detailed Feature Description**

- The product includes LED indicators for easy status monitoring.
- It also has connectors and switches located on the module side for convenient access. The push-button switches allow for easy control and operation. The module can be installed in a typical manner, and software is available for enhanced functionality. The force recovery mode helps in troubleshooting and resolving any issues.
- The product has low power consumption, ensuring efficient operation. Cables are provided for easy connectivity. Mechanical drawings and models are available for reference. Thermal options include both passive and active heatsinks for effective heat dissipation. Assembly drawings provide detailed instructions for installation.

## **Product Usage Instructions**

### **LED Locations**

The LED indicators are located on the module and provide visual feedback on the status of the product.

### **Connector and Switch Locations – Module Side**

The connectors and switches are conveniently located on the module side for easy access and connectivity.

### **Push Button Switches**

The push button switches on the product allow for easy control and operation. Refer to the user manual for specific functions and usage instructions.

### **Typical Installation**

The product can be installed in a typical manner following the provided installation instructions. Ensure proper alignment and secure attachment.

### **Software**

The product is compatible with software that enhances its functionality. Install the required software as per the provided instructions.

### **Force Recovery Mode**

In case of any issues, the force recovery mode can be activated to troubleshoot and resolve problems. Follow the instructions in the user manual to enter the force recovery mode.

### **Power Consumption**

The product has low power consumption, ensuring efficient operation and minimal power usage.

### **Cables**

Cables are provided with the product for easy connectivity. Use the appropriate cables as per your specific requirements.

### **Mechanical Drawings & Models**

Refer to the mechanical drawings and models provided for detailed information on the physical dimensions and structure of the product.

### **Thermal Options**

The product offers thermal options for effective heat dissipation. Choose between passive heatsink (XHG305) or active heatsink (XHG306) based on your specific needs.

### **Assembly Drawings**

The assembly drawings provide step-by-step instructions for the proper installation and assembly of the product. Follow the provided instructions carefully for successful assembly.

### **FAQ**

- Q: How do I activate the force recovery mode?

A: To activate the force recovery mode, follow the instructions provided in the user manual. Typically, it involves a combination of button presses or specific software commands.

- Q: Can I use my own cables with the product?

A: Yes, you can use your own cables as long as they are compatible with the connectors on the product. Ensure proper cable specifications and connections for optimal performance.

- Q: What is the power consumption of the product?

A: The product has low power consumption. Refer to the specifications section for detailed power consumption information.

### **PREFACE**

#### **Disclaimer**

The information contained within this user's guide, including but not limited to any product specification, is subject to change without notice.

Connect Tech assumes no liability for any damages incurred directly or indirectly from any technical or typographical errors or omissions contained herein or for discrepancies between the product and the user's guide.

#### **Customer Support Overview**

If you experience difficulties after reading the manual and/or using the product, contact the Connect Tech reseller from which you purchased the product. In most cases the reseller can help you with product installation and difficulties.

In the event that the reseller is unable to resolve your problem, our highly qualified support staff can assist you. Our support section is available 24 hours a day, 7 days a week on our website at:

<https://connecttech.com/support/resource-center/>. See the contact information section below for more information on how to contact us directly. Our technical support is always free.

#### **Contact Information**

Contact Information	
Mail/Courier	Connect Tech Inc. Technical Support 489 Clair Rd. W. Guelph, Ontario Canada N1L 0H7
Contact Information	<p><a href="mailto:sales@connecttech.com">sales@connecttech.com</a> <a href="mailto:support@connecttech.com">support@connecttech.com</a> <a href="http://www.connecttech.com">www.connecttech.com</a></p> <p>Toll Free: 800-426-8979 (North America only) Telephone: +1-519-836-1291</p> <p>Facsimile: 519-836-4878 (on-line 24 hours)</p>
Support	<p>Please go to the <a href="#">Connect Tech Resource Center</a> for product manuals, installation guides, device drivers, BSPs and technical tips.</p> <p>Submit your <a href="#">technical support</a> questions to our support engineers. Technical Support representatives are available Monday through Friday, from 8:30 a.m. to 5:00 p.m. Eastern Standard Time.</p>

## Limited Product Warranty

- Connect Tech Inc. provides a one-year Warranty for this product. Should this product, in Connect Tech Inc.'s opinion, fail to be in good working order during the warranty period, Connect Tech Inc. will, at its option, repair or replace this product at no charge, provided that the product has not been subjected to abuse, misuse, accident, disaster or non-Connect Tech Inc. authorized modification or repair.
- You may obtain warranty service by delivering this product to an authorized Connect Tech Inc. business partner or to Connect Tech Inc. along with proof of purchase. Product returned to Connect Tech Inc. must be pre-authorized by Connect Tech Inc. with an RMA (Return Material Authorization) number marked on the outside of the package and sent prepaid, insured and packaged for safe shipment. Connect Tech Inc. will return this product by prepaid ground shipment service.
- The Connect Tech Inc. Limited Warranty is only valid over the serviceable life of the product. This is defined as the period during which all components are available. Should the product prove to be irreparable, Connect Tech Inc. reserves the right to substitute an equivalent product if available or to retract the Warranty if no replacement is available.
- The above warranty is the only warranty authorized by Connect Tech Inc. Under no circumstances will Connect Tech Inc. be liable in any way for any damages, including any lost profits, lost savings or other incidental or consequential damages arising out of the use of, or inability to use, such product.

## Copyright Notice

The information contained in this document is subject to change without notice. Connect Tech Inc. shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing, performance, or use of this material. This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Connect Tech, Inc.

Copyright © 2021 by Connect Tech, Inc.

## Trademark Acknowledgment

Connect Tech, Inc. acknowledges all trademarks, registered trademarks and/or copyrights referred to in this document as the property of their respective owners. Not listing all possible trademarks or copyright acknowledgments does not constitute a lack of acknowledgment to the rightful owners of the trademarks and copyrights mentioned in this document.

## ESD Warning



Electronic components and circuits are sensitive to ElectroStatic Discharge (ESD). When handling any circuit board assemblies including Connect Tech COM Express carrier assemblies, it is recommended that ESD safety precautions be observed. ESD safe best practices include, but are not limited to:

- Leaving circuit boards in their antistatic packaging until they are ready to be installed.
- Using a grounded wrist strap when handling circuit boards, at a minimum you should touch a grounded metal object to dissipate any static charge that may be present on you.
- Only handling circuit boards in ESD safe areas, which may include ESD floor and table mats, wrist strap stations and ESD safe lab coats.
- Avoiding handling circuit boards in carpeted areas.
- Try to handle the board by the edges, avoiding contact with components.

## REVISION HISTORY

Revision	Date	Changes
0.00	2019-12-16	Initial Release
0.01	2021-04-14	Updated Manual Format Updated Input Power
0.02	2021-07-13	Updated Fan Connector (12V), Updated Address, Updated XHG306 3D Model Images, Updated Block Diagram, Updated Misc I/O Connector
0.03	2021-09-20	Updated thermal assembly drawings
0.04	2022-12-01	Added note on 5V fan connector removal on AGX113

## INTRODUCTION

- Connect Tech's Rogue-X (AGX103) is a full featured NVIDIA® Jetson AGX Xavier™ module carrier board. This carrier board for AGX Xavier™ is specifically designed for commercially deployable platforms, and has an extremely small footprint of 105mm x 105mm.
- The Rogue-X provides access to an impressive list of latest generation interfaces on the AGX Xavier™ while adding additional interfaces of 3x USB 3.1, 2x GbE, 2x HDMI and a locking Mini-Fit Jr. input power connector.
- Rugged camera add-on expansion boards will also be available for use with the Rogue-X to interface directly

with the AGX Xavier™ high density MIPI CSI interfaces.

- Rogue-X builds upon the success of the Rogue by adding the ability to interface to two Ximea xiX Cameras.  
xiX is a trademark of Ximea GmbH.

## Product Features and Specifications


Specifications	
NVIDIA® GPU SoC Module Compatibility	NVIDIA® Jetson AGX Xavier™
Networking	2x Gigabit Ethernet (RJ45) <ul style="list-style-type: none"><li>– 1 port from RGMII PHY (direct from module)</li><li>– 1 port from a PCIe I210 MAC/PHY</li></ul>
Display Output	2x HDMI 1.4a (Type A)
Camera Input – Ximea xiX	2x PCIe Gen 2, 4 lane camera connectors (51 pin JAE FI-R connector)
Camera Input	6x two lane MIPI CSI-2 or 4x four lane MIPI CSI-2 using a 120 pin (dev kit compatible) QSH expansion connection
USB	3x USB 3.1 5Gbps/10Gbps (Type C – OTG mode 1 port) (Note only 2 interfaces can be used at 10Gbps simultaneously)
Storage	1x M.2 Key-M (NVMe) expansion slot (2 lane PCIe Gen 3) 1x microSD or UFS card slot
UART	2x @3.3V UART1 and UART2 1x USB based Debug UART3 (microUSB AB connector)
I2C/SPI	1x @3.3V I2C 1x @3.3V SPI
CAN Bus	2x CAN 2.0b Isolated Ports
GPIO	4x @3.3V GPIO (direct from module)
User Expansion	1x M.2 Key-E expansion slot (1 lane PCIe Gen 3, USB 2.0) For WiFi/Bluetooth modules
Input Power	9-19V DC Wide Input Power (4 pin Mini-fit Jr Connector) 14-19V required for full camera support with GPU under load
PCB / Electronics Mechanical Information	105mm x 105mm
Operating Temperature (Carrier Board Only)	-40°C to +85°C (-40°F to +185°F)

## Part Numbers / Ordering Information

Part Number				
SKU	AGX Xavier™ Module Included	Heat Sink Options	WiFi Bluetooth Options	SSD Options
AGX103	None	None	None	None
AGX103-01	Yes	None	None	None
AGX103-02	Yes	None	None	1x 1TB SSD Installed
AGX103-04	Yes	None	WiFi/BT Module Installed	None
AGX103-05	Yes	None	WiFi/BT Module Installed	1x 1TB SSD Installed
AGX103-07	Yes	CTI Active Thermal Installed	None	None
AGX103-08	Yes	CTI Active Thermal Installed	None	1x 1TB SSD Installed
AGX103-10	Yes	CTI Active Thermal Installed	WiFi/BT Module Installed	None
AGX103-11	Yes	CTI Active Thermal Installed	WiFi/BT Module Installed	1x 1TB SSD Installed
AGX103-13	Yes	CTI Passive Thermal Installed	None	None





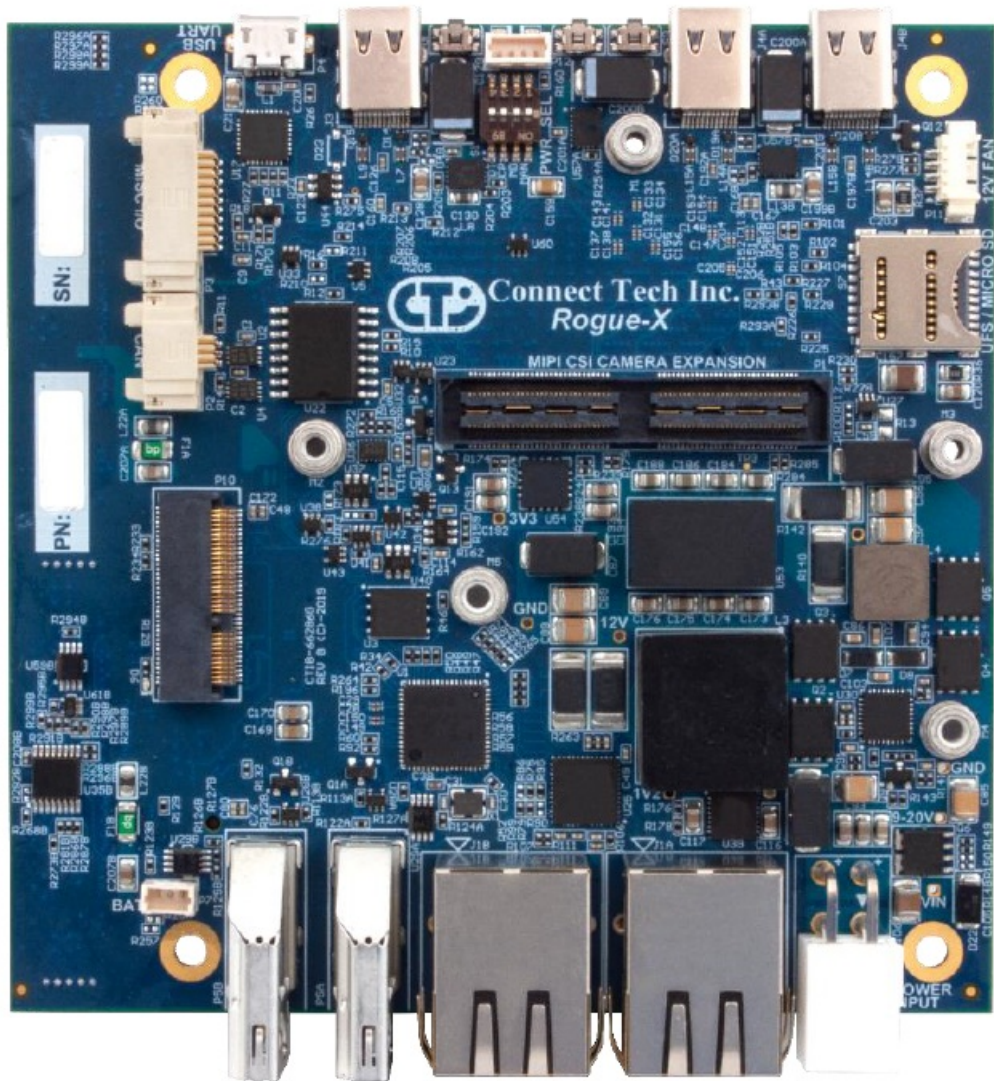

Board (Back Side)



Designator	Description
P9	Jetson AGX Xavier™ connector
J2	M.2 M-Key (NVMe) connector
P8	5V Fan Connector – for Dev kit fan support
P4	USB UART Debug Console connector
J3	USB 3.1 device port and OTG programming port connector
J4A, J4B	USB 3.1 device ports
P3	MISC I/O connector
P2	CAN Bus Connector
P1	MIPI Camera Expansion connector
P10	M.2 E-Key connector
P11	12V Fan connector
P12	External Switch Access connector
S7	Micro SD or UFS Card Expansion port (Push/Pull)
P5A, P5B	HDMI Display output connectors
J1A, J1B	RJ45 GbE connectors
P6	Input Power connector
P7	RTC Battery connector
P13A, P13B	Ximea Camera connector
P14A, P14B	Ximea Camera IO connector

### Jumper Summary & Locations

Designator	Description
S1	Power Option control dip switches
S2	CAN Bus Termination control dip switches
S3	Power ON momentary switch
S5	Force Recovery momentary switch
S6	Reset momentary switch


### LED Summary




Designator	Description
D6	M.2 connector (J2A) activity
D9	Input Power is good
D10	System Power is good and system is powering on (booting up). In manual power on mode (via dip switch), this light will power on only after the power button has been pushed. Since the typical default mode is auto power on, the light will come on as on the system starts to boot.

## DETAILED FEATURE DESCRIPTION


### LED Locations

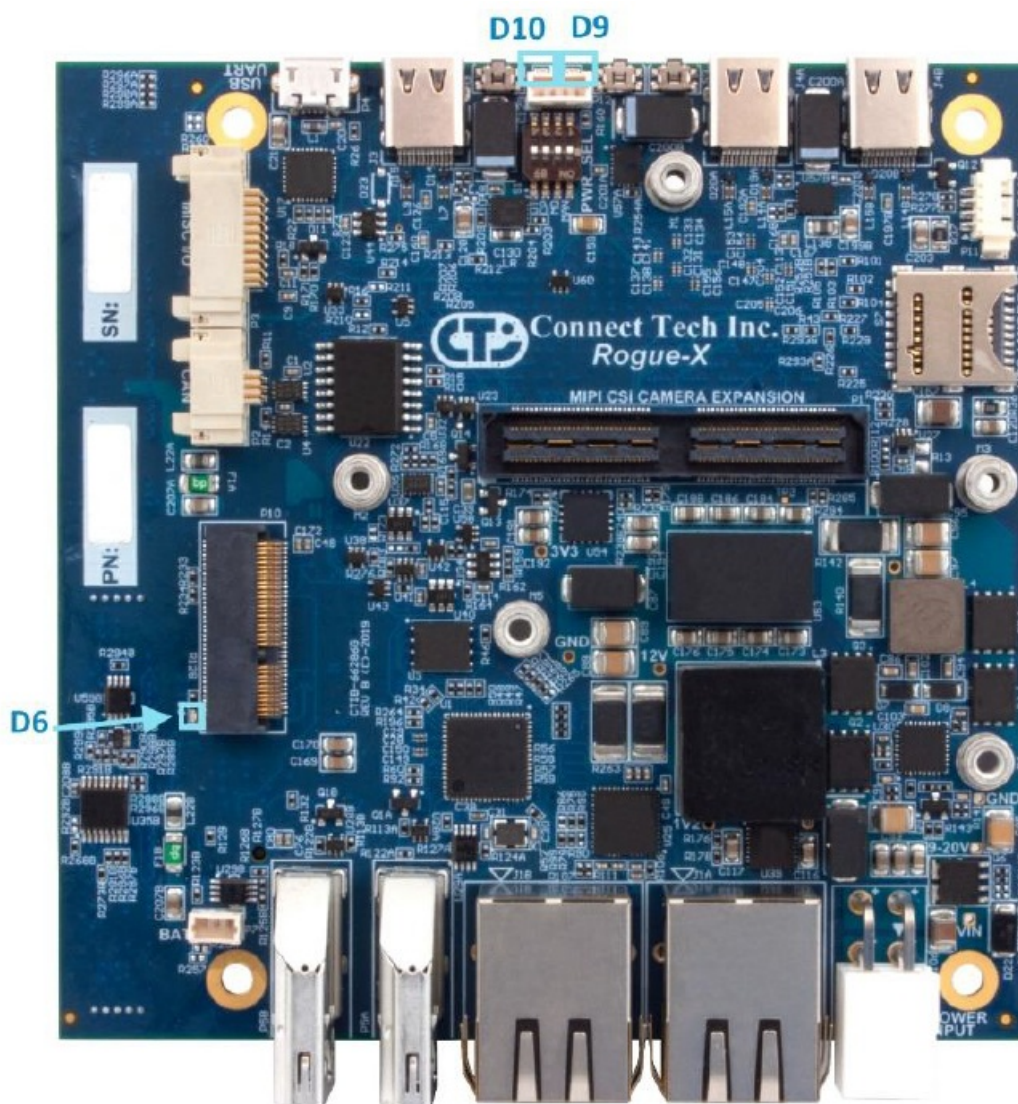


### Connector and Switch Locations – Module Side

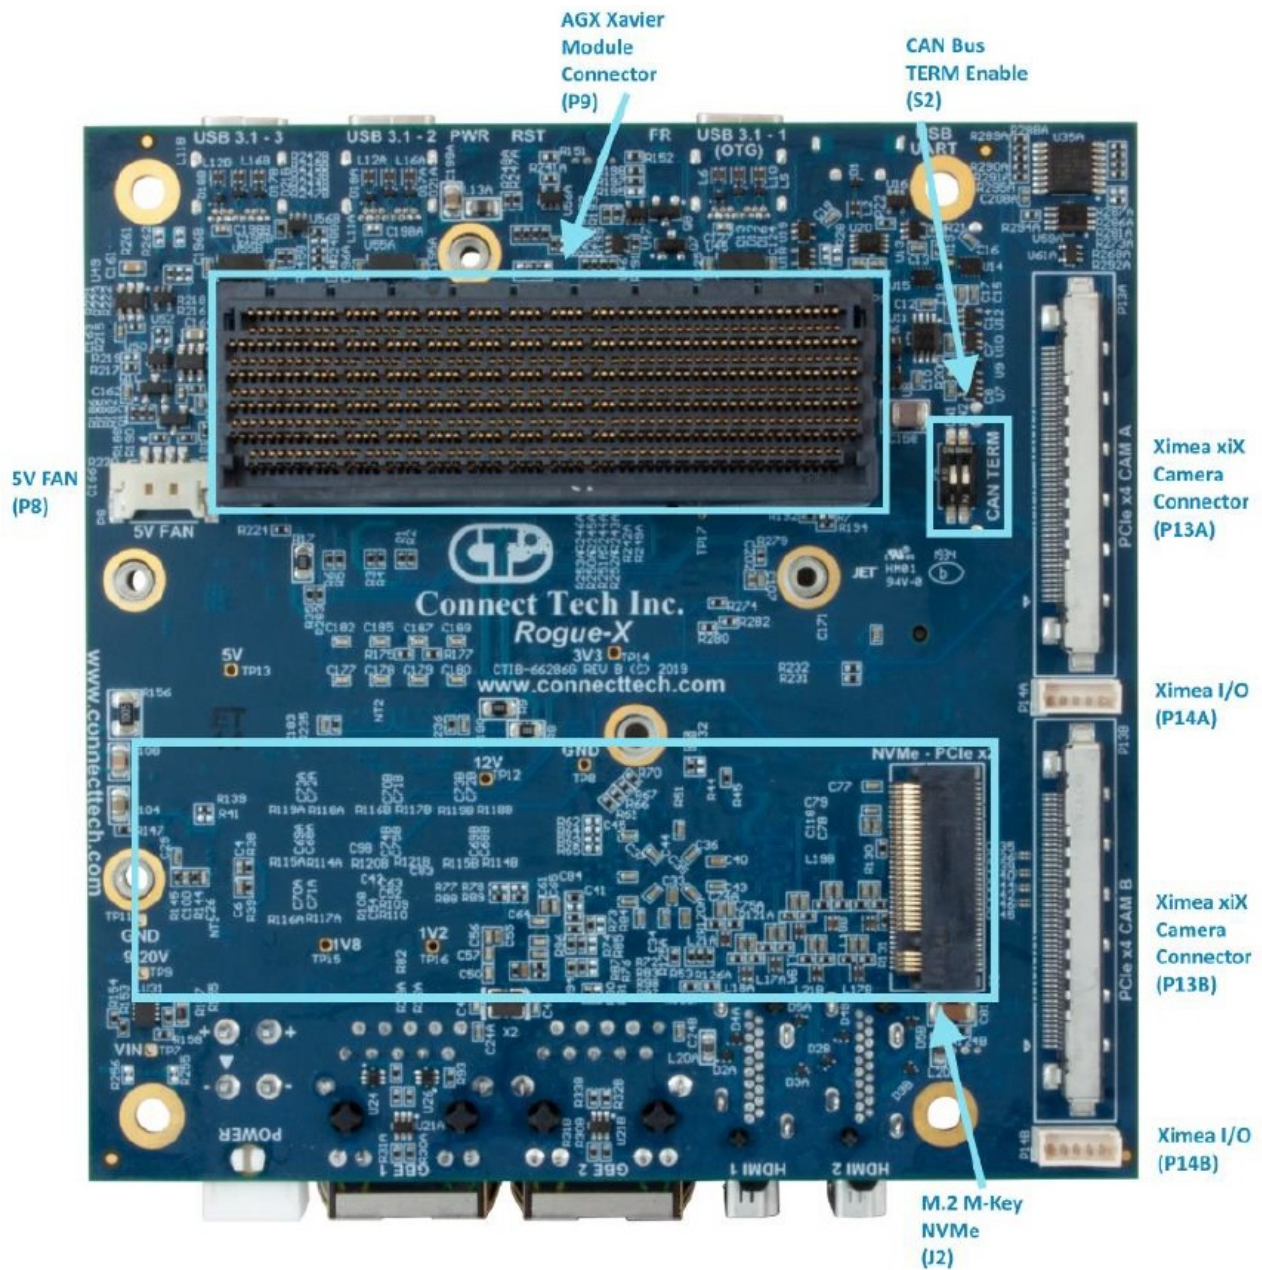

- Jetson AGX Xavier™ Board-to-Board Carrier Connector
- With the NVIDIA® Jetson AGX Xavier™, the processor and chipset are implemented on the module.

Function	<b>NVIDIA® Jetson AGX Xavier™ Module I nterface</b>	
Location	P9	
Type	Molex Mirror Mezz™ Connector	
Connector	Part Number: 203456-0003 Manufacturer: Molex	
Mating Co nnector	Same as above.	
Pinout	Refer to NVIDIA® Jetson AGX Xavier™ System-on-Module datasheet and OEM de sign guide for pinout details	


## M.2 M-Key – NVMe

Function	NVMe Storage (x2 PCIe Gen 3)	
Location	J2	
Type	2280 M.2 M-key 3.2mm mating height with M3 mounting standoff.	
Connector	Part Number: 1-2199119-5 Manufacturer: T E	
Mating Connector	N/A	
Pinout	M.2 Specification M-Key pin assignment.	
Notes	Interface is x2 PCIe Gen 3. SATA is not supported. PCIe based devices only.	

## Fan Connector (5V)



Function	Fan control for Dev Kit	
Location	P8	
Type	4 pin Panel-mate	
Connector	Part Number: 53780-0470 Manufacturer: Molex	
Mating Connector	Part Number: 51146-0400 (housing), 50641-8xxx (contact) Manufacturer: Molex	
Pinout	Pin	Description
	1	GND
	2	5V Power
	3	TACH from fan to module
	4	PWM from module to fan
Notes	<b>Installation note:</b>  Fan connector must be installed before an NVMe card is installed in slot J2A (NVMe 1) to avoid interference.  This Fan connection is specifically for 5V fans ONLY, and will not properly work with a 12V Fan (see P11 below for 12V option).  This connector was removed on AGX113.	





### CAN Bus TERM enable switch

<b>Function</b>	<b>Enable CAN Bus termination on CAN1 and CAN2</b>			
Location	S2			
Type	2 SPST dip switch			
Default	Product is shipped with both Terminations DISABLED. Only add the termination if the unit is an end point of any CAN Bus connection, otherwise leave disabled.			
Pinout	Switch	Description	ON	OFF
	S2-1	CAN Bus 1 TERM Enable	120 ohm	No TERM
	S2-2	CAN Bus 2 TERM Enable	120 ohm	No TERM




### Ximea xiX Camera Connector (2 sites)

<b>Function</b>	<b>Ximea xiX Camera Control</b>
-----------------	---------------------------------



Location	P13A/B	
Type	51 Position Receptacle Connector Surface Mount, Right Angle	
Connector	Part Number: FI-RE51S-HF-R1500 Manufacturer: JAE Electronics	
Mating Connector	Connector Only: Part Number: FI-RE51HL Manufacturer: JAE Electronics  Cable Assembly: Part Number: JF08R0R0510x0UA  where x = 2,3,4 for 20,30,40cm versions Manufacturer: JAE Electronics	
Pinout	Connector Pins	Description
	1,3,5,9,12,15,18,21,24,28,31,34,37,40,43,47,49,51	GND
	2	Opto-isolated Input 1
	4	Opto-isolated Input 2
	6	I/O 4 (LVTTTL 3.3, 50uA)
	7	I/O 3 (LVTTTL 3.3, 50uA)
	8	PCIe PERST# active low reset signal
	10	PCIe Ref Clkp
	11	PCIe Ref Clkn
	13	PCIe Rx Lane 3p
	14	PCIe Rx Lane 3n
	16	PCIe Rx Lane 2n
	17	PCIe Rx Lane 2p
	19	PCIe Rx Lane 1n
	20	PCIe Rx Lane 1p
	22	PCIe Rx Lane 0n
	23	PCIe Rx Lane 0p
	25,26,27	12V 0.9A PWR
	29	PCIe Tx Lane 3p
	30	PCIe Tx Lane 3n

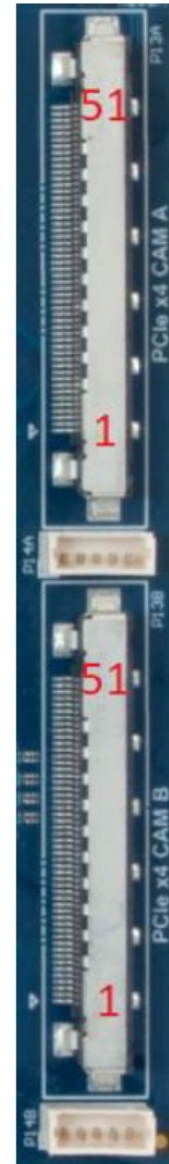

	32	PCIe Tx Lane 2p	
	33	PCIe Tx Lane 2n	

	35	PCIe Tx Lane 1n	
	36	PCIe Tx Lane 1p	
	38	PCIe Tx Lane 0n	
	39	PCIe Tx Lane 0p	
	41	Not Connected	
	42	Not Connected	
	44	Not Connected	
	45	I/O 2 (LVTTL 3.3, 50uA)	
	46	I/O 1 (LVTTL 3.3, 50uA)	
	48	Opto-isolated Output 2	
	50	Opto-isolated Output 1	

Notes	Some lanes and pair polarity have been swapped but this is allowed per PCIe Spec.  Mating cable is rated to 0.3A per contact for 0.9A total		
-------	---	--	--


### Ximea IO Header

The Opto IO lines listed on the Ximea camera connector have also been broken out onto a separate connector


<b>Function</b>	<b>Ximea Opto-Isolated I/O</b>		
Location	P14A/P14B		
Type	5 pin PicoBlade (vertical)		
Connector PN	53047-0510 – Manufacturer: Molex		
Mating PN	51021-0500 – Manufacturer: Molex		
Pinout	Pin	Signal	Description
	1	Ximea Opto- isolated Output	Open Collector NPN
	2	Ximea Opto- isolated Output	Open Collector NPN
	3	Ximea Opto- isolated Input	<0.8V Low; 5V High
	4	Ximea Opto- isolated Input	<0.8V Low; 5V High
	5	GND	Ground / Return
Notes	Isolation is ONLY on the camera side.		
	By default, these lines are connected to an I2C I/O controller on the carrier board. Pins 1&2 are pulled up to 3.3V while pins 3&4 are pulled up to 5V		
	Custom orders have the ability to separate these lines from the carrier board and be directly connected to the camera where 24V operation would be allowed.		




## Connector and Switch Locations – User Interface Side

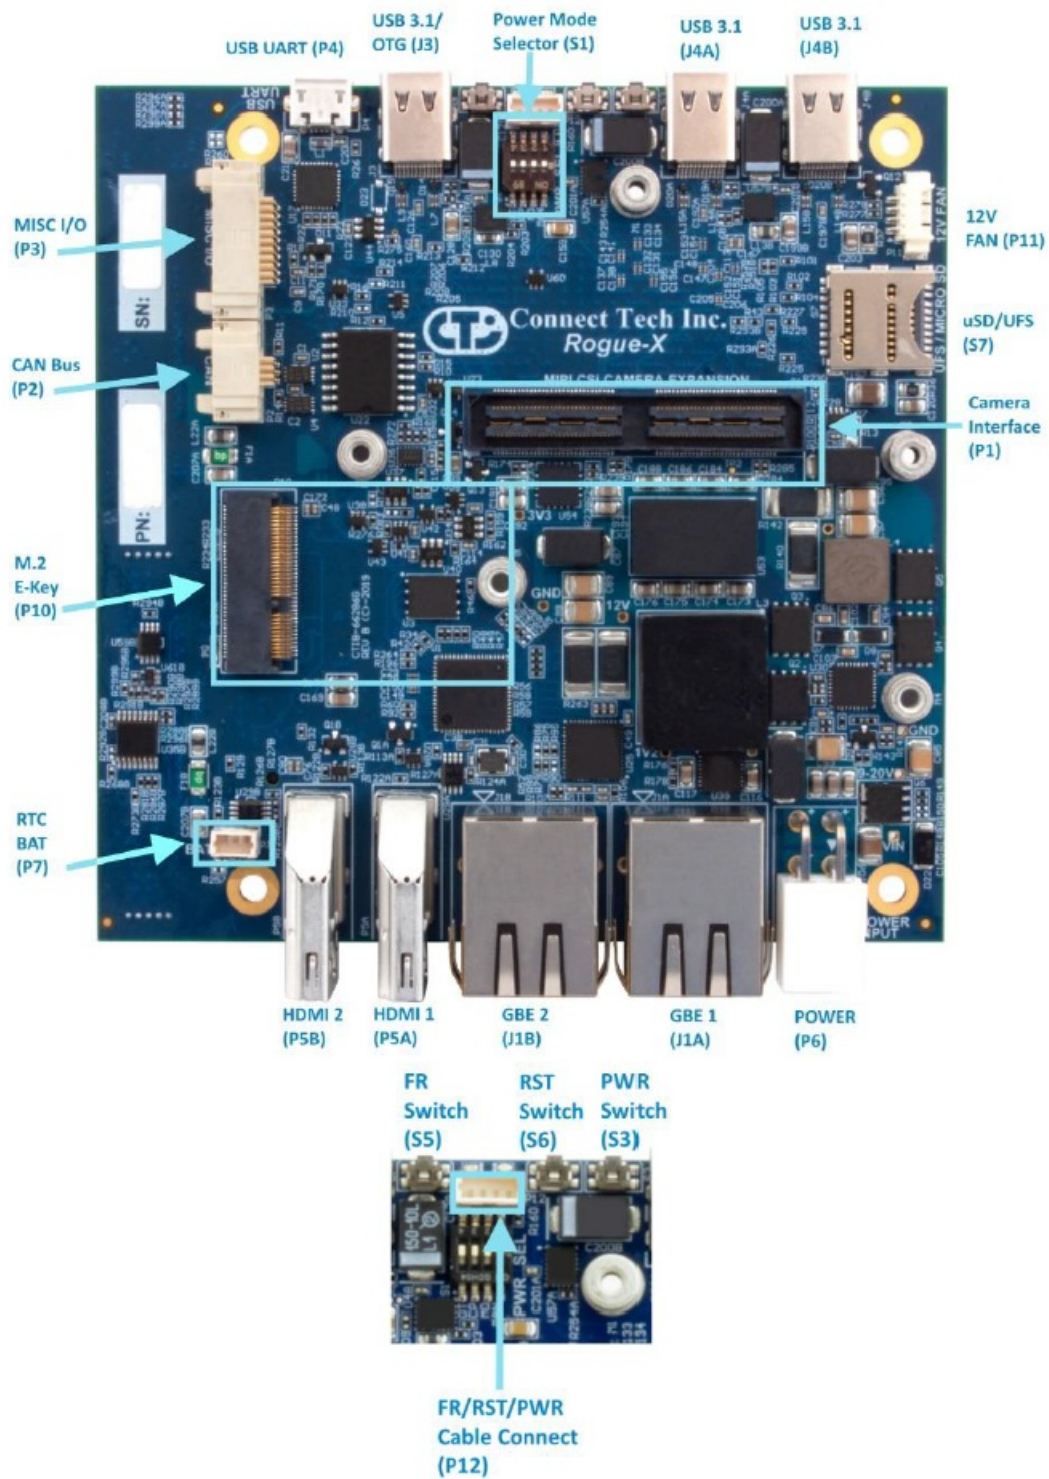


USB UART Debug console – Micro USB-AB

Function	USB UART Debug console	
Location	P4	
Type	5 Pin USB Micro AB connector	
Connector	Part Number: 47589-0001 Manufacturer: Molex	
Mating Cable	Any standard Micro USB to USB Type A	
Notes	This interface utilizes an FTDI USB to Serial device on board to allow access to the Jetson AGX Xavier™ Serial debug console using any Micro USB to USB A cable and any PC with a USB interface and serial terminal program.	

### USB 3.1/OTG Type C

Function	USB 3.1 device port, OTG programming port	
Location	J3	
Type	24 Pin USB Type C	
Connector	Part Number: 632723300011 Manufacturer: Wurth	
Mating Cable	Any Standard Type C interface cable or device  ** Note this port only supports USB devices, it does not include a display interface **	
Notes	<p>This interface doubles as both a standard DFP (Downward facing port) USB 3.1 port to support USB 3.1 devices and the Jetson AGX Xavier™ Programming (flashing) interface port. The port is capable of up to USB 3.1 Gen 2 speeds in normal operation. The USB 2.0 portion of the interface doubles as the OTG programming port when the FORCE RECOVERY function is applied at startup. The power to the port is disabled so an external PC connection is possible to reprogram the module using Jetpack.</p> <p>The maximum power available on this output is 1.5A @5V.</p>	


### USB 3.1 Type C

Function	USB 3.1 device ports	
Location	J4A, J4B	
Type	24 Pin USB Type C	
Connector	Part Number: 632723300011 Manufacturer: Wurth	
Mating Connector	Any Standard Type C interface cable or device  ** Note this port only supports USB devices, it will not work as a display interface **	
Notes	<p>These interfaces are both standard DFP (Downward facing port) USB 3.1 Gen 2 capable ports used to support USB peripheral devices. Display devices or devices requiring 20V power modes are NOT supported.</p> <p>These ports are capable up to USB 3.1 Gen 2 (10G) speeds in normal operation. Note that only any 2 interfaces can be used at 10Gbps simultaneously.</p> <p>The power available from either of these ports is 3A @5V. However ONLY ONE port can be loaded at up to 3A at a time. Both will support simultaneous 1.5A loads. Overloading both of these ports will result in system power overload and the Rogue will shut down prematurely.</p>	

## RTC Battery

The Rogue allows for an external RTC battery to be connected. This battery should be a 3V DC battery, and it will hold settings including date and time. For further information about RTC battery selection and life time estimation, see Application Note 00009: <https://connecttech.com/pdf/CTIN-00009.pdf>


Function	RTC Battery Connector		
Location	P7		
Type	3 pin PicoBlade (vertical)		
Connector PN	53047-0310 – Manufacturer: Molex		
Mating PN	51021-0300 – Manufacturer: Molex		
Pinout	Pin	Signal	Description
	1	+3V	RTC Battery Voltage Input
	2	NC	No Connect
	3	GND	Ground/Return



## MISC I/O Connector





Function	2x Serial (TTL), 1x I2C, 1x SPI, 4x GPIO	
Location	P3	
Type	20 Pin	
Connector	Part Number: T1M-10-GF-DH Manufacturer: Samtec	
Mating Cable	S1SD-10-28-GF-xxx	
Pinout	Connector Pins	Description
	1	UART1 TX
	2	UART2 TX
	3	UART1 RX
	4	UART2 RX
	5	I2C SCL
	6	UART2 RTS#
	7	I2C SDA
	8	UART2 CTS#
	9,10,11,12	GND
	13	GPIO0 (GPIO12)
	14	SPI CLK
	15	GPIO1 (GPIO13)
	16	SPI MOSI
	17	GPIO2 (GPIO14)
	18	SPI MISO
	19	GPIO3 (GPIO17)
	20	SPI CS#
Notes	<p>This interface provides 3.3V capable generic I/O including:</p> <ul style="list-style-type: none"> <li>· UART1 under /dev/ttyTHS0 UART2 under /dev/ttyTHS1</li> <li>· I2C under i2c-0</li> <li>· SPI under /dev/spidev0.0</li> <li>· x4 GPIO under gpiochip2</li> </ul> <p>For more information on I2C usage, please click <a href="#">here</a>. For more information on GPIO usage, please click <a href="#">here</a>.</p>	

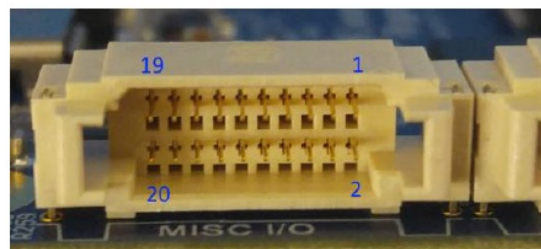

CAN Bus Connector

Function	2x Isolated CAN Bus	
Location	P2	
Type	6 Pin	
Connector	Part Number: T1M-03-GF-DH Manufacturer : Samtec	
Mating Cable	S1SD-03-28-GF-xxx	
Pinout	Connector Pins	Description
	1	CAN0_H
	2	CAN1_H
	3	CAN0_L
	4	CAN1_L
	5	GND_ISO
	6	GND_ISO
Notes	This interface provides two isolated CAN Bus interfaces.	

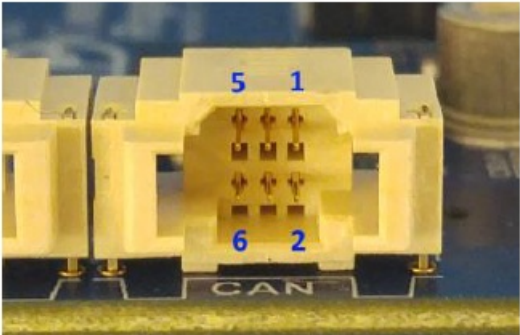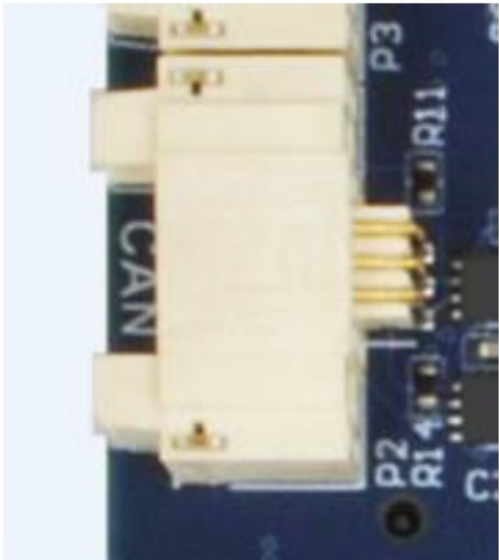

CAMERA Expansion Connector



Function	8 MIPI CSI-2 Camera Interfaces + I2C and GPIO Control			
Location	P1			
Type	120 Pin QSH with M2.5 mounting standoffs			
Default	Part Number: QSH-060-01-L-D Manufacturer: Samtec			
Mating Connector	QTH			
Pinout	Pin #	Description		Pin #
	1	CSI0_D0_P	CSI1_D0_P	2
	3	CSI0_D0_N	CSI1_D0_N	4
	5	GND	GND	6
	7	CSI0_CLK_P	CSI1_CLK_P	8
	9	CSI0_CLK_N	CSI1_CLK_N	10
	11	GND	GND	12
	13	CSI0_D1_P	CSI1_D1_P	14

	15	CSI0_D1_N	CSI1_D1_N	16
	17	GND	GND	18
	19	CSI2_D0_P	CSI3_D0_P	20
	21	CSI2_D0_N	CSI3_D0_N	22
	23	GND	GND	24
	25	CSI2_CLK_P	CSI3_CLK_P	26
	27	CSI2_CLK_N	CSI3_CLK_N	28
	29	GND	GND	30
	31	CSI2_D1_P	CSI3_D1_P	32
	33	CSI2_D1_N	CSI3_D1_N	34
	35	GND	GND	36
	37	CSI4_D0_P	CSI6_D0_P	38
	39	CSI4_D0_N	CSI6_D0_N	40
	41	GND	GND	42
	43	CSI4_CLK_P	CSI6_CLK_P	44
	45	CSI4_CLK_N	CSI6_CLK_N	46
	47	GND	GND	48
	49	CSI4_D1_P	CSI6_D1_P	50

51	CSI4_D1_N	CSI6_D1_N	52
53	GND	GND	54
55	<b>+12V</b>	<b>+12V</b>	56
57	<b>+12V</b>	<b>+12V</b>	58
59	CSI5_D0_P	CSI7_D0_P	60
61	CSI5_D0_N	CSI7_D0_N	62
63	GND	GND	64
65	CSI5_CLK_P	CSI7_CLK_P	66
67	CSI5_CLK_N	CSI7_CLK_N	68
69	GND	GND	70
71	CSI5_D1_P	CSI7_D1_P	72
73	CSI5_D1_N	CSI7_D1_N	74
75	I2C3_SCL	NC	76
77	I2C3_SDA	NC (PWM1)	78
79	GND	GND	80
81	+2.8V	+2.8V	82
83	+2.8V	NC	84



	85	NC	NC (PWM2)	86	
	87	I2C2_SCL	CAM_MCLK3	88	
	89	I2C2_SDA	CAM1_PWDN	90	
	91	CAM_MCLK2	CAM1_RST#	92	
	93	CAM0_PWDN	CAM_MCLK4	94	
	95	CAM0_RST#	NC	96	
	97	NC	NC	98	
	99	GND	GND	100	
	101	NC	1.8V	102	
	103	NC	NC	104	
	105	I2C4_SCL	NC	106	
	107	I2C4_SDA	3.3V	108	
	109	NC	3.3V	110	
	111	NC	NC	112	
	113	NC	NC	114	
	115	GND	GND	116	
	117	NC	3.3V	118	
	119	CAM_AVDD_EN	3.3V	120	
Notes	<p>Only 6 of the CSI2 interfaces can be used at once in 2 lane configuration. Only 4 interfaces when using 4 lane configuration.</p> <p>All non-CSI-2 I/O is 1.8V levels.</p> <p>CAUTION! – The 12V pins shown above differ from that of the NVIDIA® dev kit pinout. This 12V power can be used for Camera expansion requirements up to 2A @12V.</p>				


## M.2 E-Key – WiFi and Bluetooth Expansion port

Function	M.2 E-Key Expansion port	
Location	P10	
Type	75 Pin M.2 Connector with M2.5 mounting standoff	
Connector	Part Number: 2199230-4 Manufacturer: TE	
Mating Cable	N/A	
Pinout	As per the M.2 E-Key specification	
Notes	This port contains a x1 PCIe Gen 1 interface and one USB 2.0 interface. Support for M.2 2230 size only.	




## Fan Connector (12V)

Function	Fan control for XHG306	
Location	P11	
Type	4 pin PicoBlade (right angled)	
Connector	Part Number: 53261-0471 Manufacturer: Molex	
Mating Connector	Part Number: 51021-0400 (housing), 50058-8000 (contact) Manufacturer: Molex	
Pinout	Connector Pins	Description
	1	GND
	2	12V Power
	3	TACH from fan to module
	4	PWM from module to fan
Notes	<b>Installation note:</b> This Fan connection is specifically for 12V fans ONLY. Forcing a connection of a 5V fan will result in damaging the card and/or the fan.	

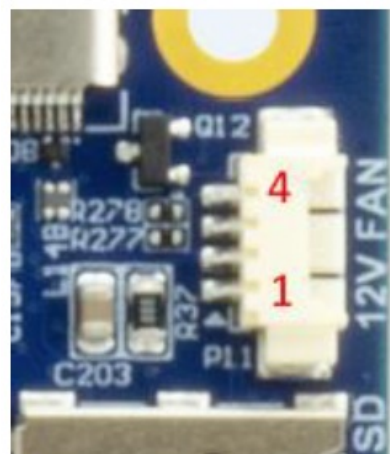


## External Switch Access Connector

Function	External Switch Access (Power, Reset, Force Recovery)	
Location	P12	
Type	4 pin PicoBlade (vertical)	
Connector	Part Number: 53047-0410 Manufacturer: Molex	
Mating Connector	Part Number: 51021-0400 (housing), 50058-8000 (contact) Manufacturer: Molex	
Pinout	Connector Pins	Description
	1	GND
	2	Force_Recovery_BTN#
	3	Reset_BTN#
	4	Power_BTN#
Notes	To activate any of the features, momentarily connect the signal the GND provided on the connector using momentary close switches only.	

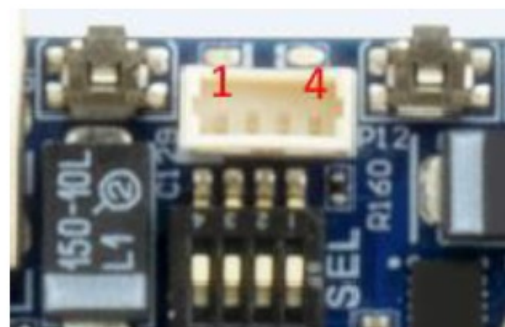


### Micro SD/UFS Card Expansion port


Function	Micro SD or UFS Card Expansion	
Location	S7	
Type	19 Pin Multi card connector	
Connector	Part Number: 10101704J6#2A Manufacturer: Amphenol	
Mating Cable	N/A	
Pinout	As Per the micro SD and UFS Specification	

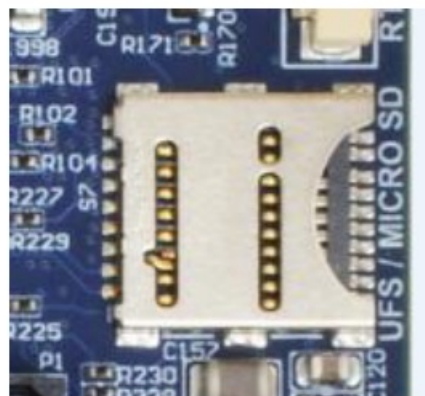

### HDMI Video Outputs


Function	HDMI Display Outputs	
Location	P5A, P5B	
Type	19 Pin Multi card connector	
Connector	Part Number: 2013978-1 Manufacturer: TE	
Mating Cable	Standard HDMI cable	
Pinout	As per the HDMI Specification	
Notes	Outputs are capable of a resolution up to 3840×2160 @60Hz. Dual display is supported.	

### GBE RJ45 Connectors

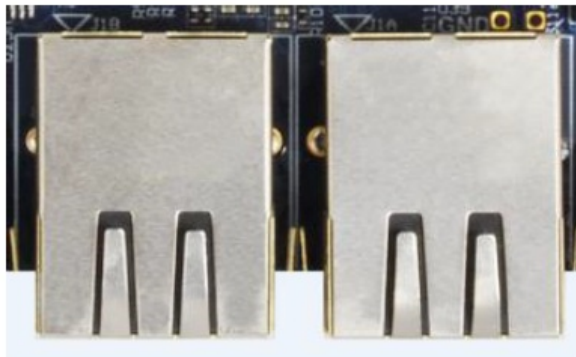Function	GBE Network Connectivity	
Location	J1A, J1B	
Type	8 pin RJ45 with integrated Magnetics	
Connector	Part Number: JXD0-0001NL Manufacturer: Pulse	
Mating Cable	Standard RJ45 Cat 5e	
Pinout	As per the IEEE-802.3 specification	
Notes	J1A comes direct from the AGX Xavier™ Module Ethernet port. J1B Comes from the local carrier's PCIe Intel I210 MAC/PHY.	

### POWER Connector

<b>Function</b>	<b>Input Power</b>	
Location	P6	
Type	4 Pin Molex Mini-Fit Jr.	
Connector	Part Number: 39-30-1042 Manufacturer: Molex	
Mating Cable	ATX 4 pin Mini Fit Jr	
Pinout	Connector Pins	Description
	1	GND
	2	GND
	3	+VIN
	4	+VIN
Notes	<p>Voltage Input Range 9V – 19V input range with input reverse polarity protection. Note that this connector is compatible with a 12V 4pin ATX Power supply connection.</p> <p>14V minimum is required for full camera support with GPU under load.</p>	

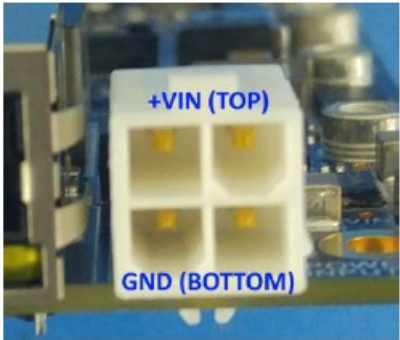

**POWER Mode Select Switch**

<b>Function</b>	<b>Power Mode selection</b>	
-----------------	-----------------------------	--

Location	S1			
Type	4 SPST dip switch			
Connector	Product is shipped with all switches OFF, the default is Auto On/Module Controlled mode.			
	Switch	Description	ON	OFF
	S1-1	Auto or Manual Power On (MAN)	Manual Power On	Auto
	S1-2	Module Present Detect (MD) – Debug ONLY	DO NOT USE	Module controlled
	S1-3	Carrier Power On (CP) – Debug ONLY	DO NOT USE	Module controlled
	S1-4	OTG Port Power control (OT) – Debug ONLY	DO NOT USE	Auto




Mating Cable



Notes	<p><b><u>S1-1</u></b></p> <p><b>AUTO Power ON Mode behavior</b></p> <p>1) Upon applying power the system boots immediately.</p> <p>2) Upon requesting a Software shutdown from the OS, the system will reboot after the shutdown completes without cycling power.</p> <p>3) Upon a Power Button Event ( &gt; 500 ms but &lt; 10 secs) the system OS will prompt with the Restart/Shutdown pop-up menu (only applicable in the GUI).</p> <p>4) Upon a Power Button Event ( &gt; 10 secs) the system OS will prompt with the Restart/Shutdown menu (only applicable in the GUI). Note that the system will NOT shutdown.</p> <p><b>Manual Power ON Mode behavior</b></p> <p>1) Upon applying power the system will sit in standby, awaiting a ( &gt; 500ms) Power Button Event.</p> <p>2) Upon requesting a Software shutdown from the OS, the system will return to standby and await a new Power Button Event ( &gt; 500ms).</p> <p>3) Upon a Power Button Event while operating ( &gt; 500 ms but &lt; 10 secs) the system OS will prompt with the Restart/Shutdown menu (only applicable in the GUI).</p> <p>4) Upon a Power Button Event while operating ( &gt; 10 secs) the system will perform a hard shutdown immediately and return to the Power On standby state awaiting a new Power Button Event.</p>
-------	---

## Push Button Switches

Function	Power/Reset/Force Recovery Buttons	
Location	S3, S6, S5	
Type	Momentary Push button micro switches	
Function	<p>Power ON switch (S3): a press of &gt;500ms when in manual mode will trigger system to power ON.</p> <p>Reset Switch (S6): a press of &gt;500ms will trigger a full system Reset.</p> <p>Force Recovery (S5): No function during normal operation. Will place the AGX Xavier™ Module into Force Recovery Mode when held during power ON.</p>	

## TYPICAL INSTALLATION

1. Ensure all external system power supplies are off.
2. Install the Jetson AGX Xavier™ Module onto the Molex Mirror Mezz™ Connector. Be sure to follow the manufacturer's directions for proper installation of mounting hardware, heatsink/heatspreader, and any other applicable requirements from the manufacturer.
3. Install the necessary cables for application. At a minimum these would include:
  1. Power cable to the input power connector on the carrier
  2. HDMI video display cable
  3. Keyboard and mouse via USB

For additional information on the relevant cables, please see the Cables and Interconnects section of this manual.
4. Connect the Power Cable to the Power Supply.
5. Switch ON the Power Supply. DO NOT power up your system by plugging in live power.

## SOFTWARE

For L4T (Linux for Tegra) BSPs and Software Support NVIDIA® Jetson™ AGX Xavier™ please follow this link: <https://connecttech.com/resource-center/l4t-board-support-packages/>

## FORCE RECOVERY MODE

The USB 3.1/OTG Port (J3) of the Rogue can be used to reprogram the AGX Xavier™ from another host platform running NVIDIA® Jetpack™.

1. Power down the system completely. The system power MUST be OFF, not in suspend or sleep mode.
2. Connect the OTG USB port to another host device that will be supplying the new system file.
3. Hold down the Force Recovery Button (S5) and then power the board.
4. After three (3) seconds release the Recovery button.

5. The AGX Xavier™ will show up on the host system USB list as a new NVIDIA® target device.
6. After successfully updating the system software, power off the system. A clean power up will revert the OTG port back into host mode.

## POWER CONSUMPTION

Below is the theoretical maximum stand-alone power consumption of the Rogue Carrier with the AGX Xavier™ Module installed. (System power)

Theoretical Maximum System power	Watts
Theoretical absolute maximum total with AGX Xavier™ Module (30W Power Mode), 2x NVMe, 2x GbE, 3x USB 3.1 Gen 2 fully loaded (1x 3A, 2x 1.5A), 3x Camera (4 lane).	75W

The typical power consumption will vary depending on the application and use case.

Theoretical Maximum System power	Watts
Idle, AGX Xavier™ (10W Power Mode), 1x display	7.5W
Idle, AGX Xavier™ (10W Power Mode), 2x NVMe, 2x GbE, 1x WiFi/BT modules, dual display, 3x USB 3.1 Gen 2 to four port hubs, uSD Card, Serial Console.	18W
AGX Xavier™ (30W Power Mode), 1x display running CUDA benchmarks	42W
AGX Xavier™ (30W Power Mode), 2x NVMe, 2x GbE, 1x WiFi/BT modules, dual display, 3x USB 3.1 Gen 2 to four port hubs, uSD Card, Serial Console. Running CUDA, and system benchmarks.	64W

## CABLES

Part No.	Description
<b>CBG310</b>	USB Type-C Male to Type-A Female Cable
<b>CBG311</b>	USB Type-C Male to Type-A Male Cable
<b>CBG247</b>	USB Micro-B Male to Type-A Male cable (UART Coms)
<b>CBG312</b>	MISC IO Breakout Cable (Flying Leads)
<b>CBG313</b>	CAN IO Breakout Cable (Flying Leads)
<b>CBG136</b>	RTC Battery Cable Assembly
<b>CKG064</b>	Rogue Full Cable Kit Including all of the above
<b>MSG085</b>	AC/DC PSU Brick 19V/120W + adapter
<b>CBG314</b>	Input Power Cable (Discrete Wire) – Included with every AGX103 Carrier.


Cable drawings are available upon request. Send an email request to: [support@connecttech.com](mailto:support@connecttech.com)

## MECHANICAL DRAWINGS & MODELS


3D Model is located here: [https://connecttech.com/ftp/3d\\_models/AGX103\\_3D\\_MODEL.zip](https://connecttech.com/ftp/3d_models/AGX103_3D_MODEL.zip)

## THERMAL OPTIONS

- Passive Heatsink (XHG305)

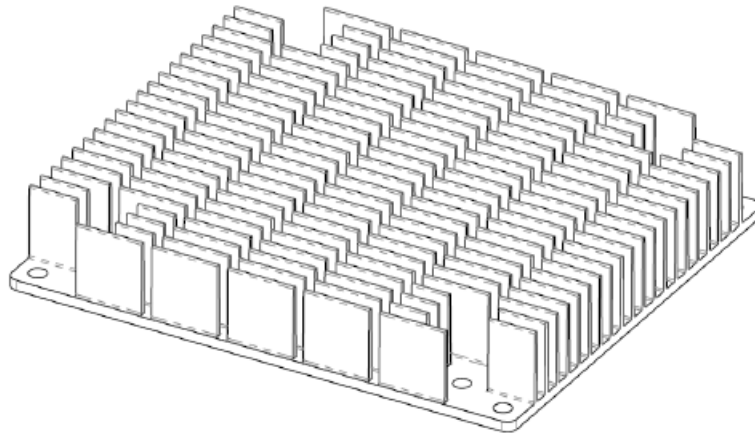


- Active Heatsink (XHG306)

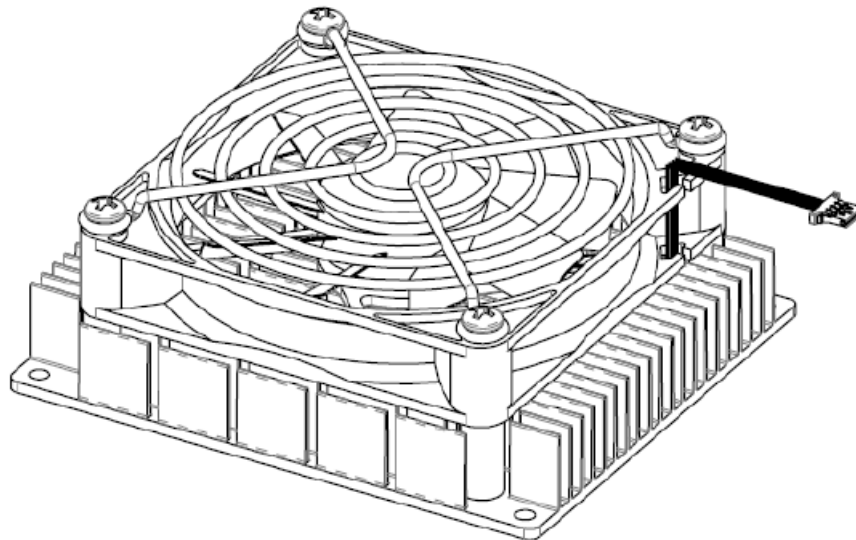


## Assembly drawings


- AGX103-01 Example (No Heatsink)

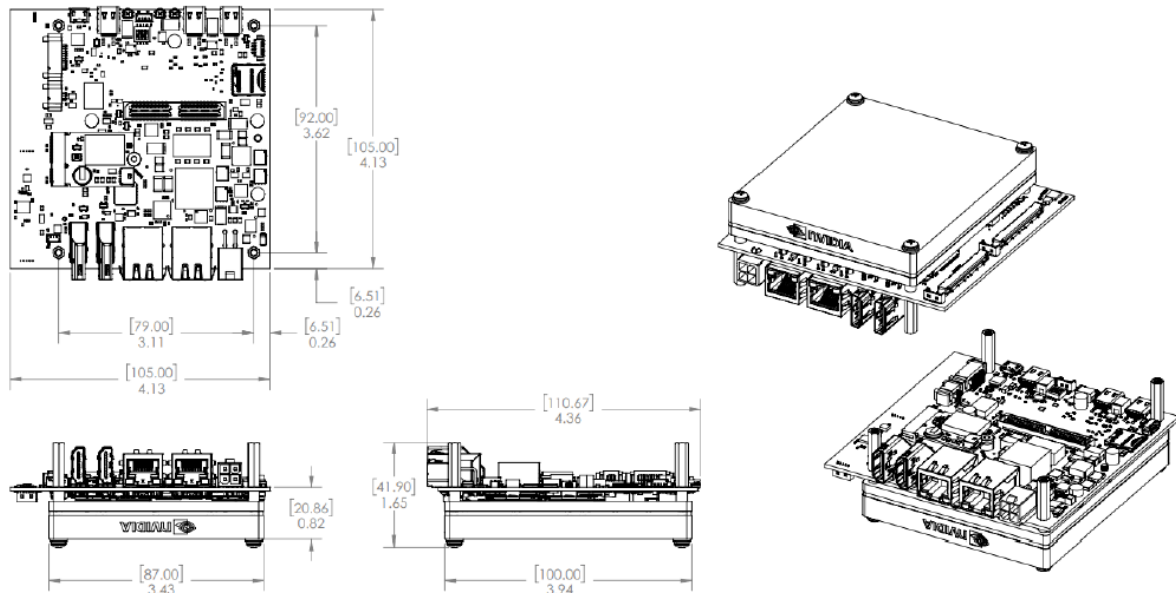

- AGX103-07 Example (Active Heatsink)

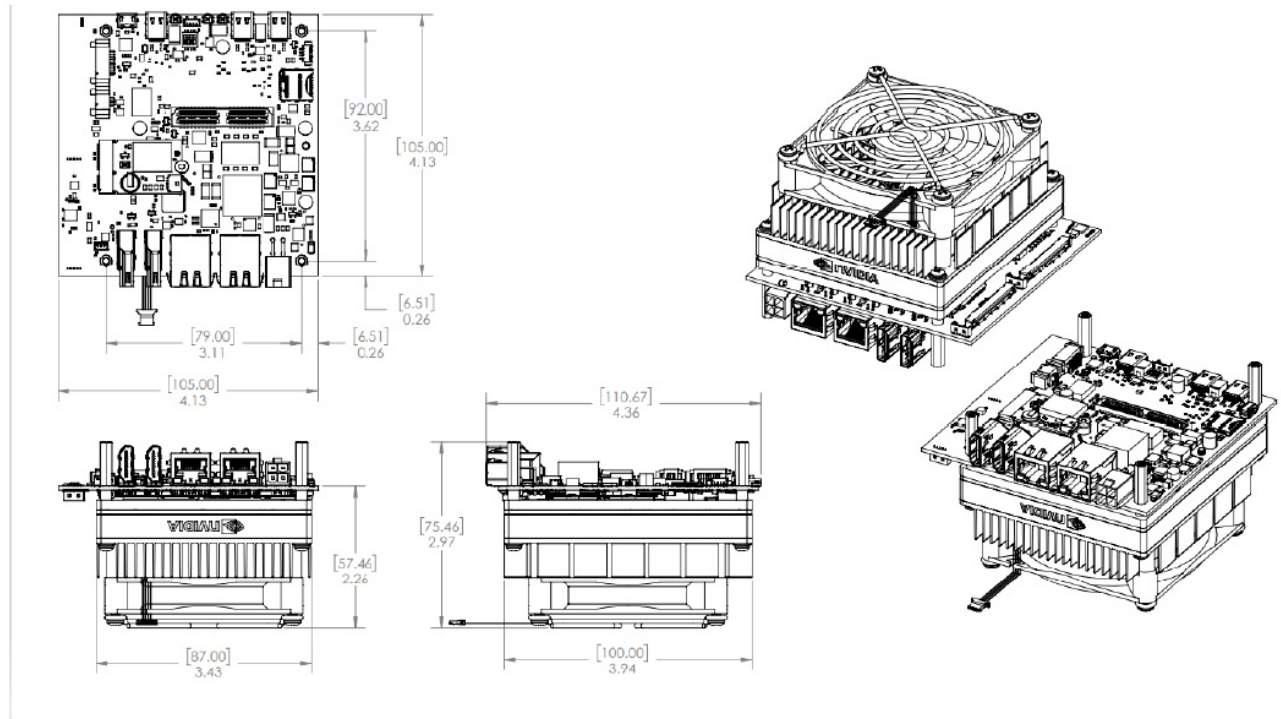

- AGX103-13 Example (Passive Heatsink)

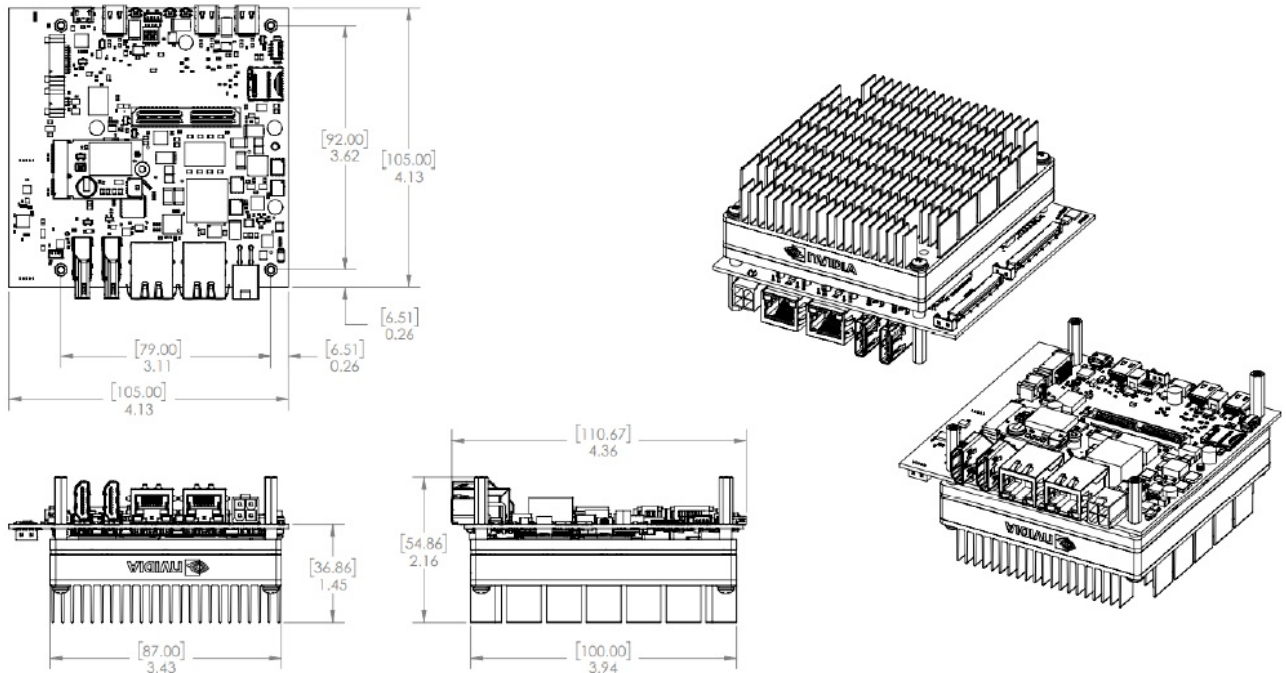

**Document:** CTIM-00082

**Revision:** 0.04

**Date:** 2022-12-01

Rogue-X – NVIDIA® Jetson AGX Xavier™ Carrier Users Guide

[www.connecttech.com](http://www.connecttech.com)

## Documents / Resources

	<p><a href="#">CONNECT TECH Rogue-X NVIDIA Computer on Module</a> [pdf] User Guide  Rogue-X NVIDIA Computer on Module, Rogue-X, NVIDIA Computer on Module, Computer on Module, on Module, Module</p>
--	--

## References

- [Connect Tech Inc., Embedded Computing Experts](#)
- [Connect Tech Inc., Embedded Computing Experts](#)
- [Support - Connect Tech Inc.](#)
- [Resource Center - Connect Tech Inc.](#)
- [Connect Tech Inc., Embedded Computing Experts](#)
- [User Manual](#)