

  
**Envisalink 4 C2GIP  
Internet Module**



# connect2go Envisalink 4 C2GIP Internet Module Installation Guide


[Home](#) » [connect2go](#) » connect2go Envisalink 4 C2GIP Internet Module Installation Guide 

## Contents

- [1 connect2go Envisalink 4 C2GIP Internet Module](#)
- [2 Product Information](#)
- [3 INSTALLATION](#)
- [4 LED Descriptions](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)



**connect2go Envisalink 4 C2GIP Internet Module**

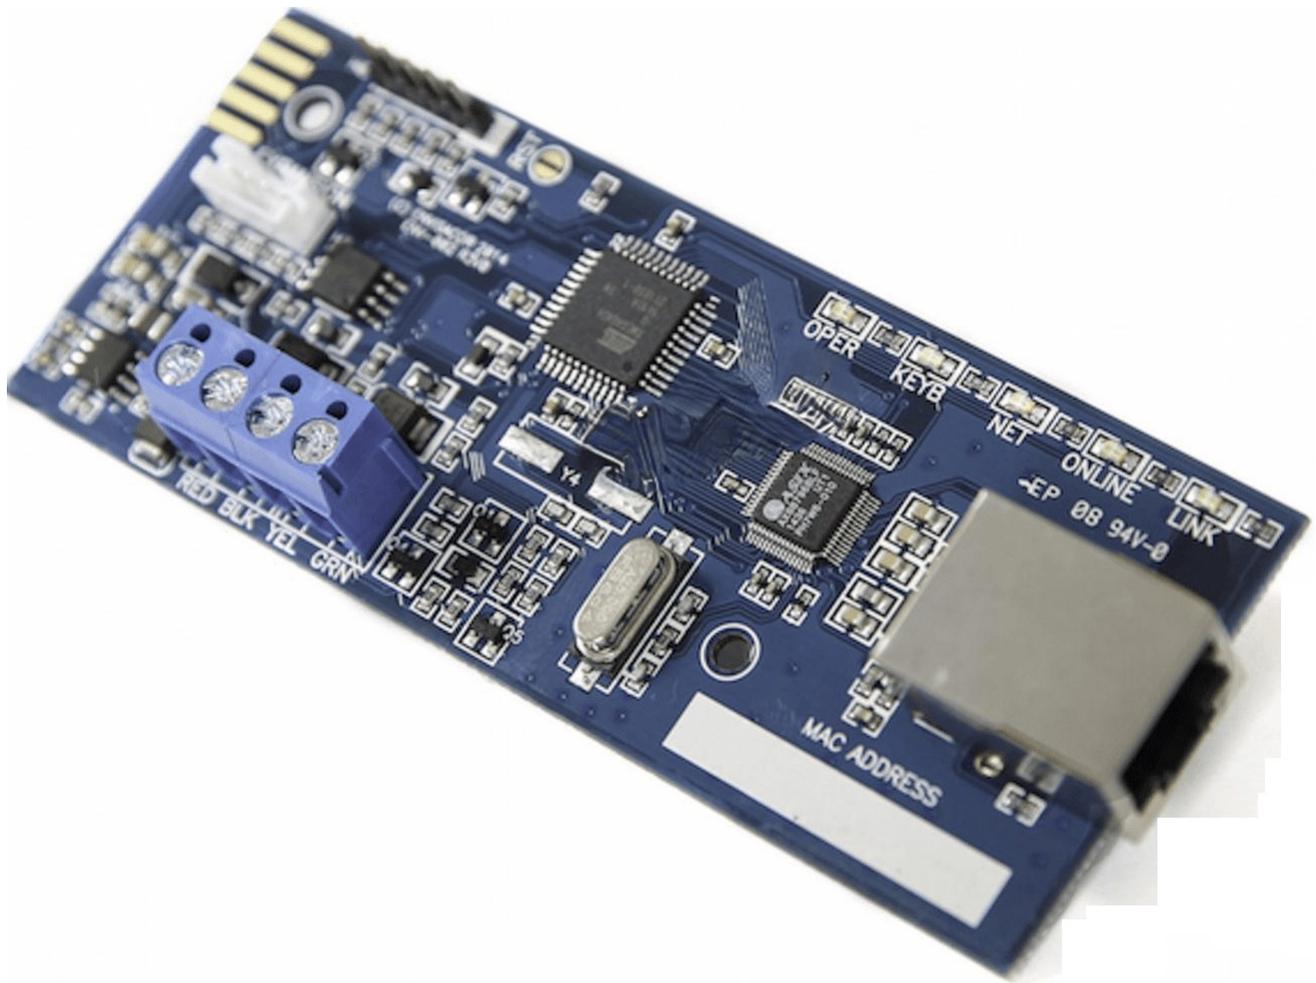

## Product Information

- Product Name: Envisalink 4 (C2GIP)
- Power Draw: 70mA

## Product Usage Instructions

### Connect2Go Account Setup

1. Go to <https://www.connect2go.com> and select Dealer Signup to create a dealer account.
2. Log in to your dealer account.
3. Create a client.
4. Add the device to the client's account using the 12-digit ID on the device.

### Module Connection to Control Panel

1. Record the 12-digit ID from the sticker on the module.
2. Connect the module to the Tip/Ring terminals.
3. Connect an 8-conductor UTP cable with an RJ-45 connector to an available router, switch, or hub port with a DHCP server available.
4. Restore power to the system.

### Panel Programming (Vista Panels)

For Vista panels, navigate to the Support page in your dealer account and follow the Instructions For Enrolling Honeywell Panels option.

### **Envisalink Local Access**

1. To access the web interface on the module, from a browser on the same internal network, type 'envisalink' or the IP address of the module.
2. The default username is 'user,' and the default password is the last 6 digits of the MAC ID.

### **Expansion**

To avail of additional ports, follow the LED descriptions provided in Table 1.

NOTE: For Honeywell users, it is important that you create the user's Connect2Go account and activate the module on the account before you connect it to the panel. [Connect2Go Account For Website & Mobile Access](#)

## **INSTALLATION**

1. Go to <https://www.connect2go.com>, navigate to the bottom of the and select Dealer Signup to create a dealer account.
2. Log in to your dealer account.
3. Create client.
4. Add the device to the client's account using the 12-digit ID on the device.
5. For more detailed instructions, from inside your dealer account, navigate to the Support page and select Start with this Step-by-Step Dealer setup guide at the

### **To Connect The Module To The Control Panel**


Note: Before installing record the 12 digit ID from the sticker on the module. You will need it during activation.

1. Disconnect power from the panel.
2. Connect the module to the Keypad bus terminals of the panel. Caution: Do not connect the module to the Tip/Ring terminals, or you may damage the device.
3. Connect an 8-conductor (not supplied) UTP cable with an RJ-45 connector to an available router, switch, or hub port with a DHCP server available.

### **Restore power to the system.**

NOTE: On DSC systems, the Envisalink 3 automatically enrolls with the security system as PC5400/DVACS module Panel Programming (Only for Vista panels. Not required for DSC panels)

1. From inside your dealer account, navigate to the Support page and choose the Instructions For Enrolling Honeywell Panels option. Envisalink Local Access
2. To access the web interface on the module, from a browser on the same internal network type "envisalink" or the IP address of the module.
3. The default username is "user", and the default password is the last 6 digits of the MAC ID

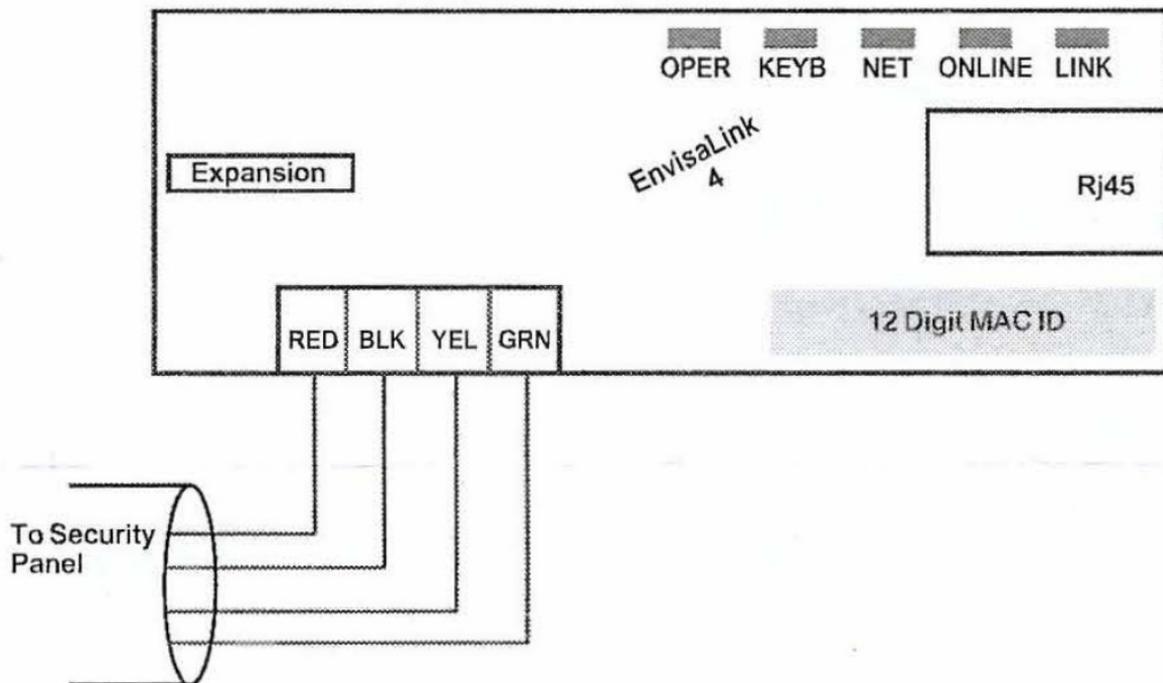

## LED Descriptions

Table 1 : LED Descriptions

Name	Description
<b>OPER</b>	<b>SOLID GREEN</b> – Power and functioning. <b>OFF</b> – Not functioning or not powered properly.
<b>KEYB</b>	<b>SOLID GREEN</b> – Panel connected correctly <b>FLASHING</b> – Panel not connected (DSC firmware installed) <b>OFF</b> – Panel not connected (Honeywell firmware installed)
<b>NET</b>	<b>SOLID GREEN</b> – IP obtained through DHCP <b>FLASHING</b> – Module programmed to static IP <b>OFF</b> – Module cannot obtain IP from DHCP server (router)
<b>ONLINE</b>	<b>SOLID GREEN</b> – The Module is communicating with servers and the account is properly set up. <b>FLASHING</b> – Module is communicating with servers but no account exists.
	<b>OFF</b> – The Module is not communicating with servers.
<b>LINK</b>	<b>SOLID GREEN</b> – Ethernet link established. It will flicker with RX/TX activity. <b>OFF</b> – No ethernet link.

## FAQ

- **Q: How do I enroll Envisalink 3 with DSC systems?**
  - A: Envisalink 3 automatically enrolls with DSC systems as PC5400/DVACS module.
- **Q: What should I do for Honeywell systems before connecting Envisalink?**
  - A: Create the user's Connect2Go account and activate the module on the account before connecting it to the panel.

## Documents / Resources

	<p><a href="#">connect2go Envisalink 4 C2GIP Internet Module</a> [pdf] Installation Guide Envisalink 4 C2GIP Internet Module, Envisalink 4 C2GIP, Internet Module, Module</p>
---	---

## References

-  [Connect2Go | Home](#)
- [User Manual](#)

### Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.