(≋CONSORT

CRXSLWIFI-01

Wireless

Controller



CONSORT CRXSLWIFI-01 Wireless Controller User Guide

Home » Consort » CONSORT CRXSLWIFI-01 Wireless Controller User Guide

Contents

- 1 CONSORT CRXSLWIFI-01 Wireless Controller
- **2 Product Usage Instructions**
- 3 FAQ
- 4 Safety and Care
- **5 Introduction**
- 6 Getting to know your CRXSLWIFI wireless controller
- 7 Buttons
- 8 Pairing with heaters
- 9 Installation
- **10 Electrical Connections**
- 11 Basic Operation
- 12 Set up Menu
- 13 Setting the automatic program schedule
- 14 Setup instructions
- **15 Copy Day Function**
- 16 Documents / Resources
 - 16.1 References



CONSORT CRXSLWIFI-01 Wireless Controller



Product Specifications

• Model: CRXSLWIFI-01

• Manufacturer: Consort Equipment Products Limited

• Warranty: 1 year against faulty materials or workmanship

· Control: Wireless

· Compatibility: Can control any 'RX' or 'SL' heater

Product Usage Instructions

Warnings

The controller is NOT intended for use by persons with reduced physical, sensory, or mental capabilities unless properly instructed. Children should be supervised to prevent misuse.

Pairing with Heaters

The CRXSLWIFI must be paired with each heater to enable functionality. Follow the instructions provided in the manual for pairing.

Getting to Know Your CRXSLWIFI Wireless Controller

The controller features various buttons including MENU/MODE, STANDBY, Increase/Decrease buttons for adjusting settings and temperature. Familiarize yourself with the displayed symbols for different modes and functions.

Buttons Functionality

• **MENU/MODE button:** Short press cycles through operating modes, long press is for advancing programs and accessing menus.

- STANDBY button: Used to activate or deactivate heating.
- Increase/Decrease buttons: Adjust temperature and values during normal use or controller setup.

Pairing with the CONSORT CONNECT App

To pair with the CONSORT CONNECT app, download the app and follow the instructions. Press and hold the STANDBY button on the controller until 'PAIR' is displayed.

FAQ

- · How do I know if my CRXSLWIFI controller is paired with my heaters?
 - Ensure that each heater is paired individually with the controller. The display on the controller should indicate successful pairing.
- Can the CRXSLWIFI controller control multiple heaters \simultaneously?
 - Yes, the CRXSLWIFI Wireless Controller can control multiple 'RX' or 'SL' heaters at the same time.

Installation & Control Guide for CRXSLWIFI-01 Wireless Controller

All electrical appliances produced by the Company are guaranteed for one year against faulty materials or workmanship. This applies only if the appliance has been used for purposes in accordance with the instructions provided and has not been connected to an unsuitable electricity supply, or subject to misuse, neglect, damage or modified or repaired by any person not authorised by us. This guarantee is offered to you as an extra benefit and does not affect your legal rights. The correct electricity supply voltage is shown on the rating label attached to the appliance. Reasonable care has been taken to ensure that this guide is accurate at the time of printing. In the interests of progress the Company reserve the right to vary specifications from time to time without notice.

CUSTOMER HELPLINE

Should you need any advice on the use of your new Consort product please contact our Helpline:

Consort Equipment Products Limited

- Thornton Industrial Estate, Milford Haven, Pembrokeshire, SA73 2RT
- Tel: 01646 692172 Fax: 01646 695195
- Email: technical@consortepl.com
- Web: www.consortepl.com
- Operation hours: Mon to Thu 8.30 am to 4.30 pm | Fri 8.30 am to 3.30pm BS EN ISO 9001 Registered Company No FM12671

Warnings

- Do NOT handle the controller with wet hands.
- Do NOT cover the controller.
- Do NOT use the controller if damaged.
- Operating temperature range-10 to +40°C.


Safety and Care

The controller is NOT intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge unless they have been given instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the controller.

Introduction

The CRXSLWIFI must be paired to each heater, otherwise the heaters will not work (see next page). The CRXSLWIFI Wireless Controller can control any 'RX' or 'SL' heater, including multiple products at the same time.

Getting to know your CRXSLWIFI wireless controller

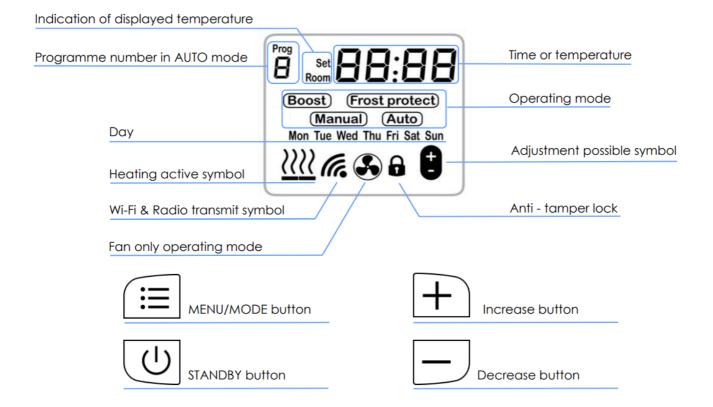


Buttons



- Short press: Cycle through operating modes BOOST, MANUAL, AUTO, FROST, FAN
- Long press: Used for advancing the programme, setting the time and accessing the programming menu.



Use this button to activate or deactivate the heating.

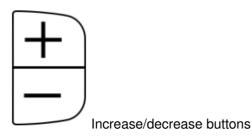

 Increase/decrease buttons are used to change the set temperature when in normal use or to change value when in setting up the controller.

Pairing with heaters

This must be done, otherwise, the heaters will not work.

- Ensure power to the heater is OFF.
- Turn power to the heater ON.
- Within 20 seconds, press and hold the 'MENU/MODE' and '+' buttons on the controller until the display shows
 'PAIR'
- The heating will switch on. If the heating is set to off, after 4 seconds the heating will turn off.
- The heating is now ready to be used.

Pairing with the CONSORT CONNECT app

Download CONSORT CONNECT app and follow the instructions. On the controller, press and hold the STANDBY button until display shows 'PAIR







Installation


The controller must be wall mounted.

Choosing a position in a room

When installing CRXSLWIFI, a suitable position in the room should be chosen. Ideal installation height is 1.2m – 1.6m. Avoid areas with draught or direct sun. Do not position CRXSLWIFI above or close to the heaters or other heat sources. Damp areas or areas where CRXSLWIFI can be mechanically damaged should also be avoided. As the CRXSLWIFI is measuring room temperature it has to be installed in the same room as heaters.

Mounting the controller

The CRXSLWIFI was designed to fit any standard 2 gang back box with a minimum depth of 32mm. Use the supplied screws to secure controller on the back box. Avoid overtightening

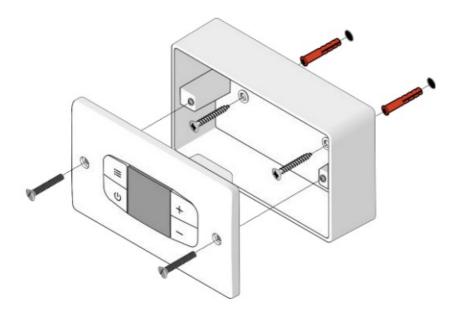

Electrical Connections

Electrical installation should be carried out by a competent installer in accordance with the latest edition of the IEE Wiring Regulations, (BS.7671), and any relevant Local Authority Bye- Laws. The CRXSLWIFI must be permanently connected to the electricity supply via a double pole switch having 3mm gap on each pole. There are no exceptions. A switched Fused Connection unit to BS.1363. Part 4 is a recommended mains supply connection accessory to ensure compliance with safety requirements applicable to fixed-wiring installation.

Heating Not Working

- Check that the power is available to the CRXSLWIFI and heater.
- Check the LCD display isn't blank and there is a green light on the heater.
- Is CRXSLWIFI paired with the heater?
- Check that the overheating protection on the heater has not operated. Follow the instructions given under the section headed 'Overheating protection'.
- Check that the fuse in the fused connection unit has not blown. This fuse can be replaced.
- Should none of the above remedies work, then please telephone the helpline number shown in these instructions. Do not attempt


Basic Operation

The CRXSLWIFI has 5 standard operating modes:

BOOST, MANUAL, FROST PROTECT, AUTO and FAN.

Each mode can be selected by pressing the MENU button to cycle through the options. The cycle sequence will always start with BOOST mode followed by MANUAL, FAN, FROST PROTECTION and AUTO. The FAN mode is only available if there is no demand for heating. If the CRXSLWIFI shows a heating symbol the FAN mode isn't available. FAN mode only works with compatible heaters.

The CRXSLWIFI also has a STANDBY MODE. To enter/exit this mode, press the standby button. In STANDBY MODE, the heating will not be activated and the display will show time and day.

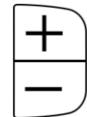

To adjust the temperature in any heating mode use 'PLUS' or 'MINUS' buttons.

The CRXSLWIFI has a battery backup which will keep the correct time and allow for the change of hour associated with British Summer Time. The CRXSLWIFI will also remember all time schedules and settings even if the power is interrupted.

Boost Mode

The boost feature increases the room temperature for 15 minutes. To amend the set temperature when in BOOST mode, use the + and – buttons to change the temperature. Once the temperature is set, you can leave the display to return to the main screen and the settings will be saved. After 15 minutes, the CRXSLWIFI will return to the previous operating mode.



Manual Temperature Mode



In MANUAL mode, the heater maintains a chosen set temperature between 4° C and 35° C. To amend the set temperature when in MANUAL mode, use the + and – buttons . Once the temperature is set, you can leave the display to return to the main screen and the settings will be saved. When the room temperature reaches the set temperature, the heating will be deactivated.

Frost Protection Mode



In FROST PROTECT mode, the heater maintains a chosen set temperature between 4°C and 15°C. To amend the set temperature when in FROST PROTECT mode, use the + and – buttons. Once the temperature is set, you can leave the display to return to the main screen and the settings will be saved.

Auto Control



Mode In this mode, the heater will follow the week's time/temperature program. The temperature can be temporarily overridden in AUTO mode by using the + and – buttons to set the new temperature. The new set temperature will be then maintained until the next program step.


Fan Mode



The FAN mode is only available if there is no demand for heating. If the CRXSLWIFI shows heating symbol the FAN mode isn't available. FAN mode only works with compatible heaters.

Heat Symbols

Every time there is a demand for heat, the display will show the heat icon. The symbols shown below are used to represent full heat and half heat. The half heat only works with 'RX' heaters. The CRXSLWIFI will set heating to half heat automatically when the room is almost at the required temperature. This will stop temperature overshooting.

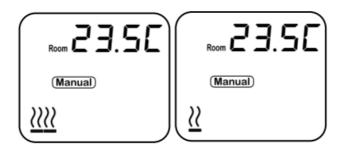

Full heat Half heat

Keys Locking

Press and hold the + and – buttons together for 5 seconds. The display will show the symbol. Repeat the step to unlock.

Open Window Detection

Ensuring you don't waste energy by heating the outside world, the heater is equipped with optional open / closed window detection. The heater recognises sudden drops in temperature when a window or a door is opened and turns the heating off.



When the window is closed, the heater will automatically detect a temperature rise, and switch itself back on. Once enabled in the setup menu, the open window detection is fully automatic and does not require any human intervention to be activated. When open window detection has been triggered, the heat symbol will flash on/off as shown below. The system has been factory set to default time and temperature values. If necessary, all values can be adjusted. When the heating is on, open window detection sensor will automatically switch the heater off when it detects a fall in temperature of 2°C in less than 10 minutes (the temperature can be changed in menu 8 and time in menu 7). If a temperature rise of 2° C in less than 30 seconds is detected, the heater will switch itself back on (the temperature can be changed in menu A and time in menu 9).

Setting The Time and Day

Once the CRXSLWIFI is connected to Wi-Fi it will set the time and day automatically. When connected to Wi-Fi It will automatically change the clock to adjust the British summer time. Should you need to alter the time, see the section "set-up menu".

Set up Menu

- 1. Press and hold 'MENU' and '-' together for 5 seconds.
- 2. The display will enter the setup menu.
- 3. Use '+' and '-' to change a value.

- 4. Use MENU to scroll between the settings.
- 5. Use the standby button to exit the setup menu
- 1. Temperature Calibration The temperature reading is factory calibrated but if for any reason it needs adjusting (better accuracy required, to suit particular position in the room etc.), the reading can be recalibrated in 0.5 degree steps.



- 2. Celsius / Fahrenheit
- Adjust fan speed
 (Select models only. Does not apply in manual control mode)
- 4. Set minimum temperature
- 5. Set maximum temperature
- 6. Enable/disable open window detection




- 7. Open window detection time
- 8. Temperature drop in open window detection time
- 9. Closed window detection time (minutes)
 - A Temperature rise in closed window detection time
 - B Program mode select.

Choose between a 7- day, 5-day 2-day or a 24-hour timer.



- C Select operating mode:
 - 1. = temperature control
 - 2. = manual control
 - 3. = local temperature control (Specific heaters only)

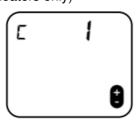

• D – Time and Date setting.

The year is shown first, use + and - to change, then press the menu to change date and time.

• E - Backlight Setting

If this is OFF the backlight will turn off after 15 seconds. The display must be activated before using the controls. If this is ON the back light will be permanently on when the heater is active.





Setting the automatic program schedule

Each day has 24 time periods, one period for each hour of the day. To set up your program, you must select the required temperature for each time period. Once the day has been selected, the screen will show 2 numbers. The first number represents the hour of the day (10 would represent the 10am-11am heating period) and the second number represents the temperature. For example, should the display read 10:22, the heater would maintain a temperature of 22°C between 10 am and 11 am. Once the time has passed 11 am, it will move to program 11.

Setup instructions

- 1. Press and hold MENU for 5 seconds to enter the program setup menu.
- 2. The day will be flashing, this is the select day menu. Navigate between the days Using the + and buttons.
- 3. Once the required day is flashing press MENU to select it, this brings you to the setup menu for the selected day.
- 4. The display will start with program 0 (midnight 1 am). Use the + and buttons to increase/ decrease the temperature.
- 5. Once you have set the temperature, use the MENU or STANDBY button to change to the next time period.
- 6. When you advance/return beyond the program range (Prog 0-23) the timer will return to the select day menu.

Use these steps to set the temperature for every hour of every day. It is important to set every hour to avoid the heater operating during unwanted hours.

Copy Day Function

If you require the same set of programs throughout the week, a 24 hour timer is available. This will use the same program every day. A 5-day + 2 day timer is also available. This will use the same programs Monday- Friday, and separate programs Saturday and Sunday. These modes are enabled in the setup menu, as explained in the "setup menu" section. When the timer is set in setup menu as 7 day, it is possible to copy a program from one day to another. To do this, follow the steps;

- Step 1: Press and hold MENU for 5 seconds to enter the program setting.
- Step 2: Press and hold STANDBY for 5 seconds to enter the copy day setting.
- Step 3: Use the MENU button to select the day to copy the programs from. 1= Monday, 2 = Tuesday and so on.
- Step 4: Use the + and buttons to select the day to copy the programs to.

 Step 5: Press the STANDBY button to copy the programs. The 'TO' will flash to confirm the programs have been copied

Local temperature control mode

Local temperature control mode is only compatible with certain heaters. Unlike normal temperature control mode, the temperature measured on the controller does not affect the heater output. Instead, the CRXSLWIFI simply sends the target temperature to the heater. The heater uses this as the set temperature. It uses a local temperature sensor to measure the room temperature at the heater location itself. When the local temperature reaches the set temperature, the heater will switch off. Refer to the section 'set-up menu' for information on how to access local temperature control mode.

Manual control mode

Manual control mode allows the heat and fan settings to be selected manually regardless of the room temperature. To operate the manual control mode, activate the display and press the MENU/MODE button. The fan speed can now be set using the + and – buttons. Press the MENU/MODE button again. The heat setting can now be set using the + and – buttons

Declaration Of Conformity

In accordance with UK Government Guidance. WE HEREBY CERTIFY THAT THE APPLIANCES DETAILED HEREON HAVE BEEN INSPECTED AND TESTED, AND CONFORM TO THE REQUIREMENTS OF THE FOLLOWING UK STATUTORY INSTRUMENTS WHERE APPLICABLE: Electrical Equipment (Safety) Regulations 2016 SI. 2016 1101 Electromagnetic Compatibility Regulations 2016 SI. 2016 No. 1091 Radio Equipment Regulations 2017 SI. 2017 No. 1206 The Ecodesign for Energy Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019. SI. 2010 2617 The Restriction of use of Certain Hazardous Substances. SI. 2012 No. 3032 The Waste Electrical and Electronic Equipment Regulations 2013. SI. 2013 No. 3113

Transposed standards used:

- BSEN55014 (2006)
- BSEN301 489.1 & .3
- BSEN300 220.1 & .2
- BSEN60 730.2.9
- BSEN 60335.1 (2012)
- BS EN 60335.2.30 (2009)

PART NUMBER AND DESCRIPTION OF APPLIANCE: CRXSLWIFI-01 NAME OF RESPONSIBLE PERSON: JASON EVANS POSITION: PRODUCTION AND QUALITY MANAGER DATE: 08/08/23

CONSORT EQUIPMENT PRODUCTS LTD.

- THORNTON INDUSTRIAL ESTATE, MILFORD HAVEN, PEMBROKESHIRE, SA73 2RT. UK
- TEL: +44 1646 692172 FAX: +44 1646 695195.
- E-MAIL: ENQUIRIES@CONSORTEPL.COM
- WWW.CONSORTEPL.COM

Documents / Resources



<u>CONSORT CRXSLWIFI-01 Wireless Controller</u> [pdf] User Guide CRXSLWIFI-01 Wireless Controller, CRXSLWIFI-01, Wireless Controller, Controller

References

- € Consort Claudgen Electric Heating Solutions
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.