

# H11883 Contest Architectural RDM Updater Controller User Guide

Home » Contest » H11883 Contest Architectural RDM Updater Controller User Guide 🖺



Contest Architectural RDM Controller Updater



**USER GUIDE** 

Make sure you get the latest news and updates about the CONTEST® products on :  $\underline{www.architectural-lighting.eu}$ 

#### **Contents**

- 1 Safety information
- 2 Feature
- 3 Description
- 4 Menu details
- 5 Technical data
- 6 Documents /

Resources

**6.1 References** 


# Safety information

# Important safety information

Any maintenance procedure must be performed by a CONTEST authorised technical service. Basic cleaning operations must thoroughly follow our safety instructions.

# Symbols used

IMPORTANT	This symbol signals an important safety precaution.
WARNING	The WARNING symbol signals a risk to the user's physical integrity. The product may also be damaged.
CAUTION	The CAUTION symbol signals a risk of product deterioration.

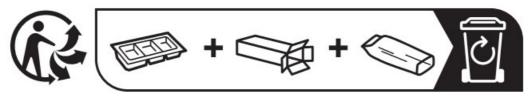

#### Instructions and recommendations

1. Please read carefully:

We strongly recommend to read carefully and understand the safety instructions before attempting to operate this unit.

2. Please keep this manual:

We strongly recommend to keep this manual with the unit for future reference.

3. Operate carefully this product:

We strongly recommend to take into consideration every safety instruction.

4. Follow the instructions:

Please carefully follow each safety instruction to avoid any physical harm or property damage.

5. Heat exposure:

Do not expose to sunlight or heat for long periods.

#### 6. Electric power supply:

This product can only be operated according to a very specific voltage. These information are specified on the label located at the rear of the product.

#### 7. Cleaning precautions:

Unplug the product before attempting any cleaning operation. This product should be cleaned only with accessories recommended by the manufacturer. Use a damp cloth to clean the surface. Do not wash this product.

8. This product should be serviced when:

Please contact the qualified service personnel if:

- Objects have fallen or liquid has been spilled into the appliance.
- The product does not appear to operate normally.
- The product has been damaged.
- 9. Transportation:

Use the original packaging to transport the unit.



# Recycling your device

- As HITMUSIC is really involved in the environmental cause, we only commercialise clean, ROHS compliant products.
- When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

#### **Feature**

VRDM-CONTROL is a remote RDM control box (VRDM-Control) that enables it to perform all the various settings on the projectors:

- · Address a fixture in DMX
- · Modify DMX mode
- · Access to a Master Slave mode, to eliminate the need for a DMX controller
- Direct access to different DMX channels to adjust color or launch a color preset / CCT or macro already built into the fixture.
- · Check fixture version
- · Perform updates on the fixture
- · Modify dimmer curve
- · Correct white balance
- View product hours

#### Package contents:


The packaging should contain the following:

• The box

- · The user guide
- 1 USB-C cable
- 1 micro SD card

# **Description**

1.

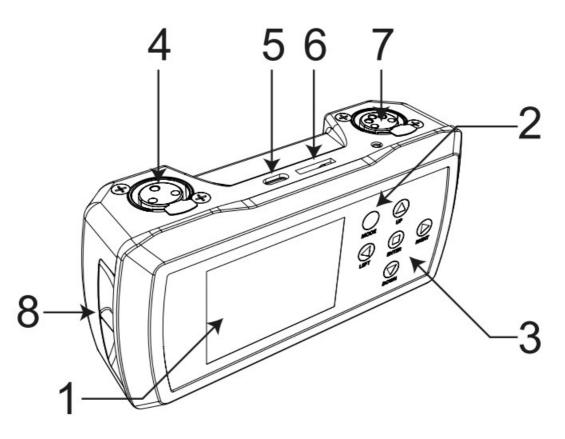

#### LCD display

Allows you to display the internal menu and view information about each connected projector.

#### 2. MODE key

It is used to start the controller and to switch it off (press for 3 seconds).

It can also be used to navigate backwards through the various menus.

3. Navigation keys

Allows you to move through the various menus, set the values for each section and confirm your choices with the ENTER key.

- 4. DMX input/output on 3-pin XLR
- 5. USB input (USB C)

When the USB-C cable is connected to a PC and the VRDM-Control is switched on, the box is recognized as a USB stick, and update files can be transferred. The USB connection also recharges the VRDMControl's battery.

6. Micro SD port


Insert the micro SD card into the reader.

The micro SD card contains the projector firmware update files.

- 7. DMX input/output on 5-pin XLR
- 8. Strap fastening notch

For attaching a wrist strap. This strap is not supplied.

#### Menu details

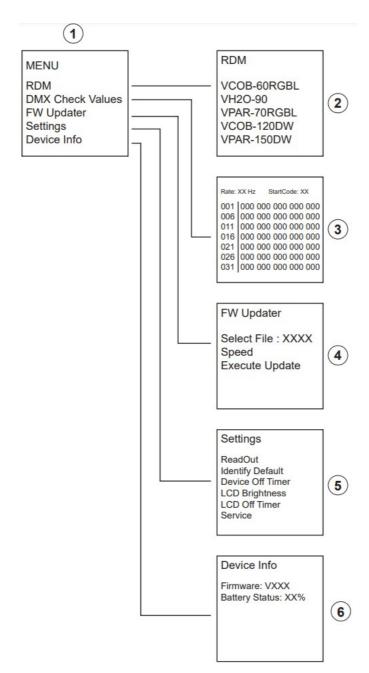

#### 4.1 - Sceen 1: Main menu

Press MODE to access this screen.

This menu gives access to the various VRDM-CONTROL functions.

Each function is described in detail below.

To return to the home screen, press MODE.

#### 4.2 - Screen 2 : RDM menu

This menu gives access to the various settings for each fixture connected to the DMX line..

VRDM-CONTROL checks the list of connected devices.

At the end of the check you'll see a list of devices.

- Use the UP and DOWN keys to select a device. The designated device flashes to identify it in the projector chain.
- Press ENTER to access the various settings for the selected fixture.

**Note:** Each type of projector has its own specific menu. Refer to your projector's documentation to find out which functions are specific to it.

- Use the UP and DOWN keys to select a function.
- Use the LEFT and RIGHT keys to access the sub-functions.
- · Press ENTER to activate modification.
- Use UP and DOWN keys to modify values.
- Press ENTER to validate.
- Press MODE to return to return back.

**Note:** when using a DMX splitter as part of an installation, it is imperative that the hardware is RDM-compatible, so that Versatile devices can be recognized by VRDM-Control.

The VRDM-Split H11546 will meet this need.

#### 4.3 - Screen 3 : DMX Check Values menu

This mode displays the values of incoming DMX channels when a device emitting a DMX signal is connected as input.

Note: In order to perform this operation, a male/male XLR plug must be used at the VRDM-CONTROL input.

- The display shows 103 lines of 5 channels.
- Channels with values of 000 are displayed in white, others in red.
- Use the UP and DOWN keys to scroll through the lines and view the different channels.

#### 4.4 - Screen 4 : FW Updater menu

This menu is used to update a device's firmware.

- Connect the VRDM-Control to the PC using the USB-C cable supplied.
- Switch on the VRDM-Control, a page will open on the PC as the box is recognized as a USB stick.
- Drag the update files to the SD card directory open on the PC.
- · Go to FW Updater mode.
- Connect the VRDM-CONTROL to the fixture using a DMX cable.
- Select the file to be sent to the projector.
- · Select the transfer speed :
- Fast : Standard speed to be used in most cases.
- Normal: Speed used when the update fails or if you're updating several devices. However, we strongly advise you to update only one projector at a time.
- Press ENTER to confirm. The display shows START/RETURN.
- Select RETURN: In case of error, nothing happens.
- Select START to start the update.
- Press ENTER to confirm: the display shows «Find Device» to indicate that communication with the projector is being prepared. Once the device is ready, the update starts automatically.
- When the update is complete, the display shows CONTINUOUS/FINISH.
- Select CONTINUE if you need to program the fixture with another file. Select the next file and start programming, then repeat these operations for all the files to be programmed.
- Select FINISH if you have finished programming. Communication with the projector will be interrupted and it will be reset.
- Go to the projector menu to check that the version displayed is the latest one.

#### Notes:

- Make sure your micro-SD card is formatted in FAT.
- If updates are required, download them from www.architectural-lighting.eu
- It is possible to update the firmware of the VRDM-CONTROL box by following the same process. This operation requires the use of two boxes and an XLR male / XLR male adapter.

#### 4.5 - Screen 5 : Settings menu

This menu is used to set VRDM-CONTROL parameters.

#### 4.5.1 : Readout :

Selects the unit in which DMX values are displayed: Percentage / Decimal / Hexadecimal.

#### 4.5.2 : Identify Default :

Enables or disables projector identification when in the RDM menu (4.2): If this option is set to OFF, the selected projectors will no longer flash.

#### 4.5.3 : Device Off Timer :

Enables or disables VRDM-CONTROL automatic shutdown.

# 4.5.4 : LCD Bightness :

Adjusts LCD brightness.

#### 4.5.4 : LCD Off Timer :

Allows you to set the time before the LCD screen switches off automatically: from OFF (no switch-off) to 30 minutes.

#### 4.5.5 : Service :

Allows you to return to factory settings and enter a password.

#### 4.5.5.1 : Factory reset :

Returns to factory settings: YES/NO.

Confirm with ENTER.

#### 4.5.5.2 : Factory reset :

Enter password: from 0 to 255.

Confirm with ENTER.

# 4.6 - Screen 6 : Device Info menu

Displays VRDM-CONTROL firmware version and battery level.

#### **Technical data**

Power supply: USB-C, 5 V, 500 mA
Input/outpout DMX: XLR 3 and 5 pins
Micro SD card: < 2 Go, FAT formatted</li>

• Weight: 470 g

• Dimensions: 154 x 76 x 49 mm

Because CONTEST® takes the utmost care in its products to make sure you only get the best possible quality, our products are subjects to modifications without prior notice. That is why technical specifications and the products physical configuration might differ from the illustrations.

Make sure you get the latest news and updates about the CONTEST® products on <a href="www.architectural-lighting.eu">www.architectural-lighting.eu</a> CONTEST® is a trademark of HITMUSIC S.A.S – 595 <a href="www.hitmusic.eu">www.hitmusic.eu</a>



# **Documents / Resources**



Contest H11883 Contest Architectural RDM Updater Controller [pdf] User Guide H11383-1, H11883, H11883 Contest Architectural RDM Updater Controller, Contest Architectural RDM Updater Controller, Architectural RDM Updater Controller, RDM Updater Controller, Updater Controller, Controller

#### References

- III MUSIC fabricant et distributeur en son & lumières
- User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.