



## Continal 39009-DTS Quantum Dial Thermostat Instructions

[Home](#) » [Continal](#) » Continal 39009-DTS Quantum Dial Thermostat Instructions 

### Continal 39009-DTS Quantum Dial Thermostat Instructions



Stylish and simple to use, with a clear LED status indicator, the Quantum dial thermostat gives you easy and accurate control. All this, plus silent switching and a modern, compact design.



## Contents

- 1 Thermostat mounting
- 2 Terminal connection
- 3 Switching bridges
- 4 Jumpers
- 5 Thermostat functions
- 6 Protection function
- 7 Product compliance and safety
  - 7.1 Product compliance
  - 7.2 Safety information
- 8 Want more information?
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts

## Thermostat mounting

Install the Quantum dial thermostat approximately 1.5m above the floor level. It should be mounted in a location where the thermostat is easily accessible and away from direct sunlight.


For wall mounting, mark the correct position on the wall then mount the rear case to the wall.





Terminal connection

**Note:** You can wire the thermostat directly to the Quantum wiring centre.

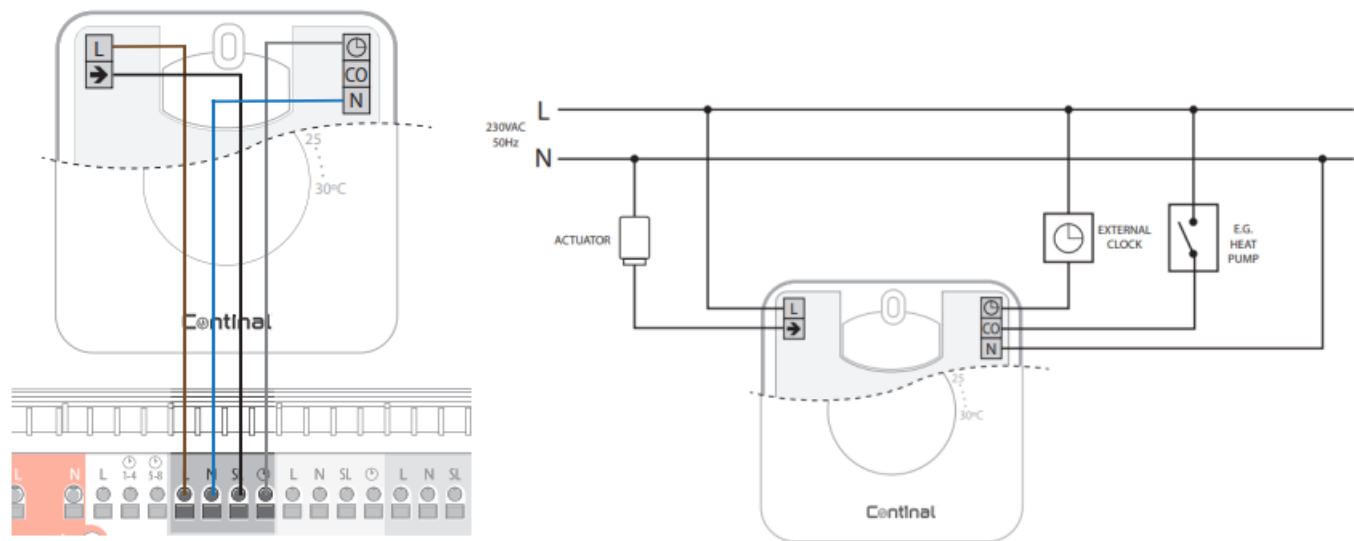

Switching bridges

Quantum dial thermostat switching bridges			
Switch	Feature	ON	OFF
VP	Valve protection feature		
PWM	Pulse-Width-Modulation		
	NSB Function (2° or 4°)		

Different features of the Quantum dial thermostat can be switched ON or OFF with the jumpers.

Jumpers

The jumpers from 1 to 5 represent the number of actuators that you can connect to the thermostat.

After the actuators are mounted, move the jumper to the correct number of actuators.

Depending on the amount of actuators used, you need to change the jumper position accordingly to compensate for the power consumption.





## Thermostat functions

NSB (Night Setback) Function

0V = NSB OFF

230V = NSB ON

The NSB signal is activated every 1 second. When the signal is received the setpoint temperature will be set at  $\pm 2^{\circ}\text{C}$  or  $\pm 4^{\circ}\text{C}$ .

## Protection function

### Heat cut off at high temperature:

When the room temperature is over  $36^{\circ}\text{C}$ , all heating outputs will be turned off.

### Valve protection:

Set the jumper to 'ON' to disable the function or on 'OFF' to enable it. Turn on the valve for 5 minutes every week to prevent damage to the valve.

### Sensor malfunction:

If the temperature sensor or temperature sensor compensation is open, the LED will flash alternate BLUE / RED.

## Product compliance and safety

### Product compliance

This product complies with the essential requirements and other relevant provisions of Directives 2014/30/ EU, 2014/35/EU, 2014/53/EU and 2011/65/EU.

### Safety information



Use in accordance with the regulations. Indoor use only. Keep your device completely dry. Disconnect your device before cleaning it with a dry cloth.

**Note:** Always isolate the AC mains supply before installing or working on any components that require 230 VAC supply

## Want more information?



Documents / Resources

<div><div><div>Quantum dial thermostat</div><div></div><div><p>Quantum dial thermostat is used with a heat (oil) boiler system. The Quantum dial thermostat allows you to control the temperature of the heating system and to set the temperature of the heating system.</p><p><b>Contents</b></p><ul style="list-style-type: none"><li>1. Installation instructions</li><li>2. Operating instructions</li><li>3. Troubleshooting</li><li>4. Technical data</li><li>5. Product literature and safety</li></ul></div></div></div>	<p><a href="#">Continal 39009-DTS Quantum Dial Thermostat</a> [pdf] Instructions 39009-DTS Quantum Dial Thermostat, 39009-DTS, Quantum Dial Thermostat</p>
<div><div><div>Quantum dial thermostat</div><div></div><div><p>Quantum dial thermostat is used with a heat (oil) boiler system. The Quantum dial thermostat allows you to control the temperature of the heating system and to set the temperature of the heating system.</p><p><b>Contents</b></p><ul style="list-style-type: none"><li>1. Installation instructions</li><li>2. Operating instructions</li><li>3. Troubleshooting</li><li>4. Technical data</li><li>5. Product literature and safety</li></ul></div></div></div>	<p><a href="#">Continal 39009-DTS Quantum Dial Thermostat</a> [pdf] Instructions 39009-DTS Quantum Dial Thermostat, 39009-DTS, Quantum Dial Thermostat</p>

References

- [🔗 Continal Underfloor Heating | Home](#)
- [🔗 Vloerverwarming in Nederland | Continal Vloerverwarming](#)