



Continental Edison CETA1000B Multi-Function Cooker Instruction Manual

[Home](#) » [Continental Edison](#) » Continental Edison CETA1000B Multi-Function Cooker Instruction Manual 

Contents

- [1 Continental Edison CETA1000B Multi-Function Cooker](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 PRODUCT DESCRIPTION](#)
- [4 USING THE APPLIANCE](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 PRODUCT SPECIFICATION](#)
- [7 CORRECT DISPOSAL OF THIS PRODUCT](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



Continental Edison

Continental Edison CETA1000B Multi-Function Cooker



IMPORTANT SAFEGUARDS

1. Read all instructions carefully before you use the appliance.
2. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
3. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. Keep the appliance and its cord out of reach of children aged less than 8 years.
5. This appliance shall not be used by children from 0 year to 8 years.
6. This appliance can be used by children aged from 8 years and above if they are continuously supervised.
7. This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance

in a safe way and understand the hazards involved.

8. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children. Children should not play with the appliance.
9. Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
10. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
11. The appliance must not be immersed.
12. The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
13. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
14. Children shall not play with the appliance.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
17. Check the voltage on the rating plate corresponds to the voltage on your mains supply mater.
18. To disconnect, turn temperature control dial to MIN, then remove plug from wall outlet.
19. Unplug the appliance before cleaning or when you do not use it.
20. Do not use the appliance outdoors.
21. Do not hang the cord on the table edge. Do not let the mains cord touch hot surface or hang down where a child could grab it.
22. Accessible surfaces may be high when the appliance is operating.
23. CAUTION: To protect against damage or electric shock, do not add food to or cook directly in the base.
24. CAUTION: To protect against damage or electric shock, make sure the temperature control dial is in the MIN position before plugging the unit into the electrical outlet.
25. Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the section "Care and Cleaning".
26. THIS APPLIANCE IS NOT INTENDED FOR DEEP FRYING OR GRILLING FOODS.

PRODUCT DESCRIPTION



1. Tagine lid
2. Pot
3. Base
4. Plate
5. Steam tray
6. Indicator light
7. Thermostat

USING THE APPLIANCE

1. Remove all packing material and any stickers.
2. Wipe the product and accessories with a damp cloth or sponge to remove any dust. Wipe dry with a soft cloth or paper towels.
3. Select a location where the appliance is to be used, leaving enough space between back of unit and wall to allow heat to flow without damage to cabinets and walls.
4. Plug in a standard electrical socket, the power red indicator will turn on. You can clockwise rotate the temperature knob between MIN – HIGH. If the temperature knob is in MIN position, the plate will not be heating any more. For the first use it is better to apply some oil or grease to the hot pot or plate.
5. . Important: The hot pot and cooking plate will be very hot. Caution should be taken to prevent the hands from contacting with them.
6. To preserve the hot pot's nonstick coating, always use nylon, plastic, wooden or rubber utensils.
7. **WARNING: NEVER** cut food in the hot pot, or on the plate's cooking surface.
8. After use, unplug the unit from the electrical outlet and allow it to cool to room temperature before cleaning.
9. Caution: Do not immerse the appliance into any liquid. The appliance cannot be immersed!

CLEANING AND MAINTENANCE

Important: Unplug and allow it to cool before cleaning. Never immerse the machine in water or any other liquid.

1. Wipe the body, pot, pan, steam cooker basket and lid with a damp cloth and a non-abrasive soap or dishwasher detergent. Wipe with a clean, soft, damp cloth and towel dry.
2. Storage: Store the cleaned machine in a clean, dry place.
3. Never store while it is still hot or still plugged in.
4. Never use abrasive pads or alcohol.
5. Important: Never wrap the power cord tightly around the appliance. Do not put any stress on the power cord where it enters the unit, as this could cause it to fray and break.

PRODUCT SPECIFICATION

- Item reference: CETA1000B
- Model: XJ-10103
- Rated voltage: 220-240V~, 50/60Hz
- Power consumption: 1000W
- Protection class: I
- Instruction manual version: V1

CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


Continental Edison

120-126 Quai de Bacalan CS 11584 33000 Bordeaux

IMPORT BY:

A.M.C. 123, QUAI JULES GUESDE 94400 VITRY SUR SEINE France

Documents / Resources

 <p>CETA 1000B MULTI-FUNCTION COOKER - APPAREIL À VAPEUR ÉLECTRIQUE Manuel d'instructions - Instruction Manual</p>	<p>Continental Edison CETA1000B Multi-Function Cooker [pdf] Instruction Manual CETA1000B, Multi-Function Cooker, Cooker, CETA1000B</p>
---	--

References

-  [Continental Edison, expert en équipement électroménager et high tech](#)

