



Continental SVI-QXMFGE04 Token and Token Plus Fob User Manual

[Home](#) » [Continental](#) » Continental SVI-QXMFGE04 Token and Token Plus Fob User Manual 



SVI-QXMFGE04 Token and Token Plus Fob User Manual

Contents

- [1 SVI QXMFGE04 Token and Token Plus Fob](#)
- [2 System configuration](#)
- [3 Smart Key Fob button operation](#)
- [4 FCC/IC Compliance Statement](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

SVI QXMFGE04 Token and Token Plus Fob

Document	User Manual for TOKEN/TOKEN PLUS Fob
Project	QX 24MY FOB 3B/4B
Model name :	SVI-QXMFGE04
Version:	1
Date:	Oct. 13. '22
Engineering change order-No.:	
Design Freeze No.:	
Number of pages:	6
Filename	

Editor: KS.Kim	Document name	Project code
Version: 1.0 Jul. 22. 2022 File: ECO / DF No.	Identification No. : Document No.	Page 2 / 6

System configuration

1.1 Scope of SMART KEY SYSTEM

The System offers the following features:

- passive access for two doors, driver side and passenger side as well as trunk/tailgate.
- passive start after interior detection of the SMART KEY FOB (without interior trunk and hat shelf detection).
- LF-RF communication.
- passive access trunk/tailgate via the trunk lid switch at the trunk.
- max. 4 SMART KEY FOBs can be handled by the system.
- communication to the engine management system via a single line interface.
- communication to the ESCL via a single line interface.

1.2 Short description of the SYSTEM

1.2.1 General Definition of SMART KEY

The SMART KEY system is a system that allows the user to access and operate a vehicle in a very convenient way. To access the vehicle no traditional key or remote control unit is needed.

The user carries a SMART KEY FOB which itself does not require any conscious actions by the user (e.g. operate a button).

After being triggered the vehicle sends out a request in a limited range. If the SMART KEY FOB receives this request, it automatically sends a response to the vehicle. Then the system decides whether to perform a particular action (unlocking, locking...) or remain inactive.

1.2.2 Wireless Communication

Electromagnetic waves are used to exchange information between the vehicle and the SMART KEY FOB. Both, vehicle and SMART KEY FOB are equipped with a transmitter, a receiver and several antennas.

1.2.3 Concept Description

With this concept it is possible to have a set of interior antennas that covers the vehicle's interior and a set of exterior antennas that covers the vehicle's exterior. For an unambiguous separation between the vehicle's interior and exterior it is sufficient that at least one area is covered exactly by the corresponding operating ranges of the antennas.

The functions of the SMART KEY system have to be provided in a clearly defined and limited range. For the up-link from the vehicle to the SMART KEY FOB, a magnetic field.

Editor: KS.Kim	Document name	Project code
Version: 1.0 ECO / DF No. Jul. 22. 2022 File:	Identification No. : Document No.	Page 3 / 6


with a frequency of 125 kHz and ASK modulation is used. Inductive antennas in and at the vehicle radiate the electromagnetic energy.

Technical aspects of 125 kHz – magnetic field:

- virtually no reflections,
- cubical decrease of field strength → allows good range control,
- released frequency band (ISM),
- high penetration,
- low quiescent current demand due to 125 kHz input stage (SMART KEY FOB),
- less sensitive for detuning compared to higher frequency.

For the down-link from the SMART KEY FOB to the vehicle, the standard radio frequency (RF) is used (similar to the classic remote control functions) with FSK modulation.

1.3 System Overview / Block Diagram

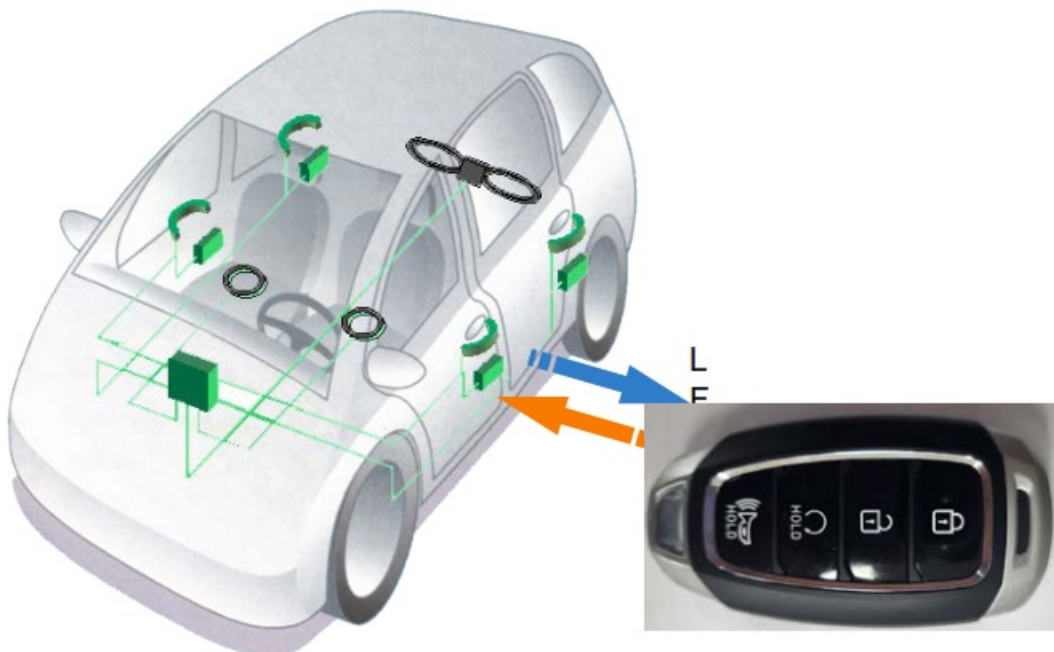

- ▼ ECU sends LF challenge via exterior antenna
- ▼ ID tag sends identification code to RF receiver
- ▼ Doors are unlocked automatically
- ▼ User pulls open the door

Figure 1: Principle of Communication

Editor: KS.Kim	Document name	Project code
Version: 1.0 ECO / DF No. Jul. 22. 2022 File:	Identification No : Document No.	Page 4/ 6

Smart Key Fob button operation



You can lock, unlock, trunk and hold your vehicle with this remote transmitter.

Lock

- When you push this button, all the doors will be locked.
- You can not lock any of the doors with this remote transmitter if any door is open or the key is in the fob holder.

Unlock

- When you push this button, all the doors will be unlocked.
- You can not unlock any of the doors with this remote transmitter if any door is open or the key is in the fob holder.

HOLD(Trunk)

- When you push this button and hold more than 1 second, the trunk will be opened.

Panic

- When you push this button for about 1second, Horn will alarm

Editor: KS.Kim	Document name	Project code
Version: 1.0 ECO / DF No. Jul. 22. 2022 File:	Identification No : Document No.	Page 5/ 6

FCC/IC Compliance Statement

FCC Compliance Statement.

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions :

1. This device may not cause harmful interference, and.
2. This device must accept any interference received, including interference that may cause undesired operation.

Do Not

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void.



user's authority to operate the equipment.

IC Compliance Statement.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Editor: KS.Kim	Document name	Project code
Version: 1.0 ECO / DF No. Jul. 22. 2022 File:	Identification No : Document No.	Page 6/ 6



Documents / Resources

	Continental SVI-QXMFGE04 Token and Token Plus Fob [pdf] User Manual QXMFGE04, SY5QXMFGE04, SVI-QXMFGE04 Token and Token Plus Fob, SVI-QXMFGE04, Token and Token Plus Fob
--	--