



Continu us P101 Pure Control Remote User Guide

[Home](#) » [continuu-us](#) » Continu us P101 Pure Control Remote User Guide 

Contents

- [1 Continu us P101 Pure Control Remote](#)
- [2 CONFIRM FIRST](#)
- [3 AUTOMATIC SEARCH](#)
- [4 LEARNING MODE](#)
- [5 Remote Quick List](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Continu us P101 Pure Control Remote



Thank you for purchasing a P101 Pure Control Remote from Continuuus. Follow the instructions to set up your PC101 Pure Control Remote to work with your television. For more support, visit us online at www.continu.us or contact our customer support line at (855) 423-2181 for help programming your remote.

CONFIRM FIRST

- Your PC101 remote control has two fresh AAA batteries properly installed.
- To use the learning mode, you will need another remote that currently works with your TV. Ensure that it has working batteries.
- In its default setting, the PC101 can control RCA Healthcare Televisions.

AUTOMATIC SEARCH

The automatic search function will cycle your remote through common TV remote codes. This is the easiest method of programming your remote, however; it will not work with all TVs.

1. Ensure that your TV is powered on.
2. Press and hold the 'Power' and 'OK' buttons until the light turns solid. Release both buttons.
3. If your TV powers off, immediately press the 'Mute' button. The remote will save the proper code.

QUICK SEARCH

The fast search function will search through common TV remote codes incrementally as you press the 'CH+' button. This method of programming your remote will not work with all TVs.

1. Ensure that your TV is powered on.
2. Press and hold the 'Mute' and 'CH+' buttons until the light turns solid. Release both buttons.
3. Press the 'CH+' or 'CH-' button. Each time you press it, it will cycle to the next TV remote code.
4. If you press 'CH+' for longer than one second, the remote will begin to cycle automatically.
5. When the channel on your TV changes, press 'CH+' or 'CH-' to fine-tune. When you reach the correct code, press the 'Mute' button to save it.

LEARNING MODE

The PC101 can learn codes from other remotes.

1. Find a remote that works with your TV.
2. Press and hold the 'CHt and 'VOLt buttons until the light turns solid. Release both buttons when you press it, it will cycle to the next TV remote code.
3. Point the front of the PC101 at the front of your teaching remote. Keep both remotes within 2-3 inches of each other.
4. Press a function key on the teaching remote. The indicator light on the PC101 will flash. Press and hold the corresponding key on the PC101 for two seconds. The indicator light will flash three times, and then remain lit
5. Repeat step 4 for any function you wish the PC101 to learn.
6. When you are finished, press and hold the 'CHt' and 'VOL-. The indicator light will go dark and the codes will be saved with your TV. Ensure that it has working batteries.
7. In its default setting, the PC101 can control RCA Healthcare Televisions. If you have one of these brands, test the remote. It may not need additional programming.

Note: During the learning process, if no key is pressed within 25 seconds, the learning process will exit without saving.

MANUAL SETUP

1. Press and hold the 'Power and 'Mute" buttons until the red indicator light stays solid. Release both buttons.
2. Input the four-digit code for your brand of TV (listed below). If the code is valid, the indicator light will go dark. If the code is invalid, the indicator light will flash four times, and the manual setup will exit.
3. Test the PC101 with your TV. If it doesn't work, repeat the process with another code.

RESET TO DEFAULT SETTINGS

1. Press and hold the 'Power and 'Mute' buttons until the red indicator light stays solid. Release both buttons.
2. Press the 'Mute' button. The remote will be reset.

Remote Quick List

Brand	Code			
			CHANGHONG	1003
RCA Healthcare TV – Bed	1 1362		CITIZEN	1304 1032 1114 1259 1299 1301 1303
RCA Healthcare TV – Bed	2 1363		CLAIRTONE	1306
RCA Healthcare TV – Bed	3 1364		COMCAST	1368
RCA Hospital TV – Bed	1 1477		CONCERTO	1301

RCA Hospitality TV – Bed	2 1478		CONTEC	1019 1306
RCA Hospitality TV – Bed	3 1479		CRAIG	1019
RCA Hospitality TV – Bed	4 1480		CROSLEY	1034
iView	1489		CROWN	1085 1107 1167 1002 1019 1114 1302
LG Hospitality TV	1022		CURTIS MATHES	1220 1008 1009 1010 1021 1033 1034 1072 1114 1299 1301 1304 1344 1355
Remote List			CXC	1019
Brand	Code		DAEWOO	1033 1032 1114 1120 1218 1301 1019 1002
ACTION	1019		DAYTRON	1114 1301
ADMIRAL	1048 1298 1299 1008 1015 1027 1072 1259 1346		DENON	1009
			DISHNETWORK	1369
ADVENT	1257 1278 1002 1034		DIRECTV RC50	1366
AIKO	1165 1032		DIRECTV RC50	1367
AIWA	1019 1024		DUMONT	1087 1098 1015 1301
AKAI	1204 1216 1217 1255 1301 1010		DURABRAND	1020 1081 1113 1141 1348
AKIO	1076 1082 1012 1032 1033 1304		DYNEX	1260 1261 1279 1278
AOC	1250 1251 1252 1253 1254 1301 1306		ELECTROBAND	1002 1306
APEX DIGITAL	1120 1269		ELECTROHOME	1114

AUDIOVOX	<i>1019 1020 1032 1033 1120</i>		ELEMENT	<i>1281 1282 1283 1284</i>
BELCOR	<i>1301</i>		EMERSON	<i>1013 1026 1062 1087 1199 1014 1019 1020</i>
BLOOMINGDA LE	<i>1459</i>			<i>1021 1023 1027 1033 1038 1114 1198 1259</i>
				<i>1298 1301 1303 1306 1341 1343</i>
BELL & HOWE LL	<i>1021 1299</i>		ENVISION	<i>1250 1251 1252 1253 1254</i>
BRADFORD	<i>1019</i>		FISHER	<i>1021 1317 1060 1075 1077 1106 1112 1113</i>
BROCKWOOD	<i>1301</i>			<i>1180</i>
BROKSONIC	<i>1019 1026 1027 1028 1029 1031 1033</i>		FUJITSU	<i>1314 1320 1317</i>
	<i>1043 1067 1071 1074 1259 1299 1302</i> <i>1308 1164</i>		FUNAI	<i>1012 1013 1019 1067 1198 1199 1298</i>
CANDLE	<i>1301 1076</i>		FUTURETECH	<i>1019</i>
CELEBRITY	<i>1002</i>		GE	<i>1007 1008 1010 1088 1120 1015 1017 1018</i>
CELERA	<i>1267 1269 1003</i>			<i>1031 1033 1043 1072 1081 1301 1305 1317</i> <i>1347 1355</i>

Brand	Code		MIDSOUTH TV 1/TV 2/ TV 3	<i>1460 1461 1462</i>
GFM	<i>1013 1198 1199</i>		MILLROCK	<i>1194</i>
GIBRALTER	<i>1015 1301</i>		MITSUBISHI	<i>1006 1046 1065 1082 1287 1 301 1059</i>
GOLDSTAR	<i>1044 1097 1183 1114 1301 1028</i>			<i>1072</i>
GRUNDY	<i>1019 1298</i>			
			MITSUI	<i>1023 1002 1019 1020 1038 1 142 1218 1341</i>

HAIER	1348 1219 1221 1267 1268 1269 1270 1271 1272 1289		1343
HALLMARK	1301	MOTOROLA	1072 1305
HARVARD	1019	MTC	1019 1114 1300 1301 1304 1 306
HCI	1196 1197	MULTITECH	1019
HITACHI	1009 1025 1089 1021 1234 1266 1 083 1111		
	1114 1001 1172 1299 1301 1309 1 310	NAD	1003 1301 1344
HISENSE	1126 1130 1141 1154 1157 1169 1290	NEC	1321 1095 1301 1305 1259 1 340
HP	1249		
HYUNDAI	1020 1021 1108 1148 1289	NIKKO	1003 1015 1021 1032 1301
ILO	1233 1349 1352	NOBLEX	1021 1066 1068 1084 1085 1 093 1117 1158
INFINITY	1034		1163 1164 1171 1173 1175 1 177
INSIGNIA	1255 1256 1257 1258 1259 1260 1 261 1277 1278 1279 1280	NOSHI	1316
INTEQ	1015	NTC	1032
JBL	1034	OLEVIA (LCD)	1327 1202
JCB	1002		
JC PENNEY	1003 1008 1114 1301 1304 1316 1317 1347	OLIVIA	1200 1201 1202 1203 1327
	1355	ONWA	1019
JVC	1031 1259 1005		
KEC	1019	OPTIMUS	1014 1021 1344
KENWOOD	1002 1301	OPTONICA	1072 1340 1346
KOLIN	1200 1201 1202 1203	ORION	1278 1026 1259 1298
KONKA	1038 1062 1086 1218 1255 1258 1 350		

KTV	1002 1019 1032 1114 1298 1302 1303 1306		PANASONIC	1014 1069 1021 1023 1030 1 031 1072 1229 1230 (ID) 1301 1304 13 05 1340 1346
LG	1022 1011 1044 1301 1183 1001 1358		PDI	1183 1184 1185 1186
	(BED1) 1359 (BED2) 1360 (BED3) 1361 (BED4) 1299 1015		PHILCO	1019 1020 1025 1032 1033 1 002 1009 1034 1038 1045 1052 1072 1 076 1114
LOGIK	1148 1153 1155 1299			1259 1301 1305 1306 1317 1 074 1086 1341
LUXMAN	1301			1343
LXI	1003 1008 1015 1021 1034 1072 1301 1355		PHILIPS	1001 1005 1016 1339 1034 1 012 1047 1050 1051 1345 1053 1057 1 066 1067
MAGNAVOX	1034 1076 1114 1298 1301 1306 1 317 1325			1184 1187 1213 1214 1215 1 222 1252 1325
MAJESTIC	1034 1301		PILOT	1114 1301
MEI	1306		PIONEER	1010 1301 1309 1344
MEMOREX	1182 1188 1270 1014 1021 1259 1 298 1299 1301 1304		POLAROID	1188 1189 1205 1206 1207 1 208 1209 1210 1211 1330
MGA	1301		POLOROID	1255 1258 1259 1278 1353
MIDLAND	1008 1015 1114 1317 1355		PORTLAND	1002 1032 1033 1114 1301

Brand	Code		SUPERSONIC	1019 1285
PRIMA	1002 1048 1260		SYLVANIA	1198 1199 1012 1013 1034 11 14 1301 1306
PRISM				1317
	1034		SYMPHONIC	
				1198 1199 1012 1013 1019
PROSCAN	1008 1031 1248 1301 1355		SYNTAX	
				1200 1201 1202 1203
PROTON				

	1301		TANDY	1072
PROVIEW	1281 1282 1283 1284		TATUNG	1305
PULSAR	1015 1301		TECHNICOLOR	1370 1371 1372
QUASAR	1014 1031 1305 1340 1346		TECHNICS	1014 1015 1031
RADIO SHACK	1002 1008 1019 1021 1114 1301 1340 1346 1355		TECHWOOD	1032 1298 1301
RCA	1007 1008 1017 1018 1115 1120 1297 1301 1305 1309 1316 1317 1010 1033 1072 1090 1344 1355 1356 1357		TEKNIKA	1019 1032 1034 1114 1298 1299 1301 1304
			TMK	1027 1301
RCA HE/CE/CE TV1/TV2/TV3	1362 (BED 1) / 1363 (BED 2)/ 1364 (BED 3)		TOSHIBA	1003 1039 1049 1072 1174 1232 1288 1304 1321 1021
REALISTIC	1019 1021 1114 1301 1340 1346		TRUTECH	1191 1192 1193
RHAPSODY	1306		VICTOR	1005
ROOMCOX	1354		VIDTECH	1301
RUNCO	1351		VIEWSONIC	1195 1262 1263 1264 1265 1266 1251 1273 1274 1275 1276
SAMPO	1114 1301		VIORE (LCD)	1145
SAMSUNG	1010 1088 1042 1066 1068 1074 1078 1114 1301 1304 1312 1315 1002		VIZIO	1187 1189 1190
SANSUI	1090 1122 1123 1137 1259 1278 1291		WARDS	1003 1034 1298 1299 1301 1317 1340 1344 1346 1347
SANYO	1021 1060 1075 1077 1106 1112 1113 1180 1285 1286 1319 1019 1317		WESTINGHOUSE	1002 1223 1224 1225 1226 1227 1228

SCOTT	1019 1026 1114 1298 1301		WHITE WESTING HOUSE	1033 1259 1298
SHARP	1004 1040 1072 1095 1114 116 0 1161 1287		YAMAHA	1301 1318
	1298 1301 1340 1346		ZENITH	1015 1252 1032 1076 1259 12 99 1301
SHOGUN	1019 1298 1301 1304		ZONDA	
				1028 1033 1057 1072 1081 11 14 1289 1301
SIGNATURE (20 00)	1027 1072 1299 1301			1303 1304 1340 1342
SIMPSON	1317			
SONY	1002 1311 1212			
SOYO	1235 1236 1237 1238 1239 1240 1241 1242 1243 1244 1245 1246 1247			
SQUAREVIEW	1012			
SSS	1019 1301			
STARLITE	1019			

TH STREET INDIANAPOLIS, INDIANA 46278 (855) 423-2181 WWW.CONTINU.US 2022 CONTINUE US ALL RIGHTS RESERVED

Documents / Resources

	Continuo us P101 Pure Control Remote [pdf] User Guide P101 Pure Control Remote, P101, Pure Control Remote, Control Remote, Remote
---	---

References

- WWW.CONTINU.US
- WWW.CONTINU.US

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)